



Quick start guide

# **E2912B/E1112B** **2.4 GHz cordless telephone/ answering system with caller ID/call waiting**



# Installation and setup

After installing the battery, you may be able to make and receive short calls. For best performance, place the handsets in the telephone base or the charger and charge for 16 hours before use.

You can keep the battery charged by returning the handsets to the telephone base or the charger after use. When the battery is fully depleted, a recharge takes about 12 hours. The average talk time on a fully charged battery is about eight hours, and the standby time is approximately five days. Actual battery life depends on usage conditions and age of battery.



**1.** Insert the plug as indicated. Be sure to securely insert the plug, making sure it matches the color-coded label inside the battery compartment.

**2.** Place the battery pack and wires inside the compartment.

**3.** Slide the battery compartment cover up until it clicks.



**NOTE:** Under normal conditions, the battery should last around one year. This may vary depending on usage.



**Caution:** Use only the supplied rechargeable battery or replacement battery (model 27910, part number 89-0099-00-00) or equivalent. To order a replacement battery, visit our website at **[www.telephones.att.com](http://www.telephones.att.com)** or call **1 (800) 222-3111**. In Canada dial **1 (866) 288-4268**.

 
 
Choose a central location close to a telephone jack and an electrical outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or mounted on a standard wall plate. For optimum range and better reception, place the telephone base in a high and open location.

## **Avoid placing the telephone base too close to:**

- Communication devices such as: personal computers, computer routers, television sets, VCRs, wireless routers (wireless broadband, wi-fi, or 802.11) or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperatures.
- Mechanical vibration or shock such as on top of the washing machine or work bench.

# Installation and setup

1. Plug one end of the telephone line cord into the telephone jack at the bottom of the telephone base.
2. Plug the small end of the larger power adapter into the power jack at the bottom of the telephone base.
3. Route cords through slots.
4. Plug the large end of the larger power adapter into an electrical outlet not controlled by a wall switch.
5. Plug the other end of the telephone line cord into a telephone wall jack.
6. Plug the small end of the smaller power adapter into the jack on the underside of the charger, then route the cord through the slot as shown.

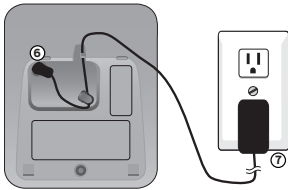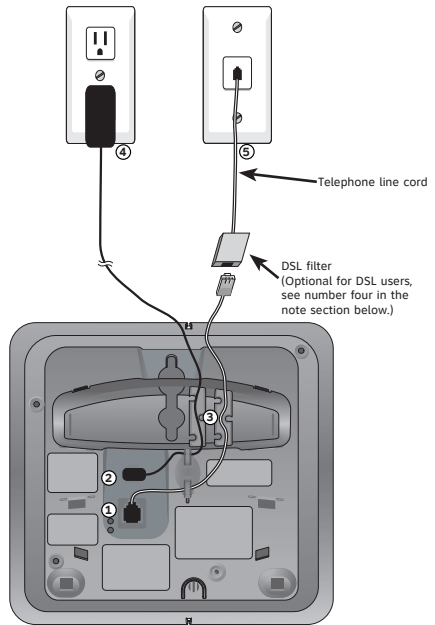

7. Plug the large end of the smaller power adapter into an electrical outlet not controlled by a wall switch.



You may be able to make and receive short calls. For best performance, place the handset in the telephone base or charger to charge for at least 16 hours before first use.



## NOTES:

1. Use only the power adapter supplied with this product, or equivalent. To order a replacement power adapter, visit our website at [www.telephones.att.com](http://www.telephones.att.com), or call **1 (800) 222-3111**. In Canada dial **1 (866) 288-4268**.
2. Be sure to use an electrical outlet not controlled by a wall switch.
3. This power unit is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
4. If you receive high speed internet through your telephone line (commonly referred to as DSL), and you are experiencing interference during telephone conversations and/or your caller ID features are not functioning properly, install a DSL filter to the telephone line between the telephone base and the telephone wall jack. Contact your DSL service provider for a DSL filter.

# Quick reference guide

## Cordless handset

### ▼ CID/-VOLUME

Press to scroll down while in menus. Press to display caller ID information. While entering names or numbers, press to move the cursor to the left. Press to decrease the listening volume while on a call.

### PHONE/FLASH

Press to make or answer a call. During a call, press to receive an incoming call if call waiting is activated.

### MUTE/DELETE

While on a call, press to mute microphone. While reviewing the call log, press to delete an individual entry, or press and hold to clear the caller ID log. While entering or editing a name or number, press to delete a character.

### 🔊 SPEAKER

Press to activate handset speakerphone. Press again to resume normal handset use.







## Feature menu

☐ Shows a highlighted item



Menu

### Feature menu

-  DIRECTORY
-  CALL LOG
-  SETTINGS
-  SOUNDS
-  DISPLAY
-  RINGER VOLUME

### MENU/SELECT

Press to display the menu. Once in the menu, press to select an item or save an entry or setting.

### DIR ▲/VOLUME+

Press to scroll up while in menus. Press to display directory entries. While entering names or numbers, press to move the cursor to the right. Press to increase the listening volume while on a call.

### 🔇 OFF/CLEAR

During a call, press to hang up. While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display. While predialing, press to delete digits.

### REDIAL/PAUSE

Press to view redial memory. While entering numbers, press and hold to insert a dialing pause.

### INT

Press to initiate an intercom conversation between handsets. Press to transfer a call.

### Using menus

Press ▼ **CID/-VOLUME** or **DIR ▲/VOLUME+** to scroll through menu items.

Press **MENU/SELECT** to select or modify a highlighted item.

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display.



**NOTE:** For more information, please refer to the user's manual.

# Quick reference guide

## Telephone base

### CHARGE/IN USE

- Flashes when another telephone on the same line or one of the handsets is in use.
- Flashes when the answering system is answering an incoming call.
- Flashes quickly when there is an incoming call.
- On steady when the handset is properly positioned to charge in the telephone base.



### HANDSET LOCATOR

Press to make handsets beep.

### SETUP

Press to review or change answering system options.

### MESSAGE COUNTER

Number of messages (or during playback, message number currently playing).

### CLOCK

Press to review or set clock.

### X/DELETE

Press to delete message currently playing; **press and hold** to delete all old messages.

### ◀/REPEAT

Press to repeat message; press **twice** to play previous message.

### ▶/PLAY/STOP

Press to start or stop message playback.

### ANNC

Press to review or record announcement; press again to quit.

### RECORD

Press to record a memo or after pressing **ANNC** to record an outgoing announcement.

### ANSWER ON

 
Press to turn answering system on or off.

### ▲/VOLUME

Press to adjust playback volume.

### ▶/SKIP

Press to skip message.

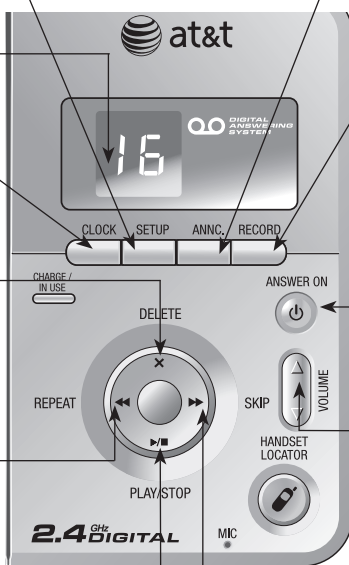



[www.telephones.att.com](http://www.telephones.att.com)