



at&t

Quick start guide

**E5827**

**5.8 GHz corded/cordless  
telephone/answering  
system with caller ID/  
call waiting**



# Battery installation & charging

After installing the battery, you may be able to make or receive short calls. For best performance, place the handset in charger to charge for 16 hours before use.

You can keep the battery charged by returning the handset to charger after use. When the battery is fully depleted, a recharge takes about 12 hours. The average talk time on a fully charged battery is about five hours, and the standby time is approximately six days. Actual battery life depends on usage conditions and age of battery.



1. Insert the plug as indicated. Be sure to securely insert the plug, making sure that it matches the color-coded label inside the battery compartment.

2. Place the battery and wires inside the compartment.

3. Slide the battery compartment cover up until it clicks.



**NOTE:** Under normal conditions, the battery should last approximately one year. This may vary depending on usage.



**Caution:** Use only the supplied rechargeable battery, replacement battery 2422 (SKU 23402, part number 89-0047-00-00) or equivalent. **To order a replacement battery, visit our website at [www.telephones.att.com](http://www.telephones.att.com) or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.**

Choose a central location close to a telephone jack and a electrical outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or mounted on a standard wall plate. For optimum range and better reception, place the telephone base in a high and open location.

## **Avoid placing the telephone base too close to:**


- Communication devices such as: personal computers, computer routers, television sets, VCRs, wireless routers (wireless broadband, wi-fi, or 802.11) or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of the washing machine or work bench.

# Telephone base installation

**1.** Plug the small end of the larger power adapter into the power jack at the bottom of the telephone base.


**2.** Plug one end of the telephone line cord into the telephone jack at the bottom of the telephone base.


**3.** Route cords through slots.

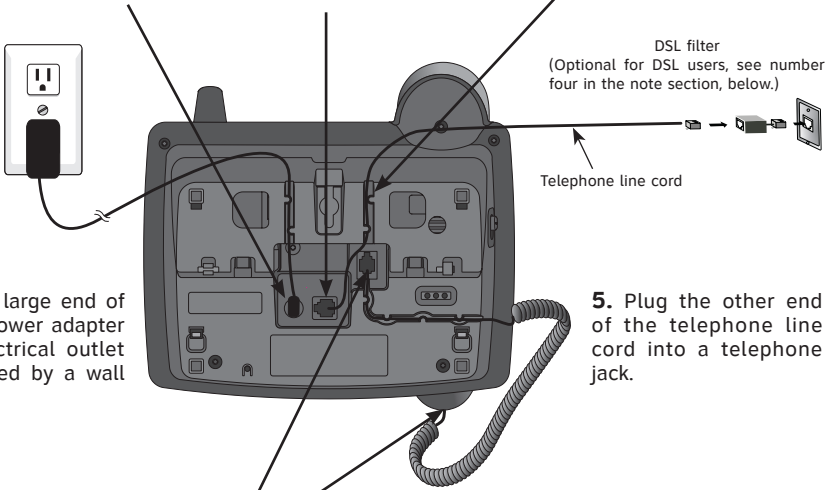

**4.** Plug the large end of the larger power adapter into an electrical outlet not controlled by a wall switch.

**5.** Plug the other end of the telephone line cord into a telephone jack.

**6.** Plug one end of the coiled handset cord into the  jack at the bottom of the telephone base. Plug the other end of the coiled cord into the base handset.

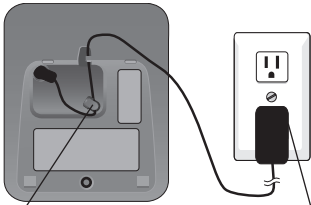

**7.** Plug the small end of the smaller power adapter into the jack on the underside of the charger, then route the cord through the slot as shown.

**8.** Plug the large end of the smaller power adapter into an electrical outlet not controlled by a wall switch.



**9.** You may be able to make or receive short calls. For best performance, place the handset in the charger to charge for at least 16 hours before first use.



## NOTES:

1. Use only the power adapter supplied with this product or equivalent. **To order a replacement power adapter, visit our website at [www.telephones.att.com](http://www.telephones.att.com), or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.**
2. Be sure to use an electrical outlet not controlled by a wall switch.
3. This power adapter is intended to be correctly oriented in a vertical or floor mount position.
4. If you receive high speed internet through your telephone line (commonly referred to as DSL), and you are experiencing interference during telephone conversations and/or your caller ID features are not functioning properly, install a DSL filter to the telephone line between the telephone base and the telephone wall jack. Contact your DSL service provider for a DSL filter.

# Quick reference guide

## Cordless handset

### SELECT

Press to store a programming option, or to create a directory entry in memory.

### ▼CID/-VOLUME

When phone is idle, press ▼CID to display caller ID information. While entering names or phone numbers, press to move the cursor to the left. While programming, press to change menu item or value. During a call, press ▼CID to adjust listening volume.

### PHONE/FLASH

Press to make or answer a call. During a call, press to receive an incoming call if call waiting is activated.

### HOLD

Press to place a call on hold. Press again to resume your call.

### DIR▲/VOLUME+

When phone is idle (not in use), press DIR▲ to display directory entries. While entering letters in names, press to advance or press twice to enter space. While programming, press to change menu item or value. During a call, press DIR▲ to adjust listening volume.

### OFF/CLEAR

During a call, press to hang up. While using menus, press to cancel an operation, or exit the menu display.

### INT/DELETE

While phone is idle, press to page base or **press and hold** to delete all caller ID entries. While a caller ID entry is displayed, press to delete displayed entry.

### REDIAL/PAUSE

Before dialing, press to display the last number called. While dialing or entering numbers into your directory, press to insert a four-second dialing pause.

### MENU/CHAN

Press to customize the handset's operation. During a call, press to switch to another channel if there is interference.

## Feature menu



### Feature menu

DIRECTORY  
SPEED DIAL  
RINGER  
DATE/TIME  
LANGUAGE

### Using menus

Press ▼CID/-VOLUME or DIR▲/VOLUME+ to scroll through menu items.

Press SELECT to select or modify a highlighted item.

Press OFF/CLEAR to cancel an operation, or exit the menu display.



**NOTE:** For more information, please refer to the user's manual.

# Quick reference guide

## Telephone base

**RINGER VOLUME:** Adjust switch on side of base (off, low, high).

**CONTRAST:** Press to adjust screen contrast.

- **CLEAR:** While using menus, press to cancel an operation, or exit the menu display.
- **▼CID:** Press when phone is idle to display caller ID information. While entering numbers or letters, press to move the cursor to the left.
- **SELECT:** Press to store a programming option, or to create a directory entry in memory.
- **DIR▲:** Press when phone is idle to display directory entries. While entering or modifying names, press to advance cursor.
- **DISP DIAL:** Press to dial number currently displayed.



- **INTERCOM/CID DEL:** Press to delete displayed caller ID entry. While phone is idle, press to page handset, or **press and hold** to delete all caller ID entries.
- **MENU:** Press to customize the telephone's operation.
- **FLASH:** During a call, press to receive an incoming call if call waiting is activated.
- **REDIAL/PAUSE:** Before dialing any numbers, press to display the last number called.  
While dialing or entering numbers into your directory, press to insert a four-second dialing pause.

- **CLOCK:** Press to review or set clock.
- **SETUP:** Press repeatedly to hear setup options.
- **ANNC.:** Press to review or record outgoing announcement; press again to quit.
- **RECORD:** Press to record a memo or after pressing **ANNC.** to record an outgoing announcement.
- **▶PLAY/STOP:** Press to start or stop message playback.
- **DELETE:** Press to delete message currently playing, hold to delete all old messages.
- **ⓞANSWER ON:** Press to turn answering system on or off.
- **◀REPEAT:** Press to repeat message, press **twice** to play previous message.
- **▶SKIP:** Press to skip message.

- **HOLD:** Press to place call on hold. Press again to resume call.
- **◆VOLUME:** During a call, press ▲ or ▼ to adjust listening volume.
- **MUTE:** Press to silence microphone, press again to resume your conversation.
- **🔊SPEAKER:** Press to activate the ClearSpeak™ dial-in-base speakerphone. The ClearSpeak™ speakerphone allows clear, hands-free communications when you are positioned near the telephone base.



**NOTE:** For more information, please refer to the user's manual.



[www.telephones.att.com](http://www.telephones.att.com)