



at&t



Proud Sponsor

Quick start guide

TL92278/TL92328/TL92378
DECT 6.0 cordless
telephone/answering system
with BLUETOOTH®
wireless technology



Installation

You must install and charge the handset battery before using the cordless handset.



See pages 4-5 for easy instructions.

Install the telephone base close to a telephone jack and a power outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or vertically mounted on the wall. For optimum range and better reception, place the telephone base in a central and open location.

You may hear interference if your cellular phone is too close to the telephone base during a **CELLULAR** call. Make sure that your Bluetooth enabled cellular phone is between one to 12 feet away from the telephone base in order to maintain a clear and consistent connection between your Bluetooth cell phone, telephone base and cell tower.

If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line(s), you must install a DSL filter between the telephone base and the telephone wall jack (see the following page). The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Your product may be shipped with a protective sticker covering the handset or telephone base display - remove it before use.

For customer service or product information, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Avoid placing the telephone base too close to:

 
- Communication devices such as: television sets, VCRs, or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of the washing machine or workbench.

Telephone base installation

Install the telephone base as shown below. Make sure that the electrical outlet is not controlled by a wall switch.

If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line(s), you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

The telephone base is set for desktop use. If you want to change to wall mounting position, you will need to install the supplied wall mount bracket to the telephone base, refer to the user's manual for details.

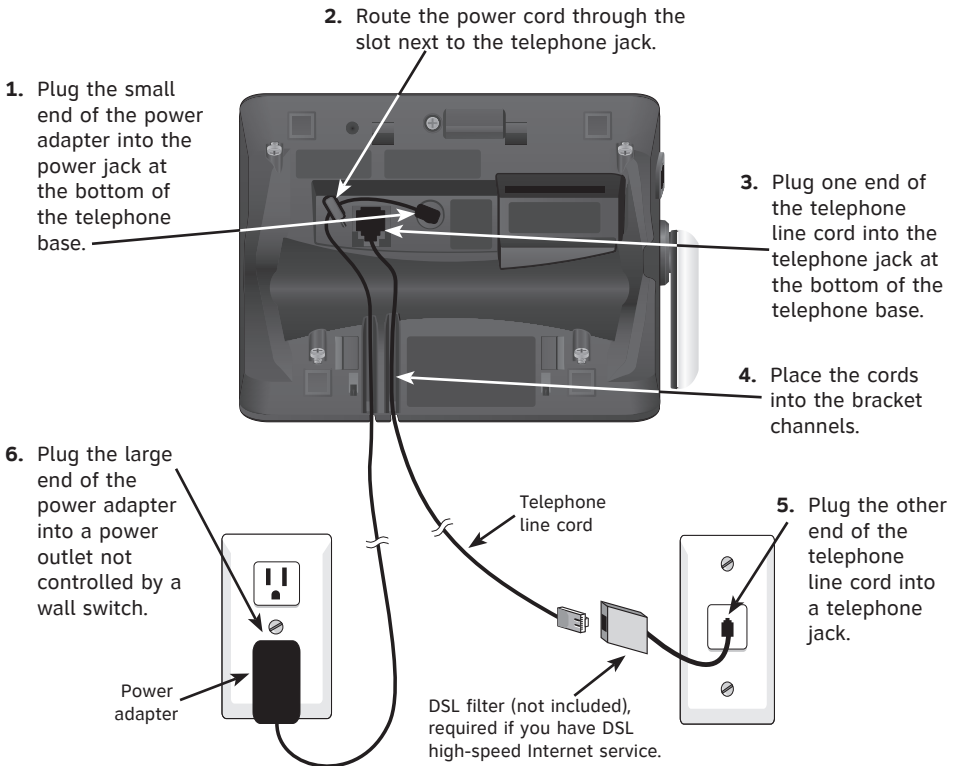


7. Raise the antenna.



Charger installation

 Plug the power adapter into an electrical outlet not controlled by a wall switch.

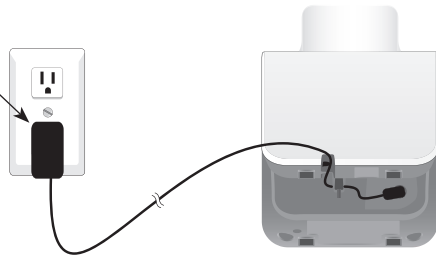



IMPORTANT INFORMATION

1. Use only the power adapter(s) supplied with this product. To order a replacement power adapter, visit our website at **www.telephones.att.com**, or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.
2. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Battery installation & charging

Install the battery as shown on the next page. Once you have installed the battery, the screen indicates the battery status (see table below). If necessary, place the handset in the telephone base or charger to charge the battery. For best performance, keep the handset in the charger when not in use. The battery is fully charged after 16 hours of continuous charging. See the table on **Technical specifications** page of the user's manual for battery operating times.

If the screen is blank, you need to charge the handset without interruption for at least 10 minutes to give the handset enough charge to use the telephone for a short time. The screen shows **LOW BATTERY** and the backlight is off until you have charged the battery without interruption for at least one hour. The following table summarizes the battery charge indicators and actions to take.

Battery indicators	Battery status	Action
The screen is blank.	Battery has no charge and the handset cannot be used.	Charge without interruption until the screen shows LOW BATTERY (at least 10 minutes).
The screen shows PLACE IN CHARGER and  flashes.	Battery has very little charge and the handset cannot be used.	Charge without interruption until the screen shows LOW BATTERY (at least four minutes).
The screen shows LOW BATTERY and  flashes.	Battery has enough charge to be used for a short time.	Charge without interruption until the screen shows HANDSET X (at least one hour).
The screen shows HANDSET X .	Battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.



NOTE: If you are on a phone call in low battery mode, you hear four short beeps every minute.

 
Battery installation & charging

Install the battery as shown below. After installing the battery, you can make and receive short calls. Place the handset in the telephone base or charger when not in use. For optimal performance, charge the handset battery for at least 16 hours before use. See the table on page 95 of the user's manual for battery operating times.



Step 1

Press the depression and slide the battery compartment cover downwards (if necessary).

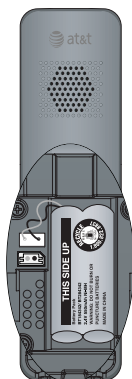

Step 2

Plug the battery securely into the connector inside the handset battery compartment, matching the color-coded label. Insert the supplied battery with the label **THIS SIDE UP** facing up as indicated.



Step 3

Align the cover flat against the battery compartment cover, then slide it upwards until it clicks into place.

Step 4

Charge the handset by placing it face up in the telephone base or charger. The **CHARGE** light will be on when charging.



IMPORTANT INFORMATION

Use only the supplied rechargeable battery or replacement battery (model BT8001). To order, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Bluetooth setup



NOTE: Only one Bluetooth device can be paired with the telephone base at a time.




To use a Bluetooth-enabled cellular phone with your telephone, you must first pair and connect your Bluetooth cellular phone with the telephone base.

Pairing a device

Before you begin, make sure that your Bluetooth-enabled cellular phone is not connected to any other Bluetooth device. Refer to your cellular phone user's manual to learn how to search for or add new Bluetooth devices.

To pair and connect a cellular phone:

1. Press and hold the **Bluetooth** button on the telephone base until it is flashing. The Bluetooth feature will be activated.
2. Using your cellular phone, turn on the Bluetooth feature and search for a new device.
3. Once your cellular phone has found the **AT&T DECT 6.0** telephone base, select it.
4. Using your cellular phone, enter the **PIN** of the telephone base (the default PIN is **0000**) to continue the pairing process.

When a device is successfully connected, the  status icon will display on the cordless handset screen, and the light of the **Bluetooth** button on the telephone base will be on steadily.

Auto connection

Once you have paired a device with the telephone base, the pairing information is stored in the telephone base. If the paired device becomes disconnected, the telephone base will automatically search and re-connect to that device. If the connection does not resume in a minute, you will need to re-connect to that device manually, refer to the section below for details.

Manual connection

To manually re-connect a paired device, make sure the Bluetooth feature is turned on in your cellular phone, select **AT&T DECT 6.0** from the paired device list in your cellular phone. Once the connection is established again, the **Bluetooth** button on the telephone base will turn back on.

Bluetooth setup

Turning off the auto connection


If you do not want the telephone base to re-connect to a paired device automatically after it is disconnected, you can turn off the auto connection feature manually. In order to turn off the auto connection, you will need to initiate a disconnection from the paired cellular phone; this will transmit a signal to the telephone base and disable the auto connection.

While the cellular phone is connected to the telephone base, find the cellular phone's Bluetooth device list and select **AT&T DECT 6.0** to manually disconnect the device. (If disconnection is not an option on your cellular phone, you may need to disable Bluetooth or unpair the telephone base.) Refer to your cellular phone's user's manual for instructions. The telephone base will not search and re-connect to this cellular phone until this feature is activated again.



NOTE: If the connection between the paired device and the telephone base does not resume by manually connecting the device on the paired device list, you will need to unpair or deregister the device from the cellular phone. Make sure the device is no longer on the paired list after deregistration; then follow the steps in **Pairing a device** on page 6 to start the pairing procedures again.

To resume the auto connection

To resume the auto connection between the paired device and the telephone base, you will need to connect the device manually. Make sure the Bluetooth feature is turned on in your cellular phone. Select **AT&T DECT 6.0** from the paired device list in your cellular phone to reconnect. If the connection is successfully resumed, the  status icon will display on the cordless handset screen, and the light of the **Bluetooth** button on the telephone base will be on steadily.

Replace a paired device

If you want to pair and connect a new device when there is already a device paired with the telephone base, press and hold the **Bluetooth** button on the telephone base until it is flashing, then start with step two of **Pairing a device** on page 6. If you do not pair a new device within two minutes, the **Bluetooth** light on the telephone base will turn off and the system will return to idle mode.

Quick reference guide - handset

CHARGE indicator

On when the handset is charging in the telephone base or charger.

DIR / CID

Press **DIR** to display directory entries.
Press to scroll up while in menus.
While entering names or numbers, press to move the cursor to the right.
Press to increase the listening volume when on a call.

 
Press **CID** to display caller ID history.
Press to scroll down while in menus.
While entering names or numbers, press to move the cursor to the left.
Press to decrease the listening volume when on a call.

REDIAL/PAUSE

Press to view redial memory.
While entering numbers, press and hold to insert a dialing pause.

HOME/FLASH

Press to make or answer a **HOME** call.
Flashes rapidly when there is an incoming **HOME** call.
Flashes slowly when a **HOME** call is on hold.
During a **HOME** call, press to receive an incoming call if call waiting is activated.

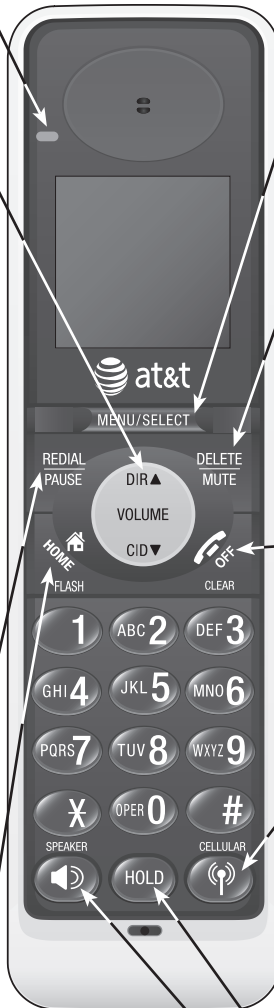

MENU/SELECT

Press to display the menu.
While in the menu, press to select an item or save an entry or setting.

DELETE/MUTE

During a call, press to mute microphone.
While reviewing the caller ID history, press to delete an individual entry, or press and hold to clear the caller ID history.
While predialing, press to delete digits.

OFF/CLEAR

During a **HOME** or **CELLULAR** line call, press to end the call.
While in a menu, press to cancel an operation, back up to the previous menu, or exit the menu display.

CELLULAR

Press to make or answer a **CELLULAR** call.
Flashes rapidly when there is an incoming **CELLULAR** call.
Flashes slowly when a **CELLULAR** call is on hold.
During a **CELLULAR** call, press to receive an incoming call if call waiting is activated.

SPEAKER

Press to turn on the handset speakerphone.
Press again to resume normal handset use.

 
HOLD

Press to put the **HOME** or **CELLULAR** call on hold.

Quick reference guide - handset

Feature menu

The > symbol highlights a menu item.

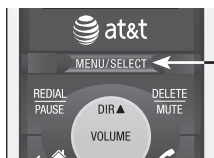


Feature menu

DIRECTORY
CALL LOG
INTERCOM
RINGER VOLUME
RINGER TONE
KEY TONE
LANGUAGE
CLR VOICE MAIL
HOME AREA CODE

Using menus

Press  or  to scroll through menu items.

Press **MENU/SELECT** to select or save changes to a highlighted menu item.

Press  **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display.

For complete instructions, please refer to the user's manual. If you are unable to find your manual, please visit www.telephones.att.com to read and/or download the manual.

 
Quick reference guide - telephone base

IN USE indicator

On when the handset is in use, when the answering system is answering an incoming call or when you are registering a handset.

Flashes when another telephone is in use on the same line, or when you are deregistering handset(s) from the telephone base.

Flashes quickly when there is an incoming call.

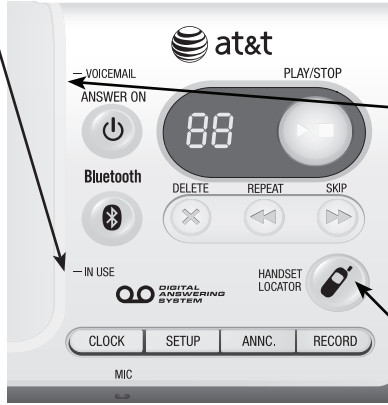

VOICEMAIL indicator

Flashes when you have new voicemail. Voicemail is a service offered by your local telephone company, and is different from answering system messages.

HANDSET LOCATOR

Press to make handsets beep so you can locate them.

MESSAGE COUNTER

Number of messages (or during playback, message number currently playing).

ANSWER ON

Press to turn the answering system on or off.

X/DELETE

Press to delete the message currently playing. Press twice to delete all old messages when the phone is not in use.

 
Bluetooth

Press and hold to enable the Bluetooth feature on the telephone base. On when the telephone base is paired and connected with a cellular phone. Flashes when the Bluetooth feature is activated and waiting for pairing and connection.

CLOCK

Press to review or set the clock.

Answering system functions

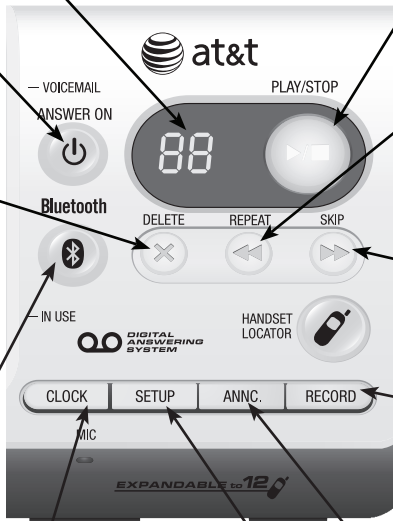

▶/■ PLAY/STOP

Press to start or stop message playback.

◀/REPEAT

Press to repeat a message. Press **twice** to play the previous message.

▶▶/SKIP

Press to skip a message.

RECORD

Press to record a memo or, after pressing **ANNC.** to record an outgoing announcement.

ANNC.

Press to review or record the outgoing announcement. Press again to end announcement playback or recording.

SETUP

Press to hear and change setup options.



Proud Sponsor

www.telephones.att.com

The *Bluetooth*[®] word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

© 2008-2009 Advanced American Telephones. All Rights Reserved.
AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to
Advanced American Telephones, San Antonio, TX 78219.
Printed in China. Issue 5 AT&T 09/09.