Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news.

TR1-2013
TR16-2013
TR17-2013
TR2-2013
TR26-2013
TR27-2013
مور ما مرامه مرم ا


BC

DECT 6.0 cordless telephone




vtech Abridged user's manual

Connect the power adapter to the telephone base and an electrical outlet not controlled by a wall switch.

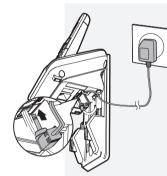

3. Align the grooves on the telephone base with the tabs on the wall mount bracket, and then slide it down until it clicks securely in place.

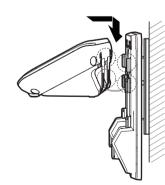



nstall and charge the battery

Install the battery Install the battery as shown below.

PNOTES

  Use only the adapters provided. • If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.



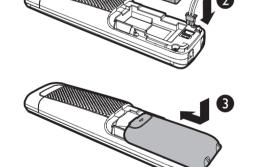

Charge the battery Place the handset in the telephone base or the



Once you have installed the battery, the handset LCD display indicates the battery status (see the table below). **P**NOTES

- For best performance, keep the handset in the telephone base or charger when not in use.
- The battery is fully charged after 12 hours of ontinuous charging.

Battery indicators	Battery status	Action
The screen s blank, or shows Put in charger and () flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
The screen shows Low pattery and [] lashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
The screen shows HANDSET X .	The battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.

Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

Please refer to the online Complete user's manual for a full set of installation and operation instructions at www.vtechphones.com.



Telephones identified with this go have reduced noise and nterference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the elecommunications Industry Association. Used under license.

 
The ENERGY STAR[®] program www.energystar.gov) recognizes and encourages the use of products that save energy and elp protect our environment. We are proud to mark this product with the ENERGY STAR[®] label indicating it meets the latest energy efficiency guidelines.




items. Save your sales receipt and original

packaging in the event warranty service is

What's in the box



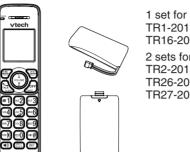


TR1-2013/ TR16-2013 2 sets for TR2-2013/ TR26-2013/ TR27-2013





bridged user'

   manual









sing the handset menu

- 1. Press MENU when the phone is not in use.
- 2. Press ▼ or ▲ until the screen displays the desired feature menu 3. Press **SELECT** to enter that menu.
- To return to the previous menu, press CANCEL
- To return to idle mode, press and hold CANCEL.

Configure your telephone

Set language

The LCD language is preset to English. You can select English, French or Spanish to be used in all screen displays

- 1. Press **MENU** when the handset is not in
- 2. Scroll to Settings, and then press SELECT
- 3. Scroll to choose English, Français or Español, and then press SELECT.
- 4. Press SELECT again to save.

Set date and time

- 1. Press MENU when the handset is not in
- 2. Scroll to **Set date/time**, and then press SELECT.
- 3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press SELECT.
- 4. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ∇ or \blacktriangle to choose AM or PM.
- 5. Press SELECT to save.

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily during a call.

- 1. During a call, press ™¥.
- 2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

 






- 1 Handset earpiece 2 – LCD display
- 3 MENU/SELECT Show the menu
- 4 OFF/CANCEL · Hang up a call.

- 5 ^{QUIET}#
- 6 INT



- After you install your telephone or power returns following a power outage, the handset or telephone will prompt you to set the date and time. Set date and time 1. Use the dialing keys (**0-9**) to enter the month (MM), date (DD) and year (YY). Then press SELECT.
- 2. Use the dialing keys (0-9) to enter the hour (**HH**) and minute (**MM**). Then press $\mathbf{\nabla}$ or \mathbf{A} to choose AM or PM

Press SELECT to save.

Check for dial tone:

lefore use

Press TALK . If you hear a dial tone, the installation is successful

If you do not hear a dial tone:

- · Make sure the installation procedures described above are properly done.
- It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/


VoIP service provider for more information

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays Out of range or no pwr at base. If there is a call while the handset is out of

range, it may not ring, or if it does ring, the call may not connect well when you press TALK. Move closer to the telephone base, and then press TALK to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

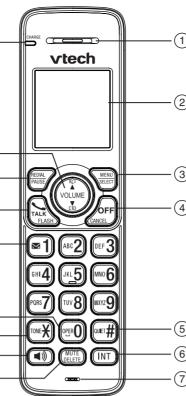

 While in a menu, press to select an item, or save an entry or setting.

- Silence the ringer temporarily while the
- handset is ringing Press and hold to erase the missed call dicator while the phone is not in use. · Press to return to the previous menu; or
- press and hold to return to idle mode, without making changes

· Press repeatedly to show other dialing options when reviewing a caller ID log entry.

 Press to start an intercom conversation or transfer a call (for multi-handset models only).

ephone operation

Handset control key panel: vtech





7 – Microphone

- MUTE/DELETE
- Mute the microphone during a call. · Delete digits or characters while using the dialing keys Silence the ringer temporarily while the

handset is ringing.

- Make or answer a call using the handset speakerphone During a call, press to switch between the speakerphone and the handset
- 10 TONE X
- While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily

Press to add a space when entering names

12 – 1 🔀

- Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or
- saving it to the directory · Press and hold to set or dial your voicemail

13 - TALK /FLASH

 Make or answer a home call. Answer an incoming home call when you hear
4 – Charging pole a call waiting alert

- REDIAL/PAUSE

- · Press repeatedly to review the redial list. · Press and hold to insert a dialing pause while entering a number. 15 – VOLUME/▲/᠑
- Review the directory when the phone is not in
- Increase the listening volume during a call. Scroll up while in a menu, or in the directory,
- caller ID log, or redial list. · Move the cursor to the right when entering numbers or names

VOLUME/▼/CID

- · Review the caller ID log when the phone is not in
- · Decrease the listening volume during a call.
- Scroll down while in a menu, or in the directory, caller ID log, or redial list
- Move the cursor to the left when entering numbers or names.

16 – CHARGE light

On when the handset is charging

Make a call Press T_{ALK} or \P), and then dial the telephone

number

Answer a call

Press TALK , ■), or any dialing key.

End a call

Press OFF on the handset, or put the handset to the base or charger.

Speakerphone

During a call, press ◄) on the handset to switch between speakerphone and normal handset use.

- During a call, press ▼/VOLUME/▲ on the handset to adjust the listening volume. **O**NOTE
- The handset earpiece volume setting and speakerphone volume setting are independent.

Mute

- The mute function allows you to hear the other party but the other party cannot hear you.
- 1. During a call, press **MUTE** on the handset or 2. Scroll to **Transfer**, and then press **SELECT**. telephone base. The screen displays Muted.
- Press MUTE again to resume the conversation. The screen displays Microphone ON.


Call waiting

- When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.
- Press FLASH to put the current call on hold and take the new call.
- Press FLASH to switch back and forth between calls.

Find handset

- Use this feature to find all system handsets. To start paging
- Press /FIND HANDSET on the telephone base. All idle handsets ring and display ** Paging **.
- To end paging:
- Press /FIND HANDSET again on the telephone base.

Telephone base overview

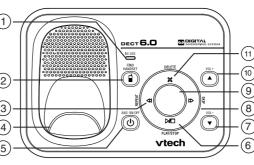

Charger overview

- Charging pole

┢║┾║┾║

VM

1/13

ANS ON

ECO

NEW

CHARGE

Display icons overview

charging.

charged.

vtech

The battery icon flashes when

The battery icon animates when

solid when the battery is fully

received from your telephone

The message number currently

playing and total number of

The ECO mode activates

s within range from the

There are new caller ID log

On when the handset speakerphone

elephone base or charger

3. To answer the intercom call, press TALK, (1), or

You can let the destination handset join

You can transfer the call. Press OFF. or

then connected to the outside call.

three-way conversation. Press and hold

place your handset back in the telephone

base or charger. Your handset displays

Transferred. The destination handset is

You can press INT to switch between the

outside call (Outside call displays) and

telephone base or charger. The outside

call continues with the original system

• To answer a call, press TALK . The intercom call

• To end the intercom call without answering

ends and the telephone continues to ring.

the outside call, press OFF. The intercom call

the intercom call (Intercom displays)

• The destination handset can end the

intercom call by pressing **OFF**, or

by placing the handset back in the

Answer an incoming call during an

If you receive an incoming call during an

Each handset stores the last 10 telephone

numbers dialed. When there are already 10

1. Press **REDIAL** when the handset is not in

2. Press ▼, ▲, or **REDIAL** repeatedly until the

When the desired redial entry displays, press

entries, the oldest entry is deleted to make room

com call, there is an ale

ends automatically.

any dialing key on the destination handset.

You can now have a private conservation

On when the handset is charging in the

elephone base

entries.

landset lights overview

is in use.

before transferring the call.

following options:

handset

intercom call

Redial list

for the new entry.

Review the redial list

Dial a redial list entry

Press TALK or I to dial.

DELETE.

Delete a redial list entry

desired entry displays

4. From this intercom call, you have the

you on the outside call in a

INT on the originating handset.

new/old messages recorded.

The answering system is turned

automatically to reduce power

consumption when the handse

the battery is charging.

The battery icon becomes

The handset ringer is off.

There are new voicemail

service provider.

the battery is low and needs

1 – IN USE light

- Flashes when there is an incoming call, or another telephone sharing the same line is in use.
- Flashes when handsets are being deregistered.
- On when the handset is in use or being registered.
- On when the answering system is answering a

2 – I/FIND HANDSET

• Press to page all system handsets.

3 - «/REPEAT

- Press to repeat the playing message
- Press twice to play the previous message.
- 5 ①ANS ON/OFF
- · Press to turn the answering system on or off. 6 – ▶/■/PLAY/STOF
- Press to play messages
- Press to stop message
- 7 ▼VOL-
- Press to decrease the volume during message playback · When the phone is not in use, press to decrease the telephone base ringer volume.
- 8 ⊯/SKIP
- · Press to skip to the next message. 9 – Message window
- Shows the number of messages, and other nformation of the answering system or elephone base.
- 10- **AVOL**+
- Press to increase the volume during message playback. · When the phone is not in use, press to increase
- the telephone base ringer volume. 11- X/DELETE
- Press to delete the playing message.
- When the phone is not in use, press twice to
- delete all previously reviewed messages.
- -OR • Press TALK , (), OFF, or any dialing key on the
- handset -OR

deregistration.

Join a call in progress

 Place the handset in the telephone base or charger.

You can use up to two system handsets at a

expansion handsets (TR0Y-2013) for this

handsets to the telephone base.

until all handsets hang up.

call from one handset to another.

handset number

between two devices.

handset number

base or charger.

handset to another.

Transfer a call using intercom

Transfer a call

telephone base. You can register up to five

• When a handset is on a home call, press

TALK or I on another handset to join the call.

• Press **OFF** to exit the call. The call continues

While on an outside call, you can transfer the

1. Press **MENU** on your handset during a call.

Use the dialing keys to enter a destination

Use the intercom features for conversations

1. Press INT on your handset when not in use.

2. Use the dialing keys to enter a destination

4. To end the intercom call, press **OFF** or

While on an outside call, you can use the

intercom feature to transfer the call from one

1. Press **INT** on your handset during a call.

2. The current call is put on hold. Use the

dialing keys to enter a destination handset

3. To answer the intercom call, press TALK, (1), or

place the handset back in the telephone

any dialing key on the destination handset.

4. To answer the intercom call, press (ALK, (1), or

any dialing key on the destination handset.

time on a home line call. You can buy additional

more than four seconds. It may lead to handset

Do not press and hold **/FIND HANDSET** for

elephone base lights overview

IN USE

し/ANS

ON/OFF

Directory

Add a directory entry

Add contact.

4. Enter the number.

(up to 30 digits)

7. Press **SELECT** to save.

or right.

numbers only).

Review the directory

or \triangleleft to dial.

Dial a directory entry

Edit a directory entry

then press SELECT.

TALK or 🔊 to dial.

SELECT.

30 digits, and a name up to 15 characters.

Connect

by wall switches

provider for more information

answering a call

incoming call.

handsets.

turned on

On when the telephone line is in use. On when the answering system is

On when you are registering a handse Flashes quickly when there is an

Flashes when another telephone sharing the same line is in use. Flashes when you are deregistering a

On when the answering system is

You can choose to connect the telephone base for desktop usage or wall mounting.

 
 Use only the adapters provided Make sure the electrical outlets are not controlled

The adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet

 If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSL filter (not included) between the telephone line cord and telephone wall jack. Contact your DSL service



Connect the telephone base



The phonebook can store up to 50 entries, which are shared by all handsets. Each entry may consist of a telephone number up to

1. Press MENU when the phone is not in use. 2. Scroll to Directory then press SELECT. 3. Press SELECT again to choose

• Use the dialing keys to enter the number

Press SELECT to move to the name. 6. Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.

While entering numbers and names, you can: • Press **DELETE** to erase a digit or character. • Press and hold **DELETE** to erase the entire

Press ▼ or ▲ to move the cursor to the left

• Press and hold PAUSE to insert a dialing bause (for entering phone numbers only) • Press **0** to add a space (for entering names

 
• Press ™ to add ★ (} appears) or ™ to add # (🖁 appears) (for entering phone


Entries are sorted alphabetically. Press [©] when the phone is not in use. 2. Scroll to browse through the directory, or use the dialing keys to start a name search (you can enter up to 3 characters for the search). 3. When the desired entry appears, press

When the desired entry appears, press

1. When the desired entry displays, press

2. Use the dialing keys to edit the number, and



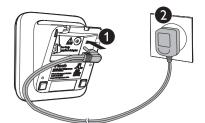


Mount the telephone base

The telephone comes ready for tabletop use. If you have already installed the telephone for tabletop use, unplug the telephone line cord from the telephone wall jack, and unplug the telephone base power adapter from the wall outlet before mounting your telephone on a wall. Follow the steps below to mount your telephone on a wall.

. Route the telephone line cord through the rectangular hole on the wall mount bracket. Then plug the two ends of the telephone line cord into the telephone base and the wall outlet as shown.



2 Align the holes on the bracket with the standard wall plate and slide the bracket down until it clicks securely in place.

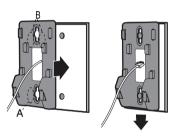

- 3. Use the dialing keys to edit the name, and then press SELECT to save.
 - **Delete a directory entry:**
 - When the desired entry displays, press DELETE.
 - 2. When the screen displays **Delete contact?**, press SELECT.

peed dial

You can copy up to 9 directory entries into the speed dial locations (0 and 2-9) so that you can dial these numbers using fewer keys than usual. The speed dial memory locations are stored in the telephone base and are shared by all handsets. Changes made to the speed dial entries on one handset apply to all.

Assign a speed dial entry

- 1. Press MENU when the phone is not in use.
- 2. Scroll to **Directory**, then press **SELECT**.
- Scroll to Speed dial, then press SELECT.
- 4. Press $\mathbf{\nabla}$ or \mathbf{A} or the dialing keys (0 or 2-9) to
- choose the desired speed dial location. 5. Press SELECT. The screen displays Copy from DIR... and then the first entry in the directory.
- 6. Scroll to browse to the desired entry. -OR-
- Use the alphabetical search to find the desired entry
- 7. Press SELECT to save. You hear a confirmation. The name (up to 12 characters) appears in the selected speed dial location. RNOTES
- If the directory is empty, when you press SELECT in Step 5, the screen displays **Directory empty**.
- If the speed dial location you selected is occupied, the new directory entry you selected replaces the old one. Take caution not to replace entries you do not wish to delete from the speed dial locations.

Reassign a speed dial entry

- 1. Press MENU when the phone is not in use.
- 2. Scroll to **Directory**, then press **SELECT**.
- 3. Scroll to Speed dial, then press SELECT.
- 4. Press $\mathbf{\nabla}$ or \mathbf{A} , or use the dialing keys to choose the speed dial location you want to reassign

- 5. Press **SELECT** twice. The screen displays Reassign SD
- 6. Press SELECT. The screen displays Copy from DIR ... and then the first entry of the directory.
- 7. Scroll to browse to the desired entry. -OR-
- Use the alphabetical search to find the desired entry.
- 8. Press **SELECT** to save. You hear a confirmation. The name (up to 12 characters) appears in the selected speed dial location.

Dial a speed dial number

• <u>Press and hold</u> a dialing key (0 or 2-9) to dial the number stored in the corresponding speed dial location

When the speed dial location is empty, the screen displays the speed dial list. See Assign a speed dial entry to add a new entry.

Delete a speed dial entry

- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to **Directory**, then press **SELECT**.
- Scroll to Speed dial, then press SELECT.
- 4. Press $\mathbf{\nabla}$ or \mathbf{A} , or use the dialing keys to choose the desired speed dial location, then press **DELETE**. The screen displays **Clear** SD #X?
- 5. Press **SELECT** to confirm. You hear a confirmation tone

PNOTE

Deleting the speed dial entries does not affect the entries in the directory.

Caller ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log.

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name

If the telephone number has more that 15 digits, only the last 15 digits appear. If the name has more 2. Scroll to **Ringers**, and then press **SELECT**. than 15 characters, only the first 15 characters are shown and saved in the caller ID log

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

Frequently asked questions

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to vour question, visit our website at www.vtechphones.com or call 1 (800) 595-951

for customer service. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

	()		
My telephone does not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.		The answers system do not annou the correc
The display shows No line . I cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.		of the wee for recorde messages stamp. The mess on the ans system and incomplete
	If changing telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.		
	You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your service provider for solutions.		I accidenta set my LC language Spanish o
The display shows To register HS andsee manual	The handset is deregistered from the telephone base. Place the andset in the telephone base to register it back. The handset hows Registered and	French, ar don't knov to change to English	
alternately. The handset does not work at all.	you hear a beep when the registration process completes. This process takes about 90 seconds to complete.		Limited

Review a caller ID log entry

- Press CID when the phone is not in use. 2. Scroll to browse through the caller ID log.
- When the desired entry appears: • Press # repeatedly to show different dialing options.
- Press **1** repeatedly if you need to add or remove 1 in front of the phone number.
- 3. Press TALK or ■) to dial the displayed number.

Dial a caller ID log entry

- When the desired entry appears, press TALK or () to dial.
- Save a caller ID log entry to the directory When the desired caller ID log entry
- displays, press SELECT. 2. Scroll to To Directory then press SELECT.
- 3. Use the dialing keys to modify the number, and then press SELECT.
- 4. Use the dialing keys to modify the name, and then press SELECT to save.
- Delete a caller ID log entry
- When the desired caller ID log entry displays, press DELETE.

Delete all caller ID log entries

• Press **MENU** when the phone is not in use. Scroll to Caller ID log and then press SELECT. Scroll to Del all calls and then press SELECT twice.

Sound settings

- Key tone
- You can choose from different ringer tones.
- Press **MENU** when the handset is not in use. 2. Use the dialing keys (0-9) to enter the Scroll to **Settings**, and then press **SELECT**.
- Scroll to choose **Key tone**, and then press SELECT.
- Scroll to choose **On** or **Off**, and then press SELECT to save.

Ringer tone

You can choose from different ringer tones.

- 1. Press **MENU** when the handset is not in use.
- Scroll to choose Ringer tone, and then 3 oress **SELECT**
- 4. Scroll to sample each ringer tone, and then press **SELECT** to save.

he answering ystem does ot record nessages.	Make sure the answering system is on. When the answering system is on, ANS ON should display on the handset and the telephone base.
	When the answering machine memory is full, it does not record new messages until some old messages are deleted.
	If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail service answers. To determine how many rings activate your voicemail service, contact your telephone service provider.
The answering ystem does ot announce he correct day f the week or recorded hessages time tamp.	Make sure you have set the date and time. See Configure your telephone section.
he messages n the answering ystem are ncomplete.	If a caller leaves a very long message, part of it may be lost when the answering system disconnects the call after the preset recording time.
	If the memory on the answering system becomes full during a message, the answering system stops recording and disconnects the call.
accidentally et my LCD anguage to spanish or rench, and I on't know how o change it back o English.	While the handset is not in use, press MENU and then enter *364# to change the handset LCD language back to English.

l warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

ONOTE

If you turn off the ringer volume, you will not hear ringer tone samples.

Ringer volume

- You can adjust the ringer volume level, or turn the ringer off.
- 1. Press MENU when the handset is not in use. 2. Scroll to Ringers, and then press SELECT.
- 3. Scroll to choose Ringer volume or Cell volume, and then press SELECT.
- 4. Scroll to adjust the volume, and then press SELECT to save.

If the handset ringer volume is set to off, that handset is silenced for all incoming calls except paging tone.

Ringer volume (telephone base)

You can adjust the telephone base volume level by pressing **▼VOL-** or **▲VOL+** on the top of the telephone base when idle.

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the preset volume.

• Press OFF or MUTE on the handset. The handset displays \mathcal{A} and **Ringer muted** briefly.

Quiet mode

You can turn on the quiet mode for a period of time. During this period, all tones (except paging) tone) and call screening are muted. When you turn on the quiet mode, the answering system turns on automatically

- 1. Press and hold ^{QUET}# on the handset or telephone base when idle.
- duration, and then press SELECT to save.
- To turn off the quiet mode, press and hold OUET# on the handset or telephone base when idle

About answering system and bicemail service

For message recording, your telephone has a built-in answering system, and it also support voicemail service offered by your telephone service provider (subscription is required, and fee may apply).

The main differences between them are as follows

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

What is not covered by this limited warranty?

- This limited warranty does not cover: 1. Product that has been subjected to misuse accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other auid intrusion: (
- 2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
- 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
- 4. Product to the extent that the problem is caused by use with non-VTech accessories; or
- 5. Product whose warranty/guality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- Product returned without a valid proof of purchase (see item 2 on the next page); or 8. Charges for installation or set up, adjustment
- of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?


NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges

Built-in answe Voicemail fron Messages are essages are Storage stored in the tored in a serve lephone base or system provide by your telephon Your messages Your messages will not be deleted nay be automatically. automatically leleted after a You have to delete eriod of time. your messages manually. Contact vour elephone service provider for more letails When you received When you receive Method new messages. new messages, o retrieve handset displays the handset essages displavs 🔀 and XX new messages and the message l New voicemail window on the telephone base flashes. To retrieve o retrieve nessages, usually nessages, you there are two ways: need an access number and/or a Press a button asscode provid on the telephone y your telephone base; or rvice provider. Access remotely with an access

------Telephone base control key panel:

code.

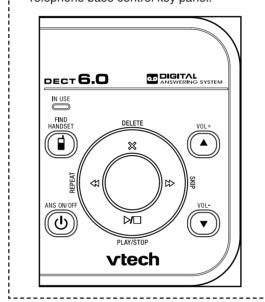

incurred in the transport of the Product(s) to the service ocation. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this nited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service?

address, and telephone number

not rely on any such modification

Other limitations

- Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
- Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and Provide your name, complete and correct mailing

This warranty is the complete and exclusive agreement

between you and VTech. It supersedes all other written or oral communications related to this Product.

VTech provides no other warranties for this Product.

responsibilities regarding the Product. There are no

modifications to this limited warranty and you should

State/Provincial Law Rights: This warranty gives you

specific legal rights, and you may also have other rights,

which vary from state to state or province to province.

fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary

use) are limited to one year from the date of purchase.

Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation

may not apply to you. In no event shall VTech be liable

Limitations: Implied warranties, including those of

for any indirect, special, incidental, consequential,

profits or revenue, inability to use the Product or

other associated equipment, the cost of substitute

the use of this Product. Some states/provinces do

not allow the exclusion or limitation of incidental or

consequential damages, so the above limitation or

Please retain your original sales receipt as

exclusion may not apply to you.

proof of purchase.

or similar damages (including, but not limited to lost

equipment, and claims by third parties) resulting from

other express warranties. No one is authorized to make

The warranty exclusively describes all of VTech's

Set your built-in answering system

Your answering system has various features, read below for the basic settings

- The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message characteristics.
- Your answering system allows you to set your announcement, to save and delete messages, activate call screening, to set number of rings before pick up, to access remotely, and to control the recording time
- Turn the answering system on or off The answering system must be turned on to answer and record messages.

To turn on or off with the telephone base: Press U/ANS ON on the telephone base to turn

- the built-in answering system on or off.
- To turn on or off with the handset:
- 1. Press **MENU** when the phone is not in use. 2. Scroll to highlight **Answering sys**, and then press SELECT.
- 3. Scroll to highlight **Answer on/off**, and then press SELECT.
- Scroll to highlight **Answer: On** or Answer: Off, and then press SELECT to save. You hear a confirmation tone.

Default announcement

length

Frequency

Transmit

freuency

Channels

Nominal

effective

range

Power

Memory

requirements

MHz

at the time of use.

Handset directory:

and 15 characters

Handset caller ID log:

and 15 characters

control

The telephone is preset with a greeting that answers calls with "Hello, please leave a message after the tone." You can use this preset announcement, or replace it with your own.

Record your own announcement

The announcement can be up to 90 seconds in Press **MENU** when the phone is not in use.

- Scroll to **Answering sys** and then press SELECT twice.
- The handset displays Play [2] Del [3] **Rec [7]**, and it announces, *"To play, press 2.* To record. press 7."
- Press 7 to record. The handset announces, "Record after the tone. Press STOP when you
- are done." After the tone, speak towards the handset microphone. Then, press 5 when done.

- Press MENU when the phone is not in use. Scroll to Answering sys and then press SELECT twice.
- The handset displays Play [2] Del [3] Rec [7], and it announces, "To play, press 2. o record, press 7."
- Press 2 to record. The handset announces, "Record after the tone. Press **STOP** when *you are done.*" Then, press **2** to play the announcement.

Delete the announcement

Play the announcement

- 1. Press **MENU** when the phone is not in use. 2. Scroll to Answering sys and then press SELECT twice.
- The handset displays Play [2] Del [3] Rec [7], and it announces, "To play, press 2 To record, press 7."
- 4. Press **3** to delete your own recorded announcement.

Set number of rings

You can set the answering system to answer an incoming call after 2, 3, 4, 5 or 6 rings; or toll saver. If you choose toll saver, the answering system answers a call after 2 rings when you have new messages, or after 4 rings when you have no new messages.

- 1. Press MENU when the phone is not in use.
- 2. Scroll to **Answering sys** then press **SELECT**.
- 3. Scroll to **Ans sys setup** then press **SELECT**.
- Scroll to # of rings then press SELECT.
- 5. Scroll to choose 2, 3, 4, 5, 6 or Toll saver. 6. Press **SELECT** to save and you hear a confirmation tone

Message alert tone

When the message alert tone is set to on, and there is at least one new message, the telephone base beeps every 10 seconds. The message alert tone is preset to off.

- 1. Press MENU when the phone is not in use.
- 2. Scroll to **Answering sys** then press **SELECT**.
- 3. Scroll to Ans sys setup then press SELECT.
- 4. Scroll to Msg alert tone then press SELECT.
- 5. Scroll to choose Tone: On or Tone: Off.
- 6. Press **SELECT** to save and you hear a confirmation tone

Recording time

You can set the recording time limit for each incoming message

- 1. Press MENU when the phone is not in use.
- 2. Scroll to Answering sys then press SELECT.
- 3. Scroll to Ans sys setup then press SELECT.
- 4. Scroll to **Recording time** then press SELECT.
- 5. Scroll to choose 3 minutes, 2 minutes or 1 minute
- 6. Press **SELECT** to save and you hear a confirmation tone

Use your built-in answering system

New message indication

When there are new answering system messages, The handset displays XX new messages and the message window on the elephone base flashes

Message playback

To playback messages at the telephone base: • Press ▶/■/PLAY when the phone is not in use.

- Options during playback: Press ▼VOL- or ▲VOL+ to adjust the speaker
- Press >/SKIP to skip to the next message.
- Press **«/REPEAT** to repeat the message currently playing. Press **«/REPEAT** twice to
- listen to the previous message Press X/DELETE to delete the playing
- message. The system advances to the next message Press ▶/■/STOP to stop.
- To playback messages at the handset: • Press MENU to choose Play messages. Press SELECT.
- Options during playback:
- Press ▼/VOLUME/▲ to adjust the message plavback volume.
- Press 6 to skip to the next message.
- Press 4 to repeat the message. Press 4
- during the time and day announcement to hear the previous message.
- Press 3 to delete the playing message.
- Press OFF to stop the playback
- Press ■) to switch between speakerphone mode and handset mode.

Delete all old messages at the telephone bas

- To delete all old messages at the telephone
- Press **X/DELETE** twice when the phone is not
- To delete all old messages on a handset:
- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to **Answering sys**, and then press SELECT
- 3. Scroll to Delete all old, and then press **SELECT** twice. You hear a confirmation tone.

Remote access

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is **19**. You can use this preset code, or set your own.

- 1. Dial your telephone number from any touch-tone telephone.
- 2. When the system plays your announcement enter the two-digit security code.
- 3. You can enter one of the following remote commands

Command	Description	
1	Play all messages.	
2	Play new messages.	
3	Delete the current message (during playback).	
33	Delete all old messages.	
4	Repeat the current message (during playback).	
5	Stop.	
*5	Hear a list of remote commands.	
6	Skip to the next message (during playback).	
*7	Record a new announcement.	
8	End the call.	
0	Turn the answering system on or off.	

4. Hang up or press 8 to end the call.

Remote access code A two-digit security code is required to access

- the answering system remotely from any touchtone telephone. The preset code is 19. You can set the code from 00 to 99.
- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to **Answering sys** then press **SELECT**.
- SELECT
- 5. Use the dialing keys to enter a two-digit number.
- Scroll to a desired two-digit number. 6. Press **SELECT** to save and you hear a confirmation tone

Use the built-in answering system and voicemail service

You can use your answering system and voicemail service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact vour telephone service provider If you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message

Set your answering system to answer calls at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, set your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

etrieve voicemail from hone service

Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional. Fees may apply.

Retrieve voicemail

When you received a voicemail, the handset displays M and New voicemail. To retrieve. you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

chnical specifications

Crystal controlled PLL synthesizer

Handset: 1921.536-1928.448 MHz

Telephone base: 1921.536-1928.448

Maximum power allowed by FCC and

IC. Actual operating range may vary

according to environment conditions

Telephone base: 6V AC @ 400mA

50 memory locations; up to 30 digits

50 memory locations; up to 24 digits

Handset: 2.4V Ni-MH batterv

Charger: 6V AC @ 300mA

3. Scroll to **Ans sys setup** then press **SELECT**. 4. Scroll to **Remote code**, and then press

Turn off the new voicemail indicators

If you have retrieved your voicemail while away from home, and the handset still displays the new voicemail indicators, use this feature to turn off the indicators.

This feature turns off the indicators only, it does not delete your voicemail messages

1. Press MENU when the handset is not in use.

- 2. Scroll to Settings, and then press SELECT.
- Scroll to **CIr voicemail**, and then press SELECT.
- 4. Press SELECT to save and you hear a confirmation tone.

Expand your telephone system

You can add new handsets (TR02-2013/TR05 2013/TR06-2013/TR07-2013/TR08-2013. purchased separately) to your telephone base Your telephone base supports a maximum of 5 handsets

For more details, refer to the user's manual that comes with your TR02-2013/TR05-2013/TR06-2013/TR07-2013/TR08-2013 new handset.

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the andset is synchronized with the telephone base

General product care

Taking care of your telephone Your cordless telephone contains sophisticate electronic parts, so it must be treated with care

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety take caution when using electrical appliances during

