CS6829 CS6829-2 CS6829-26 CS6829-3

DECT 6.0 cordless telephone

PGRS 7 (TUV 8 (WXYZ 9

TONE X OPER O QUET #

vtech



lephones identified with this ogo have reduced noise and nterference when used with most -coil equipped hearing aids and ochlear implants. The TIA-1083 ompliant Logo is a trademark of the Telecommunications Industry ssociation. Used under license




The ENERGY STAR® program (www.energystar.gov) ecognizes and encourage the use of products that save energy and help protect our nvironment. We are proud o mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

# Congratulations

on purchasing your new VTech product. Before using this telephone, please read Important

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

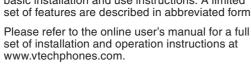






## What's in the box

Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is



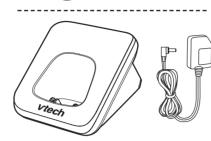

1 set for CS6829-2/CS6829-26; 2 sets for CS6829-3



1 set for CS6829 2 sets for CS6829-2/CS6829-26; 3 sets for CS6829-3



1 – IN USE light

· Flashes when there is an incoming call, or another telephone sharing the same line is in use.

• Flashes when handsets are being deregistered. • On when the telephone is in use, or the answering system is answering a call

• On when a handset is being registered.

2 - Control key panel

 Delete the playing message. · Press twice to delete all old messages.

· Repeat a message.

• Press twice to play the previous message.

· Skip to the next message

 Play messages. Stop playing messages

3 - Message window • Shows the number of messages, and other information of the answering system or telephone

4 - U ANS ON/OFF

· Turn on or off the answering system.

5 – ▲ VOL+ Increase the listening volume.

• Increase the telephone base ringer volume.

1 - Handset earpiece

Show the menu

Hang up a call.

making change

phone is ringing.

is not in use.

ID log entry.

5 — QUIET#

6-INT

7 - Microphone

Make a call

· Delete digits while predialing.

• Turn on or off the quiet mode.

(for multi-handset models only).

an entry or setting.

2 - LCD display

6 - ▼ VOL-

7 - FIND HANDSET

8 - Charging pole

9 - Speakerphone

• Decrease the listening volume.

Page all system handsets.

Handset overview

Decrease the telephone base ringer volume.

· While in a menu, press to select an item, or save

• Return to the previous menu or idle mode without

Silence the handset ringer temporarily while the

· Erase the missed call indicator while the handset

• Show other dialing options when reviewing a caller

· Start an intercom conversation or transfer a call

14 - REDIAL PAUSE

• Review the directory or caller ID log when the telephone is not in use.

· Make or answer a call using the handset

the handset earpiece during a call.

Mute the microphone during a call.

directory, caller ID log or redial list.

· Switch between the handset speakerphone and

• Silence the handset ringer temporarily while the

• Delete the displayed entry while reviewing the

· Delete digits or characters when entering numbers

• Switch to tone dialing temporarily during a call.

Press repeatedly to add or remove 1 in front of

the caller ID log entry before dialing or saving it to

Answer an incoming call when you receive a call

Insert a dialing pause while dialing or entering

Enter space character during text editing.

· Set or dial your voicemail number

Make or answer a call.

Review the redial list.

numbers into the directory.

waiting alert.

speakerphone

phone is ringing.

or names.

10 - TONE X

11 - OPER

· Scroll up or down while in a menu, or in the directory, caller ID log or redial list. Move the cursor to the left or right when entering

· Adjust the listening volume during a call or message playback

16 - CHARGE light

• On when the handset is charging in the telephone base or charger.

numbers or names



1 - Charging pole

Display icons overview

ANS ON

IN USE

The battery icon flashes when the

The battery icon animates when the

The battery icon becomes solid when

attery is charging.

he battery is fully charged.

The handset ringer is turned off.

There are new voicemail received

rom your telephone service provider

There are new caller ID log entries.

Γhe answering system is turned on.

aying and total number of new/old

consumption whenever the handset is

synchronized with the telephone base

On when the telephone line is in

On when the answering system is

On when you are registering a

Flashes quickly when there is an

Flashes when another telephone

Flashes when you are deregisteri

sharing the same line is in use.

On when the answering system is

On when the handset speakerphone

On when the handset is charging in

he message number currently

essages recorded.

Telephone base lights overview

answering a call.

incoming call

all handsets.

turned on.

andset lights overview

The ECO mode activates


You can choose to connect the telephone base for desktop usage or wall mounting.

Connect


 Use only the adapters provided. Make sure the electrical outlets are not controlled by


wall switches. The adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet

If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSL filter (not included) between the telephone line cord and telephone wall jack. Contact your DSL service provider for more

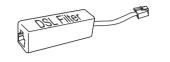

## Connect the telephone base

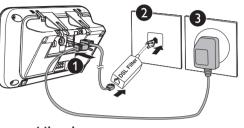

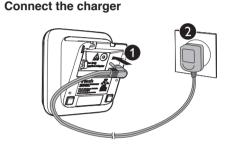


2. Align and place the wall mount bracket on the standard wall plate.

Mount the telephone base


Connect the telephone line cord to the

elephone base. Route it through the wall


mount bracket, and then connect it to the wall

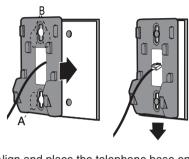

3. Align and place the telephone base on the wall

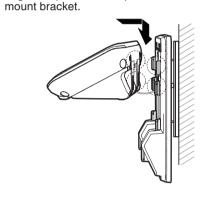

## Connect the power adapter

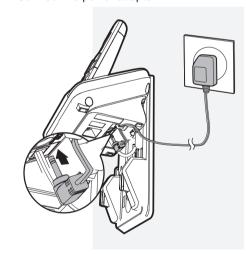

# Install and charge the battery

## Install the battery as shown below. **O**NOTES


Install the battery


possible leakage.


Use only supplied battery.

 Charge the battery provided with this product only in accordance with the instructions and limitations • If the handset will not be used for a long time,

disconnect and remove the battery to prevent

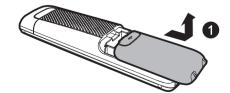

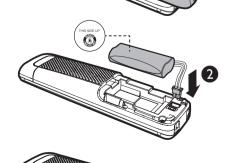


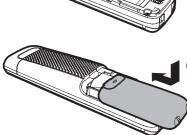

## Charge the battery

Abridged user's manual

Place the handset in the telephone base or the

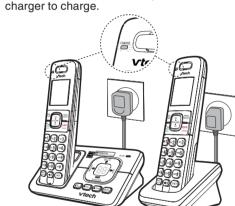

Once you have installed the battery, the handset LCD display indicates the battery status (see the

For best performance, keep the handset in the

telephone base or charger when not in use. • The battery is fully charged after 16 hours of continuous charging

· If you place the handset in the telephone base or the charger without plugging in the battery, the screen displays No battery.

	indicators		
	The screen is blank, or displays <b>Put in charger</b> and flashes.	The battery has no or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
	The screen displays Low battery and () flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (about 30 minutes).
	The screen displays HANDSET X.	The battery is charged.	To keep the battery charged place it in the telephone base or charger when not in use.

you to set the date and time.

## Set date and time

**Ø**NOTE

 Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stam

2. Use the dialing keys (0-9) to enter the hour choose AM or PM.

## Check for dial tone

described above are properly done.

changed your telephone service to digita service from a cable company or a VolF to be rewired to allow all existing telephone iacks to work. Contact your cable/VoIP service provider for more information.

## Operating range

the telephone base.

## Before use

After you install your telephone or power returns following a power outage, the handset will prompt

1. Use the dialing keys (0-9) to enter the month

(HH) and minute (MM). Then press ▼ or ▲ to

It may be a wiring problem. If you have

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC), Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office. When the handset is out of range, the handset

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press TALK. Move closer to the telephone base, then press TARK to answer the

interference. To improve reception, move closer to

# (MM), date (DD) and year (YY). Then press

# 3. Press SELECT to save.

Press TAIR. If you hear a dial tone, the installation is

If you do not hear a dial tone:

Make sure the installation procedures

# displays Out of range or no pwr at base.

a telephone conversation, there may be

If the handset moves out of range during

## se the handset menu

1. Press **MENU** when the phone is not in use.

Press ▼ or ▲ until the screen displays the desired feature menu 3. Press SELECT.

• To return to the previous menu, press CANCEL To return to idle mode, press and hold

# Configure your telephone

Set language The LCD language is preset to English. You can select English, French or Spanish to be used in all

screen displays 1. Press **MENU** when the handset is not in use.

2. Scroll to Settings, then press SELECT twice. 3. Scroll to choose English, Français or

Press SELECT twice to save your setting.

## Set date and time **6** NOTE

 Make sure you set the date and time including the vear correctly: otherwise the answering system does not announce the correct day of the week for your 1. Press **MENU** on the handset when not in use.

2. Scroll to **Set date/time** and then press 3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press SELÉCT.

4. Use the dialing keys (0-9) to enter the hour

(HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM. 5. Press **SELECT**.

temporarily during a call.

## Temporary tone dialing If you have pulse (rotary) service only, you can switch from pulse to touch-tone dialing

 During a call, press TONEX 2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

## elephone operations



. ------

Press TALK or (1), and then dial the telephone number Handset control key panel: Answer a call

# Press TALK , ■) or any of the dialing key.

End a call: Press **OFF** or put the handset back in the

but the other party cannot hear you

## conversation. The handset displays Microphone on briefly.

models only) You can use up to two handsets at a time on an

When a handset is already on a call, press

## place it in the telephone base or charger. The call continues until all handsets hang up. Call waiting

To exit the call, press **OFF** on the handset or

tone if there is an incoming call while you are already on a call. Press FLASH to put the current call on hold

and take the new call. Press FLASH at any time to switch back and forth between calls.

While on an outside call, you can transfer the call from one handset to another. During a call, press MENU.

or any dialing key on the destination

## telephone base or charge

 During a call, press ▼/VOLUME or ▲/VOLUME to adjust the listening volume.

# The mute function allows you to hear the other party

1. During a call, press **MUTE**. The handset displays Muted. 2. Press MUTE again to resume the

# Join a call in progress (for multiple handset

When you subscribe to call waiting service from your telephone service provider, you hear an alert

## Transfer a call (for multiple handset models only)

2. Press ▼ or ▲ to choose **Transfer** and then press SELECT. 3. To answer on the destination handset, press

### Find handset Use this feature to find the system handset.

handset

To start paging: Press | FIND HANDSET on the telephone base when not in use. All idle handsets ring

## and display \*\* Paging \*\* To end paging: Press /FIND HANDSET at the telephone

base Press [TARK], ■ )) or any of the dialing keys on the

## Place the handset in the telephone base or charger

## deregistration.

edial list Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room

## for the new entry. Review and dial a redial list entry

2. Press **▼**, ▲ or **REDIAL** repeatedly until the desired entry displays 3. Press TALK or ■ 1) to dial.

When the desired redial entry displays, press

1. Press **REDIAL** when the handset is not in use.

# ntercom

Use the intercom feature for conversations

Delete a redial list entry

DELETE.

between two handsets 1. Press INT on your handset when not in use. Use the dialing keys to enter a destination handset if necessary

2. To answer the intercom call, press [ARK], ■)), INT or any dialing key on the destination handset. 3. To end the intercom call, press **OFF** or place the handset back in the telephone base or

# When you receive an outside call during an

intercom call, there is an alert tone. To answer the outside call, press TALK. The intercom call ends automatically.

### To end the intercom call without answering the outside call, press OFF. The telephone continues to ring.

## Directory The directory can store up to 50 entries, which are

### shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a directory entry 1. Enter the number when the phone is not in use. Press **SELECT**, then go to Step 3.

## SELECT twice to choose Add contact. 2. Use the dialing keys to enter the number

Copy a number from the redial list by pressing **REDIAL** and then press **▼**, **△** or **REDIAL** repeatedly to select a number. Press SELECT to copy the number.

3. Press **SELECT** to move on to enter the name.

While entering names and numbers, you can:

Press MENU when the phone is not in use,

then press ▼ or ▲ to scroll to **Directory**. Press

### Additional key presses show other characters of that particular key. 5. Press **SELECT** to save.

4. Use the dialing keys to enter the name.

 Press **DELETE** to backspace and erase a digit or character Press and hold **DELETE** to erase the entire

## Press ▼ or ▲ to move the cursor to the left or Press and hold PAUSE to insert a dialing

pause (for entering numbers only). Press 0 to add a space (for entering names

## Review a directory entry Entries are sorted alphabetically.

1. Press when the phone is not in use.

2. Scroll to browse through the directory, or use the dialing keys to start a name search.

### Answer an incoming call during an intercom Delete a directory entry

press SELECT.

(i) to dial.

Speed dial

press **SELECT** 

press **SELECT** 

Assign a speed dial entry

2. When the handset displays Delete contact?, press SELECT. Edit a directory entry

1. When the desired entry displays, press

### 1. When the desired entry displays, press SELECT. 2. Use the dialing keys to edit the number, then

### 3. Use the dialing keys to edit the name, then press **SELECT**.

## Dial a directory entry When the desired entry appears, press TALK or RASH

You can copy up to 9 directory entries into the speed dial locations (0 and 2-9) so that you can

# dial these numbers using fewer keys than usual

1. Press **MENU** when the phone is not in use 2. Press ▼ or ▲ to scroll to **Directory** then press SELECT.

3. Press ▼ or ▲ to scroll to Speed dial and then

### 4. Press ▼ or ▲ or the dialing keys (0 or 2-9) to choose the desired speed dial location, and then press **SELECT**.

## 5. Search for the desired entry in the directory. 6. Press **SELECT** to save.

1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ to scroll to **Directory** then press SELECT.

3. Press ▼ or ▲ to scroll to **Speed dial** and then

4. Press ▼ or ▲ or the dialing keys (0 or 2-9) to choose the desired speed dial location, and then press **DELETE**.

## Dial a speed dial number

5. Press **SELECT** again to confirm.

Delete a speed dial entry

• Press and hold a dialing key (0 or 2-9) to dial the number stored in the corresponding speed dial location.

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be

saved in the caller ID log. The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number

### If the telephone number has more that 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15

Missed call indicator When there are calls that have not been reviewed

Each time you review a caller ID log entry marked **NEW**, the number of missed calls decreases by When you have reviewed all the missed calls, the

# entries are then considered old

When the desired entry appears, press TALK , ■ ))

## 1. When the desired caller ID log entry displays, press **SELECT**.

2. Use the dialing keys to modify the number, if necessary. Then press **SELECT**.

# Delete the caller ID log entries

1. Press **MENU** when the phone is not in use.

## To delete all caller ID log entries:

2. Scroll to Caller ID log and then press SELECT.

3. Scroll to **Del all calls** then press **SELECT** 

and 15 characters for the name.

# characters are shown and saved in the caller ID

Review a caller ID log entry 1. Press CID when the phone is not in use. 2. Scroll to browse through the caller ID log.

in the caller ID log, the handset displays XX missed calls.

missed call indicator no longer displays. one by one, press and hold CANCEL on the idle


handset to erase the missed call indicator. All the

# Dial a caller ID log entry

Save a caller ID log entry to the directory

3. Use the dialing keys to modify the name, if necessary. Then press SELECT.

## • When the desired caller ID log entry displays, press DELETE.

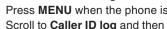



## Sound settings

### Quiet mode

You can turn on the quiet mode for a period of time. During this period, all tones (except paging tone) are muted. When you turn on the quiet mode, the answering system turns on

- automatically. 1. Press and hold QUIET# when the handset is not normally at the preset volume.
- 2. Use the dialing keys (0-9) to enter the duration (hour), then press SELECT to save.
- To turn off the quiet mode, press and hold QUET# on the handset when the phone is not in use.

## Key tone

- You can turn the key tone on or off.
- Press MENU when the handset is not in use. 2. Scroll to Settings and then press SELECT.
- 3. Scroll to choose **Key tone**, then press SELECT
- 4. Press ▼ or ▲ to choose **Key tone:On** or **Key** tone: Off, then press SELECT to save.

## Ringer tone

You can choose from different ringer tones for each handset.

- 1. Press MENU when the handset is not in use. 2. Scroll to **Ringers** and then press **SELECT**.
- 3. Scroll to choose **Ringer tone**, then press
- 4. Press ▼ or ▲ to sample each ringer tone, then press **SELECT** to save.

# **⊘**NOTE

• If you turn off the ringer volume, you will not hear ringer tone samples.

Telephone base ringer volume Press **▲VOL+** or **▼VOL-** on the telephone base

to adjust the ringer volume when the telephone When you set the ringer volume to zero, the base

ringer is off. The telephone base announces, 'Base ringer is off."

# Handset ringer volume

You can adjust the handset ringer volume level, or turn the ringer off.

- 1. Press **MENU** when the handset is not in use 2. Scroll to **Ringers** and then press **SELECT**
- 3. Press ▼ or ▲ to sample each volume level. then press **SELECT** to save

still rings when you press I/FIND HANDSET at the telephone base

> Temporary ringer silencing When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings

To silence the handset ringer:

- Press OFF or MUTE. The handset displays Ջ and Ringer muted
- To silence the telephone base ringer:
- Press ▼VOL-.

### About the built-in answering When the ringer volume is set to Off, the handset system and voicemail service

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fee may apply).


The main differences between them are:

egory	Built-in answering system	telephone service
rage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.
hod etrieve ssages	When you received new messages, the handset displays XX new messages and OO, and the message window on the telephone base flashes.	When you received new messages, the handset displays and New voicemail.
hod etrieve ssages	To retrieve messages, usually there are two ways:  • Press ►/■ on the telephone base; or  • Access remotely with an access code	To retrieve messages, you need an access number and/ or a passcode provided by your telephone service provider.

# Set your built-in answering system

up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message characteristics.

Your answering system allows you to set your announcement, to save and delete messages. activate call screening, to set number of rings before pick up, to access remotely, and to control the recording time.

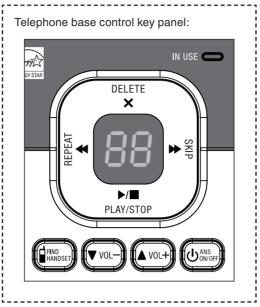

## Turn the answering system on or off The answering system must be turned on to answer and record messages. To turn on or off with the telephone base

 Press U/ANS ON/OFF to turn the built-in answering system on or off.

- 3. Scroll to **Answer on/off** and then press SELECT.
- Answer: Off and then press SELECT.

## Default announcement

The answering system can record and store



To turn on or off with the handset 1. Press MENU when the phone is not in use

- 2. Scroll to **Answering sys** and then press
- 4. Press ▼ or ▲ to choose Answer: On or

4. The handset announces. "Record after the

1. Press **MENU** when the phone is not in use.

The handset announces, "To play, press 2.

Press VOL+ or VOL- to adjust the listening

1. Press **MENU** when the phone is not in use.

2. Scroll to **Answering sys** then press **SELECT** 

3. The handset announces, "To play, press 2. To

After you deleted your own recorded announcemen

the answering system answers calls with the default

record, press 7." Then press 3 to delete your

Press 5 or OFF to stop at any time.

2. Scroll to Answering sys then press SELECT

To record, press 7." Then press 2 to play the

5. Press **5** or **OFF** when done.

Play the announcement

current announcement.

Delete the announcement

own recorded announcement.

Options during playback:

volume.

**⊘**NOTE

announcement

tone. Press 5 when you are done." After the

tone, speak towards the handset microphone.

Set number of rings The telephone is preset with a greeting that You can set the answering system to answer an answers calls with "Hello, please leave a incoming call after two, three, four, five or six rings; or toll saver. If you choose toll saver, the message after the tone." You can use this preset announcement, or replace it with your own. answering system answers a call after two rings

## Record your own announcement The announcement can be up to 90 seconds in

- 1. Press  $\mathbf{MENU}$  when the phone is not in use. 2. Scroll to **Answering sys** and then press 1. Press **MENU** when the phone is not in use.
- 2. Scroll to **Answering sys** then press **SELECT** Scroll to Ans sys setup and then press SELECT.
- 3. The handset announces. "To play, press 2. To record. press 7." Then press 7 to record.
  - 4. Scroll to # of rings and then press SELECT. 5. Press ▼ or ▲ to choose **6**, **5**, **4**, **3**, **2** or **Toll**

when you have no new messages

## saver and then press SELECT.

when you have new messages, or after four rings

Set recording time You can set the recording time for each incoming

- 1. Press MENU when the phone is not in use.
- 3. Scroll to Ans sys setup and then press SELECT.

2. Scroll to **Answering sys** and then press

- 4. Scroll to **Recording time** and then press SELECT.
- Press ▼ or ▲ to choose 3 minutes, 2 minutes or 1 minute, and then press

## Use your built-in answering syster

## New message indication

When there are new answering system messages, the handset displays XX new messages, and the message window on the telephone base flashes. When you are reviewing

a new message, **NEW** displays on the handset. If the message alert tone is turned on, the telephone base beeps every 10 seconds when

## Message playback

## To playback messages at the telephone base:

there are messages that have not been reviewed.

- Press ►/■/PLAY when the phone is not in use.
- Options during playback: Press ▲VOL+ or ▼VOL- to adjust the listening
- Press ►/SKIP to skip to the next message.
- Press **\*/REPEAT** to repeat the playing message. Press **\*/REPEAT** twice to listen to
- the previous message
- Press X/DELETE to delete the playing message. The system advances to the next message.
- Press ►/■/STOP to stop.

## To playback messages with a handset:

Press ▲/VOLUME or ▼/VOLUME to adjust

Press 4 to repeat the playing message. Press

4 twice to listen to the previous message.

Press 3 to delete the playing message. The

You can only delete old (reviewed) messages.

them. You cannot retrieve deleted messages.

To delete all messages with the telephone

To delete all messages with a handset:

3. Scroll to **Delete all old** and then press

this preset code, or set your own

1. Press **MENU** when the phone is not in use.

Scroll to Answering sys and then press SELECT.

A two-digit security code is required to access the

answering system remotely from any touch-tone

telephone. The preset code is 19. You can use

1. Dial your telephone number from any touch-

2. When the system plays your announcement

3. Enter one of the following remote commands.

2 Play only new messages.

Delete all old messages

enter the two-digit security code.

1 Play all messages.

playback).

Stop.

Press X/DELETE twice when the phone is not

You cannot delete new messages until you review

system advances to the next message.

Press **◄**)) to switch between the speakerphone

and then press SELECT.

and the handset earpiece.

Press 6 to skip to the next message.

Press OFF to stop the playback.

Options during playback

the listening volume

Delete all messages

SELECT twice.

Remote access

tone telephone

\*7 Record a new announcement. Press MENU when the phone is not in use, 8 End the call.

# Remote access code

0 Turn the answering system on or off.

You can set your own remote access code from **00** to **99**.

4. Hang up or press 8 to end the call.

- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to **Answering sys** and then press
- SELECT.
- 3. Scroll to **Ans sys setup** and then press SELECT.
- 4. Scroll to **Remote code** and then press
- 5. Press the dialing keys (0-9) to enter the code, or ▼ or ▲ to select from 00 to 99, then press SELECT.

and voicemail service

your telephone service provider.

voicemail message

If you are on a call, or if the answering system

is busy recording a message and you receive

another call, the second caller can leave a

Set your answering system to answer calls

at least two rings earlier than your voicemail

service is set to answer. For example, if your

voicemail service answers after six rings, set

the delay before answering calls in seconds

your answering system to answer after four rings

Some voicemail service providers may program

instead of rings. In this case, allow six seconds

per ring when determining the appropriate setting.

## Use the built-in answering system

You can use your answering system and voicemail service together by setting your answering system to answer before voicemail

2. Scroll to **Settings** and then press **SELECT**. service answers as described below. To learn 3. Scroll to Voicemail # and then press SELECT. how to program your voicemail settings, contact

number (up to 30 digits).

5. Press **SELECT** to save.

Turn off the new voicemail indicators If you have retrieved your voicemail while away

This feature turns off the indicators only, it does not

- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to **Settings** and then press **SELECT**.
- 3. Scroll to **Clr voicemail** and then press SELECT.
- 4. Press SELECT again to confirm.

# Expand your telephone system

......

## Add and register a handset

You can add new handsets (CS6709, purchased seperately) to your telephone system. Your telephone base supports a maximum of five handsets

before use. After charged, each expansion handset alternately displays To register HS... and ...see manual.

## To register a handset:

 Place the new or non-registered handset in the telephone base. The handset displays Registering....

The registration process takes about 90 seconds to complete.

## **Deregister handsets**

IN USE light turns on and starts to flash.

takes about 10 seconds to complete.

You hear a confirmation tone. All handsets display To register HS... and ...see manual alternately when the deregistration process completes. The deregistration process

## ECO mode

Register each handset with the telephone base

The handset show Registered and you hear a beep when the registration process completes.

To replace a handset or reassign the designated handset number of a registered handset, you must deregister all handsets, and then register each handset individually.

### To deregister all handsets elephone base for about 10 seconds until the

2. Press /FIND HANDSET immediately again.

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the

# Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care. Avoid rough treatment

### Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

### Electrical storms Electrical storms can sometimes cause power

surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

handset is synchronized with the telephone base.

# General product care

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain. or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Cleaning your telephone should retain its luster for many years. Clean it

only with a dry non-abrasive cloth. Do not use

dampened cloth or cleaning solvents of any kind

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, visit our website at

	for customer service.		
	My telephone does not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.	
	The display shows <b>No line</b> . I cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord. If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.	
		You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer	

The answering

system does

not record

messages.

## Frequently asked questions

My telephone does not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.	
The display shows <b>No line</b> . I cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.	
	If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.	
	You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer	

www.vtechphones.com or call 1 (800) 595-9511

My telephone does not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.	
The display shows <b>No line</b> . I cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.	
	If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.	
	You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer	

My telephone does not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.
The display shows <b>No line</b> . I cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.
	If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.
	You may be using a new

r customer service.			messages til stamp.
Ay telephone loes not work it all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.	The messag on the answ system are incomplete.	
The display shows <b>No line</b> . cannot hear the lial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the		
	telephone line cord may be		Lagoidontall

# your home may no longer

### work. Contact your service provider for solutions. Make sure the answering system is on. When the answering system is on, ANS ON should display on the handset and the telephone base.

When the answering machine memory is full, it does not record new messages until some old messages are deleted. If you subscribe to voicemail service, change the number of rings so that

your answering system answers before your voicemail service answers To determine how many rings activate your voicema service, contact your telephone service provider.

### The answering Make sure you have set system does the date and time. See not announce Configure your telephone

the correct day section of the week for recorded messages time stamp. The messages If a caller leaves a very long on the answering message, part of it may be system are lost when the answering

system disconnects the call

after the preset recording If the memory on the answering system become full during a message, the answering system stops

### recording and disconnects I accidentally While the handset is not set my LCD in use, press **MENU** and then enter ¥364# to change language to Spanish or the handset LCD language French, and I back to English. don't know how to change it back

## Limited warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and orkmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating

from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

authorized service representative will repair or replace at VTech's option, without charge a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take

- This limited warranty does not cover: 1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other
- experienced is caused by signal conditions,

instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada. What will VTech do if the Product is not free

During the limited warranty period, VTech's design. We will retain defective parts, modules, or equipment. Benair or replacement of the Product.

approximately 30 days. How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

# What is not covered by this limited warranty?

liquid intrusion:

2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; 3. Product to the extent that the problem

network reliability, or cable or antenna systems;

4. Product to the extent that the problem is caused

by use with non-VTech accessories;

### Product whose warranty/quality stickers. product serial number plates or electronic serial numbers have been removed, altered or

rendered illegible; 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited

purchase (see item 2 below); or 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit. How do you get warranty service?

To obtain warranty service in the USA, please

visit our website at www.vtechphones.com or

to Products used for rental purposes)

7. Product returned without a valid proof of

call 1 (800) 595-9511. In Canada, go to www. vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited

### warrantv. What must you return with the Product to get warranty service?

malfunction or difficulty; and 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt: and 3. Provide your name, complete and correct

Other limitations

mailing address, and telephone number.

1. Return the entire original package and

contents including the Product to the VTech

service location along with a description of the

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties.

No one is authorized to make modifications to this limited warranty and you should not rely on any

other rights, which vary from state to state or province to province. Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts. so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special,

State/Provincial Law Rights: This warranty gives

you specific legal rights, and you may also have

exclusion may not apply to you. Please retain your original sales receipt as proof of purchase.

incidental, consequential, or similar damages

inability to use the Product or other associated

claims by third parties) resulting from the use

of this Product. Some states/provinces do not

allow the exclusion or limitation of incidental or

# Technical specifications

Frequency Crystal controlled PLL synthesize 1921.536-1928.448 MHz Transmit frequency Channels Maximum power allowed by Nominal effective FCC and IC. Actual operating range may vary according to environmental conditions at the time of use. Handset: 2.4V Ni-MH battery requirements Telephone base: 6V DC @ 400mA Charger: 6V AC @ 300mA

Directory: Memory

(including, but not limited to lost profits or revenue, equipment, the cost of substitute equipment, and 50 memory locations consequential damages, so the above limitation or up to 30 digits and 15 characters

# playback).

## \*5 Hear a list of remote commands. Skip to the next message (during

Delete the current message (during

Repeat the current message (during

Caller ID log: 50 memory locations

up to 24 digits and 15 characters

Specifications are subject to change without notice. © 2014 VTech Communications, Inc. All rights reserved. 05/14. CS6829-X\_ACIB\_V5.0

automatically.

Fees may apply.

service

Retrieve voicemail When you received a voicemail, the handset displays and New voicemail. To retrieve, you typically dial an access number provided by

After you have listened to all new voicemail

Voicemail is a feature available from most

telephone service providers. It may be included

with your telephone service, or may be optional.

your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages. **P**NOTE

messages, the indicators on the handset turn off

Retrieve voicemail from telephone

Set your voicemail number You can save your access number on each handset for easy access to your voicemail.

After you saved the voicemail number, you can <u>press and hold</u> **■ 1** to retrieve voicemail. 1. Press **MENU** when the phone is not in use.

4. Use the dialing keys to enter the voicemail

from home, and the handset still displays the new voicemail indicators, use this feature to turn off the indicators.

delete your voicemail messages

Document order number: 91-007056-050-100