Go to www.vtechphones.com to register your product for enhanced warranty support and

latest VTech product news.

DS6621-2 DS6621-3 DS6621-4

DECT 6.0 cordless telephone with BLUETOOTH® wireless technology



Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

Please refer to the online User's manual for a full set of installation and operation instructions at www.vtechphones.com.




Telephones identified with this ogo have reduced noise and terference when used with most T-coil equipped hearing aids and cochlear implants The TIA-1083 Compliant Logo is a trademark of the elecommunications Industry Association. Used under license

The ENERGY STAR[®] program www.energystar.gov) recognizes and encourages the use of products that save energy and elp protect our environment. We ENERGY STA are proud to mark this product with the ENERGY STAR[®] labe indicating it meets the latest energy efficiency guidelines.



Your product package contains the following

What's in the box

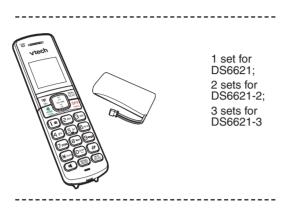

1 set for DS6621-2; 2 sets for DS6621-3





- MUTE/DELETE
- Mute the microphone during a call. Delete digits or characters while using the dialing keys.
- luetooth




Pair and connect your Bluetooth enabled

- light flashes.

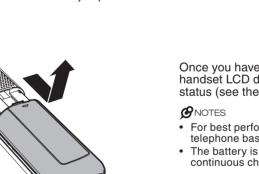

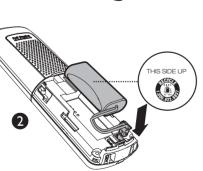

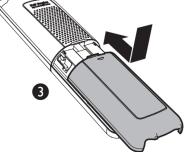

Place the handset in the telephone base or the charger to charge. **CHARGE** light remains or

Charge the battery



Once you have installed the battery, the handset LCD display indicates the battery status (see the table below).

- For best performance, keep the handset in the telephone base or charger when not in use. • The battery is fully charged after 12 hours of
- continuous charging.

Battery indicators	Battery status	Action
The screen is blank, or shows Put in charger and () flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
The screen shows Low battery and () flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
The screen shows HANDSET X.	The battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.

Before use

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time, and the answering system through voice guide.

Set date and time

- Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.
- Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press SELECT.

-----5 – *±* Quick start qu idaed user's mportant Safe Instructions manual

2. Use the dialing keys (0-9) to enter the hour

After the setting for the date and time, the

handset will display Voice guide to ... and set

Set answering system through voice guide

This feature assists you to do the basic setup of

the answering system. You can follow the voice

number of rings and the message alert tone.

1. Press **SELECT** to start the voice guide

guide to record your own announcement, set the

for the answering system setup. You hear

the voice prompt "Hello! This voice guide

to choose AM or PM.

3. Press SELECT to save

up Ans sys? alternatively.

(HH) and minute (MM). Then press 🗸 or 🔨









- the cell line.
- cell phone


Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance which can vary with the locations of the elephone base and handset, the weather, and the layout of your home or office. When the handset is out of range, the handset

displays Out of range or and no pwr at base alternatelv

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press A/HOME or ()/CELL. Move closer to the telephone base, and then press **A/HOME** or **//CELL** to answer the call. If the handset moves out of range during a telephone conversation, there may be nterference. To improve reception, move closer to the telephone base.

4. Connect the power adapter to the telephone base and an electrical outlet not controlled by a wall switch.

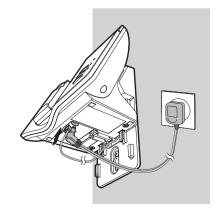

7 pqrs 8 tuv 9w Hone Ooper # REDIAL

Install and charge the battery

If the handset will not be used for a long time

disconnect and remove the battery to prevent

Install the battery as shown below.

4 shi 5 jki 6

vtech Abridged user's manual

Install the battery

possible leakage.

• Use only supplied battery.


ONOTES

2 Align the holes on the bracket with the standard wall plate and slide the bracke down until it clicks securely in place.

4 ghi 5 ik

X-tone Ooper


vtech

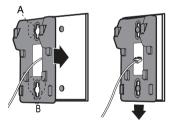


3. Align the grooves on the telephone base with the tabs on the wall mount bracket, and then slide it down until it clicks securely in place.





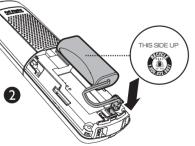

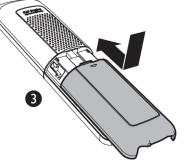

when charging.

will assist you with the basic setup of your answering system.

2. Setup your answering system by inputting the designated numbers as instructed in the voice guide.

Check for dial tone: Press **%/HOME**. If you hear a dial tone, the installation is successful. If you do not hear a dial tone:

- Make sure the installation procedures described above are properly done.
- It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/ VoIP service provider for more information.

Handset overview



1 – Handset earpiece

2 – LCD display

3 – MENU/SELECT Show the menu

· While in a menu, press to select an item, or save an entry or setting 4 - OFF/CANCEL

- Hang up a call
- Silence the ringer temporarily while the handset is ringing. Press and hold to erase the missed call indicator while the phone is not in use.
- · Press to return to the previous menu; or press and hold to return to idle mode, without making changes.
- Press repeatedly to show other dialing options when reviewing a caller ID log

Silence the ringer temporarily while the handset is ringing.

- To use a Bluetooth enabled cell phone or headset with your **DS6621**, you must first pair
- and connect your Bluetooth cell phone or headset with the telephone base.

Bluetooth wireless technology operates within a short range (a maximum of approximately 30 feet). When you pair a Bluetooth cell phone to the telephone base, place your Bluetooth cell phone closer to the telephone base to maintain sufficient signal strength.

For optimal performance, keep your cell phone within 15 feet of the telephone base while using

- Choose a slot to pair the cell phone. Press and hold 🚯 CELL 1 or
- B CELL 2/HEADSET on the telephone base until you hear a confirmation tone, and the SCELL 1 or SCELL 2/HEADSET
- Turn on the Bluetooth feature of your cell phone. Once your cell phone finds your VTech phone (VTech DS6621), press appropriate key on your cell phone to continue the pairing process.
- Your cell phone may prompt you to enter the PIN of the telephone base. The default PIN of the telephone base is **0000**.
- When the cell phone is connected to the elephone base, the corresponding status icon (1) or (1) displays. The corresponding device ight (S CELL 1 or CELL 2/HEADSET) turns on. If the pairing fails, turn off the Bluetooth feature on your cell phone and on the **DS6621** by pressing () CELL 1 or () CELL 2/HEADSET. Then repeat the steps above to pair and
- connect again. In some cases, it may take you a few attempts to complete the pairing process.

7 - REDIAL/PAUSE

· Press repeatedly to review the redial list. <u>Press and hold</u> to insert a dialing pause while entering a number.

8 - Microphone 9 – 📢

- · Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset
- 10-00
- Press to add a space when entering names

11 – Xtone

• While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

12 – 1 🔀

- Press repeatedly to add or remove 1 in front of the caller ID log entry before
- dialing or saving it to the phonebook. <u>Press and hold</u> to set or dial your
- voicemail number

_ €/HOME/FLASH

 Make or answer a home call. • Answer an incoming home call when you 2 - X/DELETE hear a call waiting alert.

14 – (•)/CELL

 Make or answer a cell call. Answer an incoming cell call when you hear a call waiting alert.

15 - VOLUME/~/

- Review the phonebook when the phone is not in use Increase the listening volume during a
- Scroll up while in a menu, or in the
- phonebook, caller ID log, or redial list. Move the cursor to the right when

entering numbers or names.

- VOLUME/~/CID Review the caller ID log when the phone is not in use.
- Decrease the listening volume during a
- Scroll down while in a menu, or in the phonebook, caller ID log, or redial list.
- Move the cursor to the left when entering numbers or names.
- 16 CHARGE light
- On when the handset is charging.

- Pair and connect your Bluetooth enabled headset 1. Press **MENU** on the phone when it is not in use.
- 2. Press \checkmark or \land to scroll to **Bluetooth**, and then press SELECT
- 3. Press v or v to scroll to Add BT headset, and then press SELECT. The screen displays Search headset..
- 4. Set your headset to discoverable mode. Once your handset finds your headset, press SELECT.
- Enter the PIN of your headset if required. The PIN for most Bluetooth devices is 0000 (refer to the user's manual of your headset), and then press **SELECT**. When the headset is successfully paired and
- connected to the telephone base, the 🚯, icon displays. The S CELL 2/HEADSET light turns on.

VTech Connect to Cell[™] application

This application helps you integrate your Android phones with your **DS6621**. For more information and application download, scan the QR code on the right, or go to http://www.vtechphones.com/app_connect_to_cel

Download contacts from your Bluetooth

- cell phone Press MENU when the phone is not in
- 2. Scroll to Bluetooth, and then press SELECT. 3. Scroll to Download PB, and then press
- SELECT.
- 4. Scroll to select the desired cell phone, and then press **SELECT**.

PNOTES

- For certain cell phones, you may need to press a key on your cell phone to confirm the phonebook download. The performance of phonebook download feature
- depends on the compatibility of your Bluetooth cell phone. Refer to the user's manual of your cell phone for more information about how that device uses Bluetooth connectivity.
- Certain cell phones do not support SIM card download. If this is the case, transfer the contacts from your SIM card to your cell phone memory firs Then download from your cell phone memory. For more information on how to transfer contacts from your SIM card to your cell phone memory, see the user's manual of your cell phone.
- For Android cell phones, you may also download your cell phone contacts to vour DS6621 via the VTech Contact Share application.
- Scan the QR code on the right, or
- www.vtechphones.com/apps/contact_share for application download

elephone base overview

8 – 🚯 CELL 1 and

CELL 2/HEADSET lights

9 – () CELL 1 and () CELL 2/HEADSET

discoverable mode.

tooth device

11 – J/FIND HANDSET

10 – 少/ANS ON

12 – IN USE light

is in use.

Charger overview

1 – Charging pole

ephone operation

Handset control key panel:

CELL

× M

(**4** ghi)

7 pqrs))

I

H

vtech

VOLUME

2 abc ||

 \square

)((**O** oper))

1_____

 \sim

SELECT

OFF

3 def

6 mna

#

MUTE

(8 tuv))((9wxyz

· On when the telephone base is paired

• Flashes when the telephone base is in

and connected with a Bluetooth device

• Press to connect the paired cell Bluetooth

Press and hold to add or replace a Blue-

Press to turn the answering system on or

Press to page all system handsets.

· On when the handset is in use, or the

answering system is answering a call.

Flashes when there is an incoming call, or

another telephone sharing the same line

ECO

VM

8

NFW

 Δ

ANS ON

1/25

Connect

Make a home call

Make a cell call

BNOTES

(•)/CELL to dial.

Answer a home/cell call

End a home/cell call

Speakerphone

Volume

to the base or charger.


volume setting are independent.

Microphone ON.

Call waiting

telephone number

CNOTES

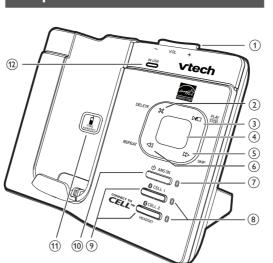

- 1 – /VOL/+
 - · Press to adjust the volume during message playback.
 - Press to adjust the telephone base ringer volume when the phone is not in use.
- Press to delete the playing message. When the phone is not in use, press twice to delete all previously reviewed mes-
- sages 3 – ▶/■/PLAY/STOP
- Press to play messages.
- Press to stop message playback.
- 4 Message window
- Shows the number of messages, and other information of the answering system or telephone base.
- 5 ►/SKIP Press to skip to the next message.
- 6 «/REPEAT
- Press to repeat a message Press twice to play the previous message.

7 – 小ANS ON light

• On when the answering system is on.

Jsing the handset menu

- 1. Press **MENU** when the phone is not in use. 2. Press \checkmark or \land until the screen displays the desired feature menu
- Press SELECT to enter that menu.
- To return to the previous menu, press CANCEL.
- To return to idle mode, press and hold CANCEL.

Configure your telephone

2. Scroll to Settings, and then press

Press SELECT to save.

SELECT twice.

Español

Set date and time

SELECT.

during a call.

Set language

The LCD language is preset to English. You can select English, French or Spanish to be used in all screen displays 1. Press MENU when the handset is not in use.

Scroll to choose English, Français or

Make sure you set the date and time including the

your recorded messages time stamp.

does not announce the correct day of the week for

1. Press **MENU** when the handset is not in use.

month (MM), date (DD) and year (YY).

4. Use the dialing keys (0-9) to enter the hour

If you have pulse (rotary) service only, you can

switch from pulse to tone dialing temporarily

2. Use the dialing keys to enter the relevant

dialing mode after you end the call.

number. The telephone sends touch-tone

signals. It automatically returns to pulse

(HH) and minute (MM). Then press \checkmark or \land

2. Scroll to **Set date/time**, and then press

3. Use the dialing keys (**0-9**) to enter the

Then press **SELECT**.

to choose AM or PM.

Press SELECT to save.

Temporary tone dialing

During a call, press ★ tone.

Display icons overview

within range from the telephone

provider

The battery icon flashes when the pattery is low and needs charging The battery icon animates when the battery is charging. The battery icon becomes solid

when the battery is fully charged. The ECO mode activates automatically to reduce power consumption when the handset is

There are new voicemail received from your telephone service

On when the home line is in use or there is an incoming home call. Flashes when there is an incoming home waiting call.

There are Bluetooth devices connected on the cell devices list On when the cell line is in use or there is an incoming cell call. -lashes when there is an ncoming cell waiting call.

There are new caller ID log

The answering system is turned

The handset ringer is off.

The message number currently playing and total number of new/old messages recorded.

You can choose to connect the telephone base for desktop usage or wall mounting.

· Use only the adapters provided.

· Even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see Bluetooth), and use the cell line alone without plugging in a telephone line cord.

Press **A/HOME** or **I**, and then dial the

 Enter the telephone number on the handset or base, and then press **A/HOME** or **I** to

 Press (•)/CELL on the handset or base. Enter the telephone number, and then press

• Enter the telephone number on the handset or base, and then press ()/CELLto dial.

 After first pressing ()/CELL, you may need to choose a cell device. Scroll to select the desired ce device when necessary, and then press SELECT. • While using the cell line, place your cell phone closer to the base, and make sure that there are no physical obstacles between the base and the cell phone, such as large furniture or thick walls.

Press A/HOME, (P)/CELL, I, or any dialing

Press **OFF** on the handset, or put the handse

 During a call, press on the handset to switch between speakerphone and normal handset


• During a call, press **//VOLUME/** on the handset to adjust the listening volume.

The handset earpiece volume setting and speakerphone

The mute function allows you to hear the other party but the other party cannot hear you. During a call, press MUTE on the handset or telephone base. The screen displays Muted. 2. Press **MUTE** again to resume the conversation. The screen displays

When you subscribe to call waiting service from your telephone service provider, you hear an


If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone e, make sure you install a DSL filter (not included) between the telephone line cord and telephone wall jack. Contact your DSL service provider for more information.

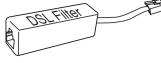

Connect the telephone base




Connect the charge

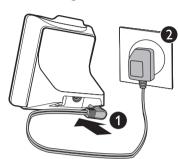

Mount the telephone base

Route the telephone line cord through the rectangular hole on the wall mount bracket. Then plug the two ends of the telephone line cord into the telephone base and the wall outlet as shown.

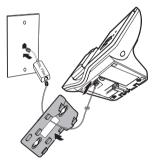

alert tone if there is an incoming call while you are on another call.

- Call waiting on the home line:
- Press FLASH to put the current call on hold
- and take the new call. Press FLASH to switch back and forth between calls

Call waiting on the cell line:

- Press (•)/CELL 1 or (•)/CELL 2, to put the current call on hold and take the new call
- Press (•)/CELL 1 or (•)/CELL 2 to switch
- back and forth between calls

Find handset

Use this feature to find all system handsets. To start paging

- Press FIND HANDSET on the telephone base. All idle handsets ring and display Paging **
- To end paging
- Press //FIND HANDSET again on the telephone base.
- Press [♠]/HOME, ⁽)/CELL, [■], CANCEL, or any dialing key on the handset. -OR
- Place the handset in the telephone base or charger.

Do not press and hold **FIND HANDSET** for more than four seconds. It may lead to handset deregistration.

Join a call in progress

You can use up to two system handsets at a time on a home line call. You can buy additional expansion handsets (DS6600) for this telephone base. You can register up to five handsets to the telephone base.

- When a handset is on a home call, press **⁽**/HOME or **(** on another handset to join the
- Press **OFF** to exit the call. The call continues until all handsets hang up.

Intercom

Use the intercom features for conversations between two devices.

- 1. Press MENU on your handset when not in
- 2. Press \checkmark or \land to scroll to **Intercom**, and then press **SELECT**. Use the dialing keys to enter a destination device number.

- 3. To answer the intercom call, press A/HOME, Dial a redial list entry (•)/CELL, I, or any dialing key on the destination handse
- 4. To end the intercom call, press OFF or place Delete a redial list entry the handset back in the telephone base or charger.

Transfer a call

While on an outside call, you can use the intercom feature to transfer the call from one handset to another

- 1. Press MENU on your handset during a call. 2. Press \checkmark or \land to scroll to **Intercom**, and then press **SELECT**. The current call is put on hold. Use the dialing keys to enter a destination device number
- 3. To answer the intercom call, press **A/HOME**, (P)/CELL, I, or any dialing key on the destination handset. You can now have a private conservation before transferring the
- 4. To transfer the call, press **OFF** on the initiating handset or place the initiating handset back in the telephone base or charger
- 5. To end the call, press **OFF** on the destination handset or place the destination handset back in the telephone base or charger.

Answer an incoming call during an intercom call

If you receive an incoming call during an

- intercom call, there is an alert tone • To answer a home call, press **A/HOME**. The intercom call ends automatically
- To end the intercom call without answering the outside call, press OFF. The intercom call ends and the telephone continues to ring.
- To answer a cell call, press **OFF** to end the intercom call. The telephone continues to ring. Then press (P)/CELL.

Redial list

Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry

Review the redial list

1. Press **REDIAL** when the handset is not in use. 3. 2. Press \checkmark , \checkmark , or **REDIAL** repeatedly until the desired entry displays.

Delete all old messages at the telephone base

To delete all old messages at the telephone

Press X/DELETE twice when the phone is not in use

To delete all old messages on a handset:

- 1. Press **MENU** when the phone is not in use. 2. Scroll to Answering sys, and then press SELECT.
- 3. Scroll to **Delete all old**, and then press **SELECT** twice. You hear a confirmation tone.

Remote access

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is 19. You can use this preset code, or set your own.

- 1. Dial your telephone number from any
- touch-tone telephone. 2. When the system plays your announcement,
- enter the two-digit security code. 3. You can enter one of the following remote commands.

Command	Description
1	Play all messages.
2	Play new messages.
3	Delete the current message (during playback).
33	Delete all old messages.
4	Repeat the current message (during playback).
5	Stop.
*5	Hear a list of remote commands.
6	Skip to the next message (during playback).
*7	Record a new announcement.
8	End the call.
0	Turn the answering system on or off.

4. Hang up or press 8 to end the call.

Press ^A/HOME, ⁽ⁿ⁾/CELL, or ^{II} to dial.

When the desired redial entry displays, press DELETE.

Phonebook

The phonebook can store up to 1000 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters

Add a phonebook entry

- Press MENU when the phone is not in use
- Scroll to **Phonebook** then press **SELECT**. Press SELECT again to choose Add new entry.
- 4. Enter the number
- Use the dialing keys to enter the number (up to 30 digits) Press **SELECT** to move to the name.
- 6. Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.

7. Press SELECT to save.

While entering numbers and names, you

- Press DELETE to erase a digit or character. Press and hold DELETE to erase the entire
- entry. Press ▼ or ▲ to move the cursor to the left
- or right Press and hold PAUSE to insert a dialing pause (for entering phone numbers only).
- Press **0** to add a space (for entering names
- Press * to add * (F appears) or # to add # (appears) (for entering phone numbers only)

Review the phonebook

- Entries are sorted alphabetically
- Press 🖾 when the phone is not in use Scroll to browse through the phonebook, or 2 use the dialing keys to start a name search (you can enter up to
- 3 characters for the search). When the desired entry appears, press TALK or 📢 to dial.

Remote access code

A two-digit security code is required to access the answering system remotely from any touchtone telephone. The preset code is **19**. You can set the code from **00** to **99**.

- Press **MENU** when the phone is not in use.
- 2. Scroll to Answering sys then press SELECT. 3. Scroll to **Ans sys setup** then press **SELECT**.
- 4. Scroll to **Remote code**, and then press
- SELECT. 5. Use the dialing keys to enter a two-digit number.
- Scroll to a desired two-digit number.
- 6. Press **SELECT** to save and you hear a confirmation tone.

se the built-in answering system ind voicemail service

You can use your answering system and voicemail service together by setting your answering system to answer before voicemai service answers as described below. To learn how to program your voicemail settings, contact your telephone service provider.

If you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a

oicemail messade Set your answering system to answer calls at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, set your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

Retrieve voicemail from phone service

Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional. Fees may apply.

Retrieve voicemail

When you received a voicemail, the handset displays and **New voicemail**. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

Delete a phonebook entry

- 1. When the desired entry displays, press DELETE.
- 2. When the screen displays Delete entry?, press SELECT.

Delete all phonebook entries:

. Press MENU when the phone is not in use.

Save a caller ID log entry to the

displays, press SELECT.

and then press SELECT.

Delete a caller ID log entry

Delete all caller ID log entries

press DELETE.

SELECT twice.

certain undesired calls.

then press SELECT.

Call block

SELECT.

SELECT.

5. Enter the number.

(up to 30 digits).

8. Press SELECT to save

Cleaning your telephone

cleaning solvents of any kind.

. When the desired caller ID log entry

2. Scroll to To Phonebook then press

3. Use the dialing keys to modify the number,

· When the desired caller ID log entry displays,

use. Scroll to Caller ID log and then press

SELECT. Scroll to Delete all and then press

4. Use the dialing keys to modify the name,

and then press SELECT to save.

• Press **MENU** when the phone is not in

If you subscribe to caller ID service, you can

3. Scroll to Calls w/o num, and then press

4. Scroll to choose Not block or Block, and

1. Press MENU when the phone is not in use.

4. Scroll to Add new entry, and then press

6. Press SELECT to move to the name.

other characters of that particular key.

Scroll to Call block, and then press SELECT

3. Scroll to Block list, and then press SELECT.

Use the dialing keys to enter the number

Use the dialing keys to enter the name (up to

15 characters). Additional key presses show

Your telephone has a durable plastic casing that should

The following are the guestions most frequently asked

about the cordless telephone. If you cannot find the

www.vtechphones.com or call 1 (800) 595-9511 for

Make sure the telephone base is

installed properly, and battery is

installed and charged correctly.

For optimum daily performance,

return the handset to the

elephone base after use

Disconnect the telephone line

cord from your telephone and

If there is no dial tone on that

other telephone either, then

the telephone line cord may be

defective. Try installing a new

If changing telephone line cord

does not help, the wall lack

telephone service provider.

(or the wiring to this wall jack)

may be defective. Contact your

You may be using a new cable

or VoIP service, the existing

telephone jacks in your home

may no longer work. Contact

The handset is deregistered from

Registered and you hear a beep

completes. This process takes

about 90 seconds to complete.

your service provider for

Place the handset in the

telephone base to register

it back. The handset shows

the telephone base.

solutions.

handset does not when the registration process

telephone line cord.

connect it to another telephone

www.vtechcanada.com or call 1 (800) 267-7377

retain its luster for many years. Clean it only with a

Frequently asked questions

answer to your question, visit our website at

customer service. In Canada, go to

My telephone

The display

dial tone.

The display

register HS...

alternately. The

shows To

and ...see

work at all.

manual

shows No line.

cannot hear the

at all.

loes not work

dry non-abrasive cloth. Do not use dampened cloth or

set the telephone to block unknown calls and

phonebook

SELECT

- Scroll to **Phonebook**, and then press **SELECT**. Scroll to **Delete all**, and then press **SELECT**
- 4. When the screen displays **Delete all?**, press
- SELECT.

Edit a phonebook entry

- 1. When the desired entry displays, press SELECT Use the dialing keys to edit the number, and
- then press SELECT. 3. Use the dialing keys to edit the name, and then press SELECT to save.

Dial a phonebook entry

• When the desired entry appears, press TALK or I to dial.

Caller ID

The call block list stores up to 20 entries. If you subscribe to caller ID service, information Block unknown calls about each caller appears after the first or Press MENU when the phone is not in use. second ring. If you answer a call before the caller information appears on the screen, it will not be Scroll to Call block, and then press SELECT

saved in the caller ID log The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the telephone number has more that 15 digits, only the last 15 digits appear. If the name has more Add a call block list entry than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry

- 1. Press **CID** when the phone is not in use. 2. Scroll to browse through the caller ID log.
- When the desired entry appears: Press # repeatedly to show different
- dialing options. Press 1 repeatedly if you need to add or
- remove 1 in front of the phone number. 3. Press TALK or I to dial the displayed number.

Dial a caller ID log entry • When the desired entry appears, press

SELECT.

ECO mode

TALK or I to dial

Turn off the new voicemail indicators

If you have retrieved your voicemail while away from home, and the handset still displays the new voicemail indicators, use this feature to turn off the indicators RNOTE

This feature turns off the indicators only, it does not delete your voicemail messages

- 1. Press MENU when the handset is not in use
- 2. Scroll to Settings, and then press SELECT.
- 3. Scroll to **Clr voicemail**, and then press

You can add new handsets (DS6600), cordless

telephone system. Visit www.vtechphones.com

for a list of compatible devices. Your telephone

For more details, refer to the user's manual that

comes with your **DS6600** new handset, cordless

headsets or speakerphones to your telephone

Expand your telephone system

system (purchased separately) to your

base supports a maximum of five devices.

headset or speakerphone respectively.

This power conserving technology reduces power

Your cordless telephone contains sophisticated

electronic parts, so it must be treated with care.

Place the handset down gently. Save the original

packing materials to protect your telephone if you ever

Your telephone can be damaged if it gets wet. Do not

use the handset outdoors in the rain, or handle it with

wet hands. Do not install the telephone base near a

Electrical storms can sometimes cause power surges

caution when using electrical appliances during storms.

harmful to electronic equipment. For your own safety, take

synchronized with the telephone base.

General product care

Taking care of your telephone

Avoid rough treatment

sink, bathtub or shower.

Electrical storms

need to ship it.

Avoid water

consumption for optimal battery performance. The ECO

mode activates automatically whenever the handset is

Review call block list

1. Press **MENU** when the phone is not in use. 2. Scroll to Call block, and then press SELECT

Ringer volume (handset)

volume, and then

press SELECT.

SELECT to save.

telephone base when idle.

Temporary ringer silencing

normally at the preset volume

bicemail service

fee may apply).

follows

orage

handset displays Δ .

the ringer off

You can adjust the ringer volume level, or turn

3. Scroll to choose **Home volume** or **Cell**

If the handset ringer volume is set to off, that handset

is silenced for all incoming calls except paging tone.

Ringer volume (telephone base)

When the telephone is ringing, you can

You can adjust the telephone base volume

level by pressing - /VOL/+ on the top of the

temporarily silence the ringer of the handset

• Press OFF or MUTE on the handset. The

About answering system and

For message recording, your telephone has a

built-in answering system, and it also support

service provider (subscription is required, and

one serv

essages are

ored in a serve

r system provide

y your telephon

our messages

eleted after a

ervice.

av be

details.

utomatically

period of time.

ontact your

telephone service

provider for more

voicemail service offered by your telephone

The main differences between them are as

systen

ssages are

elephone base

Your messages

automatically.

your messages

manually.

will not be deleted

You have to delete

tored in the

without disconnecting the call. The next call rings

3. Scroll to **Block list**, and then press SELECT

Press SELECT to choose Review.

Edit a call block list entry

When the desired entry displays, press SELECT. 2. Use the dialing keys to edit the number, and

then press SELECT. Use the dialing keys to edit the name, and then press **SELECT** to save.

Save a caller ID log entry to call block list When the desired caller ID log entry

displays, press **SELECT**. Scroll to **To Call block** then press **SELECT**. Use the dialing keys to modify the number, and then press SELECT.

Use the dialing keys to modify the name, and then press SELECT to save.

Delete a call block list entry

 When the desired call block list entry displays, press **DELETE**.

Sound settings

Key tone

ONOTE

tone samples

the correct day

messages time

of the week

for recorded

stamp.

You can choose from different ringer tones. Press MENU when the handset is not in use. Scroll to **Settings**, and then press **SELECT**. Scroll to choose **Key tone**, and then press SELECT

Scroll to choose **On** or **Off**, and then press SELECT to save

Ringer tone

You can choose from different ringer tones. Press MENU when the handset is not in use. Scroll to **Ringers**, and then press **SELECT**. Scroll to choose Home ringtone or Cell ringtone, and then press SELECT.

Scroll to sample each ringer tone, and then press **SELECT** to save.

If you turn off the ringer volume, you will not hear ringer

I cannot add and connect my cell phone or headset to the telephone base.	Make sure you have cellular coverage and the Bluetooth function of your cell phone or headset is turned on. See the user's manual of your cell phone or headset for more information.	
	Make sure that the telephone base is in discoverable mode.	
	Carefully follow the pairing instructions in this manual. Make sure that your Bluetooth cell phone or headset is not connected to any other Bluetooth device, and is connected to the telephone base and active on the device list.	
	Turn off your cell phone or headset, and then turn it on again.	
The cell phone reception in my house is poor and I cannot connect it to my DS6621.	If there is a location in your house with better reception, you can leave your cell phone at that location while you use the DS6621 cell line. In order for this to work, the telephone base must be within 30 feet of the cell phone.	
The answering system does not record messages.	Make sure the answering system is on. When the answering system is on, ANS ON should display on the handset and the telephone base.	
	When the answering machine memory is full, it does not record new messages until some old messages are deleted.	
	If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail service answers. To determine how many rings activate your voicemail service, contact your telephone service provider.	
The answering system does not announce	Make sure you have set the date and time. See Configure your telephone section.	

The messages on the answering system are incomplete.	If a caller leaves a very long message, part of it may be lost when the answering system disconnects the call after the preset recording time.
	If the memory on the answering system becomes full during a message, the answering system stops recording and disconnects the call.
I accidentally set my LCD language to Spanish or French, and I don't know how to change it back to English.	While the handset is not in use, press MENU and then enter *364 # to change the handset LCD language back to English.

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. It we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expec the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

When you received When you receive Method new messages, new messages. o retrieve handset displays the handset essages XX new messages displays M and Press MENU when the handset is not in use and the message New voicemail Scroll to Ringers, and then press SELECT. window on the telephone base flashes. To retrieve To retrieve 4. Scroll to adjust the volume, and then press nessages, usually essages, you there are two ways need an access number and/or a Press a button sscode provide on the telephone

base; or

code.

Access remotely

with an access

Telephone ba	ase control ke	ey panel:
	+ vtecl	n
) 0) 0) 0

by your telephone

service provider

Set your built-in answering system

Your answering system has various features, read below for the basic settings.

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 23 minutes. The actual recording time depends on individual message characteristics.

Your answering system allows you to set your announcement, to save and delete messages, activate call screening, to set number of rings before pick up, to access remotely, and to control the recording time

Turn the answering system on or off The answering system must be turned on to answer and record messages

To turn on or off with the telephone base:

- Press U/ANS ON on the telephone base to turn the built-in answering system on or off.
- To turn on or off with the handset
- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to highlight **Answering sys**, and then press SELECT.
- 3. Scroll to highlight **Answer on/off**, and then press SELECT.
- 4. Scroll to highlight **On** or **Off**, and then press **SELECT** to save. You hear a confirmation tone.

Default announcement

The telephone is preset with a greeting that answers calls with "Hello, please leave a message after the tone." You can use this preset announcement, or replace it with your own.

Record your own announcement

The announcement can be up to 90 seconds in

- length. 1. Press **MENU** when the phone is not in use. 2. Scroll to **Answering sys** and then press
- SELECT twice. 3. The handset announces, "Announcement, press play or press record."
- Press 7 to record. The handset announces "Record after the tone. Press STOP when you are done." After the tone, speak towards the handset microphone. Then, press 5 when done.

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. mitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential or similar damages (including, but not limited to los profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or

Please retain your original sales receipt as proof of purchase

exclusion may not apply to you.

Technic	al specification		
ransmit equency	DECT frequency: 1921.536-1928.448 M Bluetooth frequency: 2402.000-2480.000 M		
Channels	DECT: 5 Bluetooth: 79		
lominal ffective ange	Maximum power allow IC. Actual operating r according to environr the time of use.		
Power equirements	Handset: 2.4V Ni-MH Telephone base: 6V Charger: 6V AC @ 3		
lemory	Phonebook: 1000 memory locatio between home and c 30 digits and 15 char Caller ID log:		

15 characters

The *Bluetooth[®]* word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG. Inc. Other trademarks and trade names are those of their respective owners.



Specifications are subject to change without notice. © 2014 for VTech Communications, Inc. All rights reserved. 09/14. DS6621_ACIB_V6.0 Document order number: 91-007312-060-100

What is not covered by this limited warranty? This limited warranty does not cove Product that has been subjected to misuse

·----

- accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other iquid intrusion; or
- Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
- Product to the extent that the problem experienced is caused by signal conditions, network reliability. or cable or antenna systems; or
- 4. Product to the extent that the problem is caused by use with non-VTech accessories; or Product whose warranty/quality stickers, product
- serial number plates or electronic serial numbers have been removed, altered or rendered illegible; o
- Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- 7. Product returned without a valid proof of purchase (see item 2 on the next page); or
- Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service? NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty. or proof of purchase does not meet the terms of this limited warranty. VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service?

- 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
- Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
- Provide your name, complete and correct mailing address, and telephone number.

Other limitation

Press MENU when the phone is not in use. 2. Scroll to **Answering sys** and then press

3. The handset announces, "Announcement

press play or press record." 4. Press 2 to play the announcement.

Play the announcement

Delete the announcement

SELECT twice.

announcement.

Set number of rings

confirmation tone

confirmation tone.

Message alert tone

SELECT twice.

1. Press **MENU** when the phone is not in use. Scroll to **Answering sys** and then press

The handset announces, "Announcement, press play or press record."

4. Press 3 to delete your own recorded

You can set the answering system to answer an incoming call after 2. 3. 4. 5 or 6 rings; or toll saver. If vou choose toll saver, the answering system answers a call after 2 rings when you have new messages, or after 4 rings when you have no new messages. 1. Press **MENU** when the phone is not in use. 2. Scroll to Answering sys then press SELECT Scroll to Ans sys setup then press SELECT Scroll to # of rings then press SELECT. Scroll to choose 2, 3, 4, 5, 6 or Toll saver 6. Press **SELECT** to save and you hear a

When the message alert tone is set to on, and there is at least one new message, the telephone base beeps every 10 seconds. The message alert tone is preset to off.

 Press MENU when the phone is not in use. 2. Scroll to Answering sys then press SELECT. 3. Scroll to **Ans sys setup** then press **SELECT**. 4. Scroll to **Msg alert tone** then press **SELECT**. Scroll to choose On or Off.

6. Press SELECT to save and you hear a

Voice guide

This feature is an alternative way for you to do the basic setup of the answering system. You can follow the voice guide to record you own announcement, set the number of rings and the message alert tone.

1. Press **MENU** when the phone is not in use. 2. Scroll to scroll to Answering sys, and then

- press SELECT. 3. Scroll to highlight **Voice guide**, and then press SELECT. You hear the voice prompt
- lello! This voice guide will assist you with the basic setup of your answering system. 4. Setup your answering system by inputting
- designated numbers as instructed in the voice guide.

Use your built-in answering system

New message indication

When there are new answering system messages, The handset displays XX new messages and the message window on the telephone base flashes.

Message playback

To playback messages at the telephone base Press ▶/■/PLAY when the phone is not in use.

- Options during playback: Press — /VOL/+ to adjust the speaker volume
- Press >/SKIP to skip to the next message.
- Press **«/REPEAT** to repeat the message currently playing. Press **«/REPEAT** twice to listen to the previous message.
- Press X/DELETE to delete the playing message. The system advances to the next message
- Press ▶/■/STOP to stop.
- To playback messages at the handset: Press MENU to choose Play messages Press SELECT
- **Options during playback:**
- Press VOLUME/~ or VOLUME/~ to adjust the message playback volume.
- Press 6 to skip to the next message
- Press 4 to repeat the message. Press 4 during the time and day announcement to hear the previous message.
- Press 3 to delete the playing message.
- Press OFF to stop the playback
- Press I to switch between speakerphone mode and handset mode.

owed by FCC and range may vary ment conditions at

H battery ' DC @ 400mA 300mA

ons (shared cell lines); up to racters

50 memory locations; up to 24 digits and

