

Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news.

DS6621-2
DS6621-3
DS6621-4

DECT 6.0 cordless telephone with
BLUETOOTH® wireless technology



vtech

Abridged user's manual

Congratulations

on purchasing your new VTech product. Before using this product, please read **important safety instructions**.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

Please refer to the online Complete user's manual for a full set of installation and operation instructions at www.vtechphones.com.



 
 
Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.




The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

What's in the box


Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

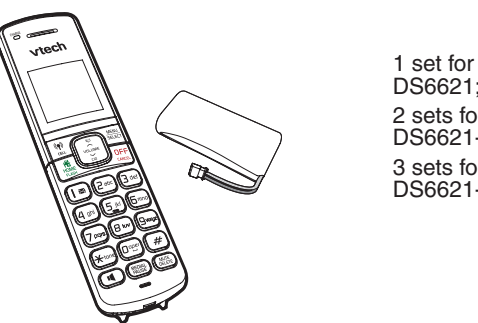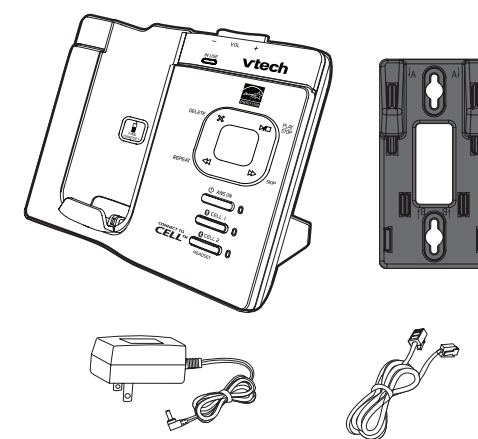

 
1 set for DS6621;
2 sets for DS6621-2;
3 sets for DS6621-3

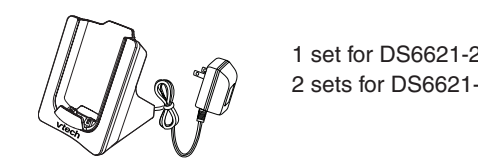

1 set for DS6621-2;
2 sets for DS6621-3

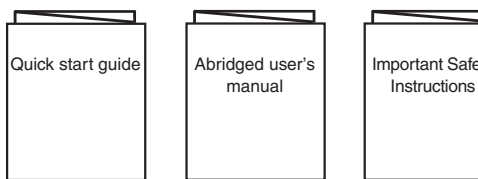 

Handset overview

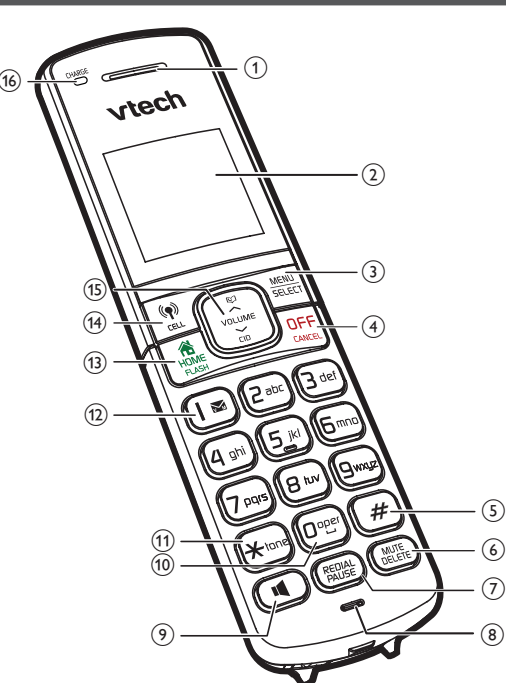 

- 1 – Handset earpiece**
- 2 – LCD display**
- 3 – MENU/SELECT**
 - Show the menu.
 - While in a menu, press to select an item, or save an entry or setting.
- 4 – OFF/CANCEL**
 - Hang up a call.
 - Silence the ringer temporarily while the handset is ringing.
 - Press and hold to erase the missed call indicator while the phone is not in use.
 - Press to return to the previous menu; or press and hold to return to idle mode, without making changes.
- 5 – #**
 - Press repeatedly to show other dialing options when reviewing a caller ID log entry.
- 6 – MUTE/DELETE**
 - Mute the microphone during a call.
 - Delete digits or characters while using the dialing keys.
 - Silence the ringer temporarily while the handset is ringing.

7 – REDIAL/PAUSE

- Press repeatedly to review the redial list.
- Press and hold to insert a dialing pause while entering a number.

8 – Microphone

- Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset.

9 –

- Press to add a space when entering names.
- While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

10 –

- Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the phonebook.
- Press and hold to set or dial your voicemail number.

13 –

- Make or answer a home call.
- Answer an incoming home call when you hear a call waiting alert.

14 –

- Make or answer a cell call.
- Answer an incoming cell call when you hear a call waiting alert.

 
15 –

- Review the phonebook when the phone is not in use.
- Increase the listening volume during a call.
- Scroll up while in a menu, or in the phonebook, caller ID log, or redial list.
- Move the cursor to the right when entering numbers or names.
- Review the caller ID log when the phone is not in use.
- Decrease the listening volume during a call.
- Scroll down while in a menu, or in the phonebook, caller ID log, or redial list.
- Move the cursor to the left when entering numbers or names.

16 – CHARGE light

- On when the handset is charging.

Telephone base overview

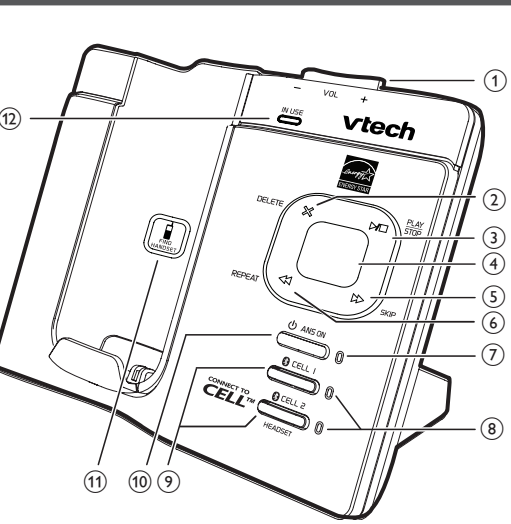

1 –

- Press to adjust the volume during message playback.
- Press to adjust the telephone base ringer volume when the phone is not in use.

2 –

- Press to delete the playing message.
- When the phone is not in use, press twice to delete all previously reviewed messages.

3 –

- Press to play messages.
- Press to stop message playback.

4 – Message window

- Shows the number of messages, and other information of the answering system or telephone base.

5 –

- Press to skip to the next message.

6 –

- Press to repeat a message.
- Press twice to play the previous message.

7 –

- On when the answering system is on.

8 – CELL 1 and CELL 2/HEADSET lights

- On when the telephone base is paired and connected with a Bluetooth device
- Flashes when the telephone base is in discoverable mode.

9 –

- Press to connect the paired cell Bluetooth device.
- Press and hold to add or replace a Bluetooth device.

10 –

- Press to turn the answering system on or off.

 
11 –

- Press to page all system handsets.

12 –


- On when the handset is in use, or the answering system is answering a call.
- Flashes when there is an incoming call, or another telephone sharing the same line is in use.

Charger overview

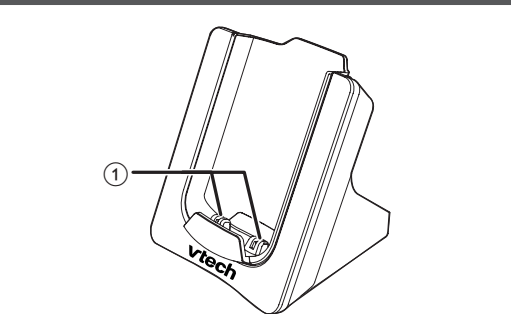


1 – Charging pole

 
- Align the holes on the bracket with the standard wall plate and slide the bracket down until it clicks securely in place.

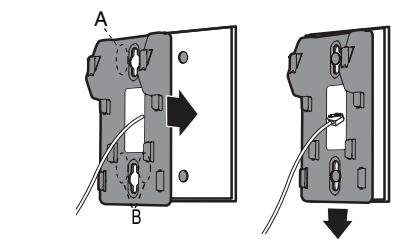

 - Align the grooves on the telephone base with the tabs on the wall mount bracket, and then slide it down until it clicks securely in place.

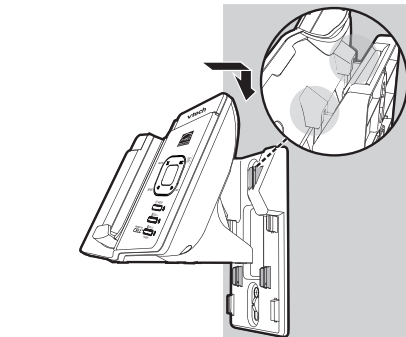

 - Connect the power adapter to the telephone base and an electrical outlet not controlled by a wall switch.

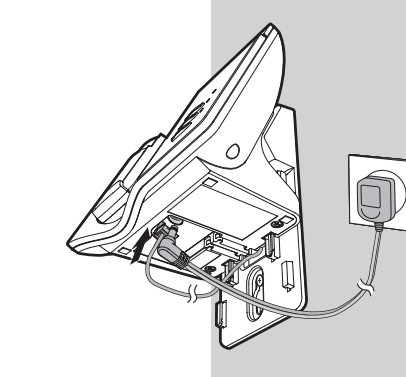




Install and charge the battery

Install the battery

Install the battery as shown below.


NOTES

   - Use only supplied battery.
- If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

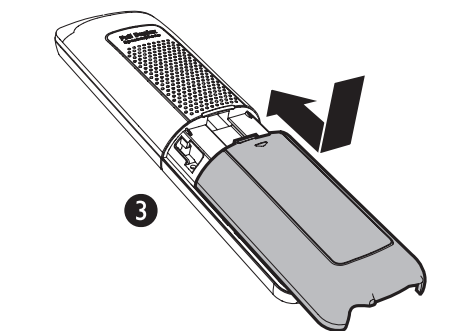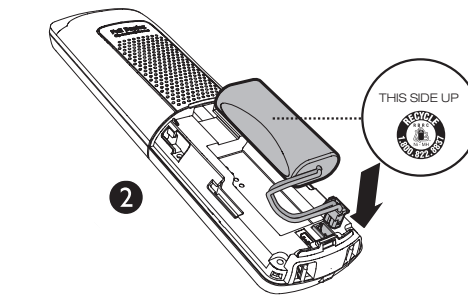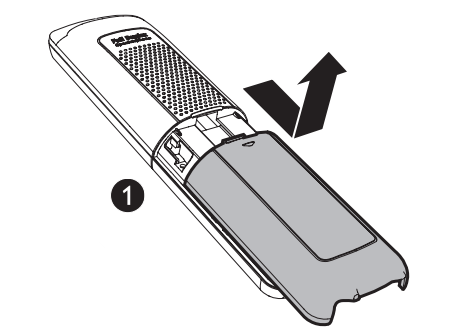

Charge the battery

 Place the handset in the telephone base or the charger to charge.

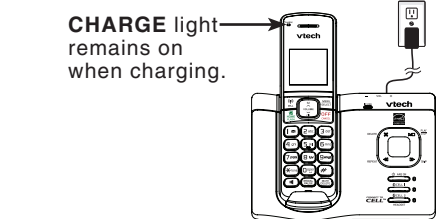

Once you have installed the battery, the handset LCD display indicates the battery status (see the table below).

NOTES

- For best performance, keep the handset in the telephone base or charger when not in use.
- The battery is fully charged after 12 hours of continuous charging.

Battery indicators	Battery status	Action
The screen is blank, or shows Put in charger and flashes .	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
The screen shows Low battery and flashes .	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
The screen shows HANDSET X .	The battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.

Before use

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time, and the answering system through voice guide.

Set date and time

NOTES

- Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.

- Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.

- Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **or** to choose **AM** or **PM**.
- Press **SELECT** to save.

After the setting for the date and time, the handset will display **Voice guide to...** and **set up Ans sys?** alternatively.

Set answering system through voice guide

This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

- Press **SELECT** to start the voice guide for the answering system setup. You hear the voice prompt "Hello! This voice guide will assist you with the basic setup of your answering system."
- Setup your answering system by inputting the designated numbers as instructed in the voice guide.

Check for dial tone:

Press **HOME**. If you hear a dial tone, the installation is successful.

If you do not hear a dial tone:

- Make sure the installation procedures described above are properly done.
- It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information.

Operating range

 
This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays **Out of range** or **no pwr at base** alternately.

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press **HOME** or **CELL**. Move closer to the telephone base, and then press **HOME** or **CELL** to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

Bluetooth

To use a Bluetooth enabled cell phone or headset with your **DS6621**, you must first pair and connect your Bluetooth cell phone or headset with the telephone base.

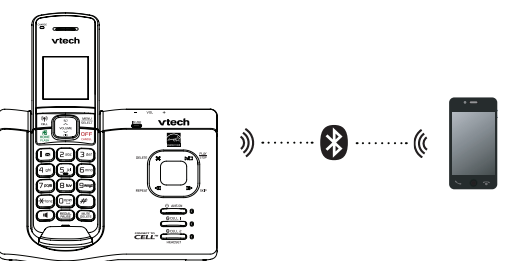

Bluetooth wireless technology operates within a short range (a maximum of approximately 30 feet). When you pair a Bluetooth cell phone to the telephone base, place your Bluetooth cell phone closer to the telephone base to maintain sufficient signal strength.

NOTE

For optimal performance, keep your cell phone within 15 feet of the telephone base while using the cell line.

Pair and connect your Bluetooth enabled cell phone

- Choose a slot to pair the cell phone. Press and hold **CELL 1** or **CELL 2/HEADSET** on the telephone base until you hear a confirmation tone, and the **CELL 1** or **CELL 2/HEADSET** light flashes.
- Turn on the Bluetooth feature of your cell phone. Once your cell phone finds your VTech phone (**VTech DS6621**), press appropriate key on your cell phone to continue the pairing process.
 - Your cell phone may prompt you to enter the PIN of the telephone base. The default PIN of the telephone base is **0000**.

When the cell phone is connected to the telephone base, the corresponding status icon **1** or **2** displays. The corresponding device light **CELL 1** or **CELL 2/HEADSET** turns on.

If the pairing fails, turn off the Bluetooth feature on your cell phone and on the **DS6621** by pressing **CELL 1** or **CELL 2/HEADSET**. Then repeat the steps above to pair and connect again. In some cases, it may take you a few attempts to complete the pairing process.

Pair and connect your Bluetooth enabled headset

- Press **MENU** on the phone when it is not in use.
- Press **or** to scroll to **Bluetooth**, and then press **SELECT**.
- Press **or** to scroll to **Add BT headset**, and then press **SELECT**. The screen displays **Search headset...**
- Set your headset to discoverable mode. Once your headset finds your headset, press **SELECT**.
 - Enter the PIN of your headset if required. The PIN for most Bluetooth devices is **0000** (refer to the user's manual of your headset), and then press **SELECT**.

When the headset is successfully paired and connected to the telephone base, the **1** icon displays. The **CELL 2/HEADSET** light turns on.

VTech Connection to Cell™ application

This application helps you integrate your Android phones with your **DS6621**. For more information and application download, scan the QR code on the right, or go to http://www.vtechphones.com/app_connect_to_cell.

Download contacts from your Bluetooth cell phone

- Press **MENU** when the phone is not in use.
- Scroll to **Bluetooth**, and then press **SELECT**.
- Scroll to **Download PB**, and then press **SELECT**.
- Scroll to select the desired cell phone, and then press **SELECT**.

NOTES

- For certain cell phones, you may need to press a key on your cell phone to confirm the phonebook download.
- The performance of phonebook download feature depends on the compatibility of your Bluetooth cell phone. Refer to the user's manual of your cell phone for more information about how that device uses Bluetooth connectivity.
- Certain cell phones do not support SIM card download. If this is the case, transfer the contacts from your SIM card to your cell phone memory first. Then download from your cell phone memory. For more information on how to transfer contacts from your SIM card to your cell phone memory, see the user's manual of your cell phone.
- For Android cell phones, you may also download your cell phone contacts to your **DS6621** via the VTech Contact Share application. Scan the QR code on the right, or go to www.vtechphones.com/apps/contact_share for application download.

Using the handset menu

- Press **MENU** when the phone is not in use.
- Press **or** until the screen displays the desired feature menu.
- Press **SELECT** to enter that menu.
- To return to the previous menu, press **CANCEL**.
- To return to idle mode, press and hold **CANCEL**.

Configure your telephone

Set language

The LCD language is preset to English. You can select English, French or Spanish to be used in all screen displays.

- Press **MENU** when the handset is not in use.
- Scroll to **Settings**, and then press **SELECT** twice.
- Scroll to choose **English, Français** or **Español**.
- Press **SELECT** to save.

Set date and time

NOTE

- Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.

- Press **MENU** when the handset is not in use.
- Scroll to **Set date/time**, and then press **SELECT**.
- Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
- Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **or** to choose **AM** or **PM**.
- Press **SELECT** to save.

 
Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily during a call.

- During a call, press **tone**.
- Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

Telephone operation

Handset control key panel:

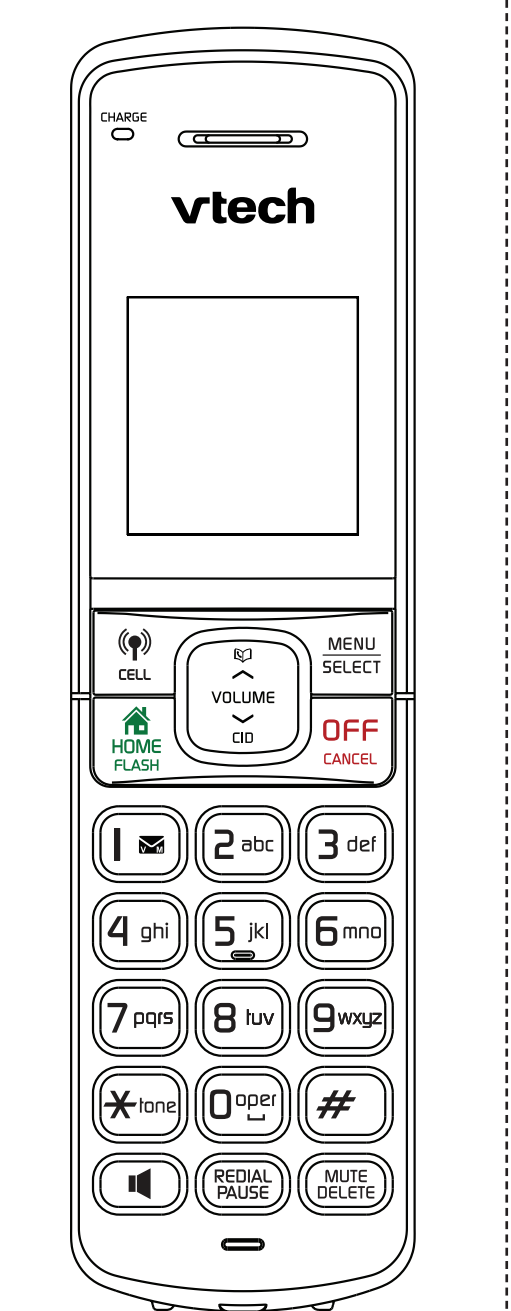

Make a home call

- Press **HOME** or **1**, and then dial the telephone number.

-OR-

- Enter the telephone number on the handset or base, and then press **HOME** or **1** to dial.

Make a cell call

- Press **CELL** on the handset or base. Enter the telephone number, and then press **CELL** to dial.

-OR-

- Enter the telephone number on the handset or base, and then press **CELL** to dial.

NOTES

- After first pressing **CELL**, you may need to choose a cell device. Scroll to select the desired cell device when necessary, and then press **SELECT**.
- While using the cell line, place your cell phone closer to the base, and make sure that there are no physical obstacles between the base and the cell phone, such as large furniture or thick walls.

Answer a home/cell call

- Press **HOME**, **CELL**, **1**, or any dialing key.

End a home/cell call

- Press **OFF** on the handset, or put the handset to the base or charger.

Speakerphone

- During a call, press **1** on the handset to switch between speakerphone and normal handset use.

Volume

- During a call, press **VOLUME** on the handset to adjust the listening volume.

NOTE

The handset earpiece volume setting and speakerphone volume setting are independent.

Mute

The mute function allows you to hear the other party but the other party cannot hear you.

- During a call, press **MUTE** on the handset or telephone base. The screen displays **Muted**.
- Press **MUTE** again to resume the conversation. The screen displays **Microphone ON**.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an

Display icons overview

	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.
	There are new voicemail received from your telephone service provider.
	On when the home line is in use or there is an incoming home call. Flashes when there is an incoming home waiting call.
	There are Bluetooth devices connected on the cell devices list.
	On when the cell line is in use or there is an incoming cell call. Flashes when there is an incoming cell waiting call.
	There are new caller ID log entries.
	The answering system is turned on.
	The handset ringer is off.
	The message number currently playing and total number of new/old messages recorded.

Connect

 
You can choose to connect the telephone base for desktop usage or wall mounting.

NOTES


- Use only the adapters provided.
- Even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see **Bluetooth**), and use the cell line alone without plugging in a telephone line cord.

TIP


- If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a **DSL filter** (not included) between the telephone line cord and telephone wall jack. Contact your DSL service provider for more information.

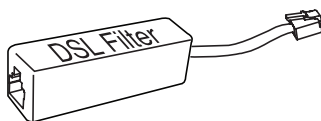

Connect the telephone base

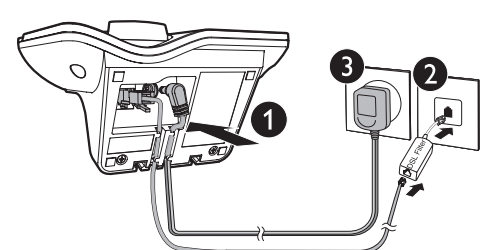 


Connect the charger

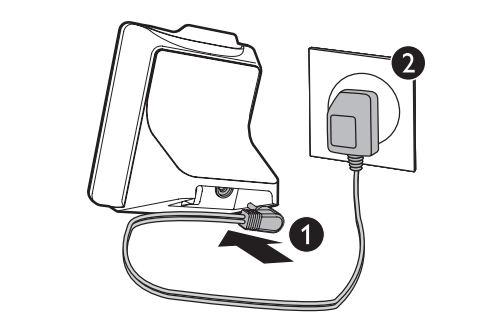 

Mount the telephone base

 - Route the telephone line cord through the rectangular hole on the wall mount bracket. Then plug the two ends of the telephone line cord into the telephone base and the wall outlet as shown.

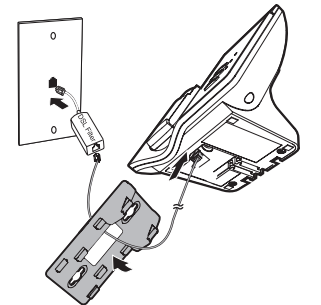

3. To answer the intercom call, press **📞/HOME**, **📞/CELL**, **📞**, or any dialing key on the destination handset.
4. To end the intercom call, press **OFF** or place the handset back in the telephone base or charger.

Transfer a call

While on an outside call, you can use the intercom feature to transfer the call from one handset to another.

- Press **MENU** on your handset during a call.
- Press **↵** or **↗** to scroll to **Intercom**, and then press **SELECT**. The current call is put on hold. Use the dialing keys to enter a destination device number.
- To answer the intercom call, press **📞/HOME**, **📞/CELL**, **📞**, or any dialing key on the destination handset. You can now have a private conversation before transferring the call.
- To transfer the call, press **OFF** on the initiating handset or place the initiating handset back in the telephone base or charger.
- To end the call, press **OFF** on the destination handset or place the destination handset back in the telephone base or charger.

Answer an incoming call during an intercom call

If you receive an incoming call during an intercom call, there is an alert tone.

- To answer a home call, press **📞/HOME**. The intercom call ends automatically.
- To end the intercom call without answering the outside call, press **OFF**. The intercom call ends and the telephone continues to ring.
- To answer a cell call, press **OFF** to end the intercom call. The telephone continues to ring. Then press **📞/CELL**.

Redial list

Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry.

Review the redial list

- Press **REDIAL** when the handset is not in use.
- Press **↵**, **↗**, or **REDIAL** repeatedly until the desired entry displays.

Delete all old messages at the telephone base

To delete all old messages at the telephone base:

Press **X/DELETE** twice when the phone is not in use.

To delete all old messages on a handset:

- Press **MENU** when the phone is not in use.
- Scroll to **Answering sys**, and then press **SELECT**.
- Scroll to **Delete all old**, and then press **SELECT** twice. You hear a confirmation tone.

Remote access

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is **19**. You can use this preset code, or set your own.

- Dial your telephone number from any touch-tone telephone.
- When the system plays your announcement, enter the two-digit security code.
- You can enter one of the following remote commands.

Command	Description
1	Play all messages.
2	Play new messages.
3	Delete the current message (during playback).
33	Delete all old messages.
4	Repeat the current message (during playback).
5	Stop.
*5	Hear a list of remote commands.
6	Skip to the next message (during playback).
*7	Record a new announcement.
8	End the call.
0	Turn the answering system on or off.

- Hang up or press **8** to end the call.

Dial a redial list entry

- Press **📞/HOME**, **📞/CELL**, or **📞** to dial.

Delete a redial list entry

When the desired redial entry displays, press **DELETE**.

Phonebook

The phonebook can store up to 1000 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a phonebook entry

- Press **MENU** when the phone is not in use.
- Scroll to **Phonebook** then press **SELECT**.
- Press **SELECT** again to choose **Add new entry**.
- Enter the number.
- Use the dialing keys to enter the number (up to 30 digits).
- Press **SELECT** to move to the name.
- Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.
- Press **SELECT** to save.

While entering numbers and names, you can:

- Press **DELETE** to erase a digit or character.
- Press and hold **DELETE** to erase the entire entry.
- Press **↵** or **↗** to move the cursor to the left or right.
- Press and hold **PAUSE** to insert a dialing pause (for entering phone numbers only).
- Press **0** to add a space (for entering names only).
- Press ***tone** to add ***** (∗ appears) or **#** to add **#** (♯ appears) (for entering phone numbers only).

Review the phonebook

Entries are sorted alphabetically.

- Press **📞** when the phone is not in use.
- Scroll to browse through the phonebook, or use the dialing keys to start a name search (you can enter up to 3 characters for the search).
- When the desired entry appears, press **📞** or **📞** to dial.

Delete a phonebook entry

- When the desired entry displays, press **DELETE**.
- When the screen displays **Delete entry?**, press **SELECT**.

Delete all phonebook entries:

- Press **MENU** when the phone is not in use.
- Scroll to **Phonebook**, and then press **SELECT**.
- Scroll to **Delete all**, and then press **SELECT**.
- When the screen displays **Delete all?**, press **SELECT**.

Edit a phonebook entry

- When the desired entry displays, press **SELECT**.
- Use the dialing keys to edit the number, and then press **SELECT**.
- Use the dialing keys to edit the name, and then press **SELECT** to save.

Dial a phonebook entry

- When the desired entry appears, press **TALK** or **📞** to dial.

Caller ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log.

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the telephone number has more than 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry

- Press **CID** when the phone is not in use.
- Scroll to browse through the caller ID log. When the desired entry appears:
 - Press **#** repeatedly to show different dialing options.
 - Press 1 repeatedly if you need to add or remove 1 in front of the phone number.
- Press **TALK** or **📞** to dial the displayed number.

Dial a caller ID log entry

- When the desired entry appears, press **TALK** or **📞** to dial.

Save a caller ID log entry to the phonebook

- When the desired caller ID log entry displays, press **SELECT**.
- Scroll to **To Phonebook** then press **SELECT**.
- Use the dialing keys to modify the number, and then press **SELECT**.
- Use the dialing keys to modify the name, and then press **SELECT** to save.

Delete a caller ID log entry

- When the desired caller ID log entry displays, press **DELETE**.

Delete all caller ID log entries

- Press **MENU** when the phone is not in use. Scroll to **Caller ID log** and then press **SELECT**. Scroll to **Delete all** and then press **SELECT** twice.

Call block

If you subscribe to caller ID service, you can set the telephone to block unknown calls and certain undesired calls.

The call block list stores up to 20 entries.

Block unknown calls

- Press **MENU** when the phone is not in use.
- Scroll to **Call block**, and then press **SELECT**.
- Scroll to **Calls w/o num**, and then press **SELECT**.
- Scroll to choose **Not block** or **Block**, and then press **SELECT**.

Add a call block list entry

- Press **MENU** when the phone is not in use.
- Scroll to **Call block**, and then press **SELECT**.
- Scroll to **Block list**, and then press **SELECT**.
- Scroll to **Add new entry**, and then press **SELECT**.
- Enter the number.
 - Use the dialing keys to enter the number (up to 30 digits).
- Press **SELECT** to move to the name.
- Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.
- Press **SELECT** to save.

Review call block list

- Press **MENU** when the phone is not in use.
- Scroll to **Call block**, and then press **SELECT**.
- Scroll to **Block list**, and then press **SELECT**.
- Press **SELECT** to choose **Review**.

Edit a call block list entry

- When the desired entry displays, press **SELECT**.
- Use the dialing keys to edit the number, and then press **SELECT**.
- Use the dialing keys to edit the name, and then press **SELECT** to save.

Save a caller ID log entry to call block list

- When the desired caller ID log entry displays, press **SELECT**.
- Scroll to **To Call block** then press **SELECT**.
- Use the dialing keys to modify the number, and then press **SELECT**.
- Use the dialing keys to modify the name, and then press **SELECT** to save.

Delete a call block list entry

- When the desired call block list entry displays, press **DELETE**.

Sound settings

Key tone

You can choose from different ringer tones.

- Press **MENU** when the handset is not in use.
- Scroll to **Settings**, and then press **SELECT**.
- Scroll to choose **Key tone**, and then press **SELECT**.
- Scroll to choose **On** or **Off**, and then press **SELECT** to save.

Ringer tone

You can choose from different ringer tones.

- Press **MENU** when the handset is not in use.
- Scroll to **Ringers**, and then press **SELECT**.
- Scroll to choose **Home ringtone** or **Cell ringtone**, and then press **SELECT**.
- Scroll to sample each ringer tone, and then press **SELECT** to save.

NOTE

If you turn off the ringer volume, you will not hear ringer tone samples.

Ringer volume (handset)

You can adjust the ringer volume level, or turn the ringer off.

- Press **MENU** when the handset is not in use.
- Scroll to **Ringers**, and then press **SELECT**.
- Scroll to choose **Home volume** or **Cell volume**, and then press **SELECT**.
- Scroll to adjust the volume, and then press **SELECT** to save.

NOTE

If the handset ringer volume is set to off, that handset is silenced for all incoming calls except paging tone.

Ringer volume (telephone base)

You can adjust the telephone base volume level by pressing **— /VOL/+** on the top of the telephone base when idle.

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the preset volume.

- Press **OFF** or **MUTE** on the handset. The handset displays **⏸**.


About answering system and voicemail service

For message recording, your telephone has a built-in answering system, and it also support voicemail service offered by your telephone service provider (subscription is required, and fee may apply).

The main differences between them are as follows:

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

Method to retrieve messages	When you received new messages, handset displays XX new messages and the message window on the telephone base flashes. To retrieve messages, usually there are two ways: - Press a button on the telephone base; or - Access remotely with an access code.	When you received new messages, the handset displays SM and New voicemail . To retrieve messages, you need an access number and/or a passcode provided by your telephone service provider.
-----------------------------	--	---

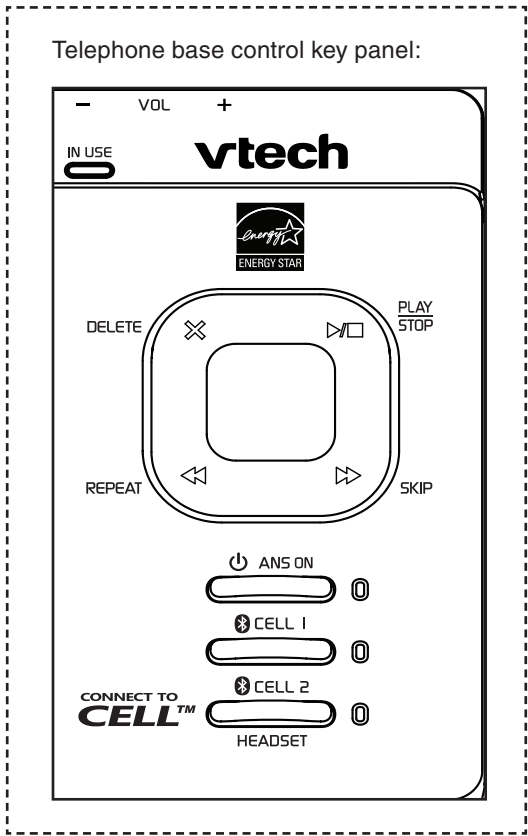 

Set your built-in answering system

Your answering system has various features, read below for the basic settings.

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 23 minutes. The actual recording time depends on individual message characteristics.

Your answering system allows you to set your announcement, to save and delete messages, activate call screening, to set number of rings before pick up, to access remotely, and to control the recording time.

Turn the answering system on or off

The answering system must be turned on to answer and record messages.

To turn on or off with the telephone base:

- Press **⏻/ANS ON** on the telephone base to turn the built-in answering system on or off.

To turn on or off with the handset:

- Press **MENU** when the phone is not in use.
- Scroll to highlight **Answering sys**, and then press **SELECT**.
- Scroll to highlight **Answer on/off**, and then press **SELECT**.
- Scroll to highlight **On** or **Off**, and then press **SELECT** to save. You hear a confirmation tone.

Default announcement

The telephone is preset with a greeting that answers calls with "Hello, please leave a message after the tone." You can use this preset announcement, or replace it with your own.

Record your own announcement

The announcement can be up to 90 seconds in length.

- Press **MENU** when the phone is not in use.
- Scroll to **Answering sys** and then press **SELECT** twice.
- The handset announces, "Announcement, press play or press record."
- Press 7 to record. The handset announces, "Record after the tone. Press STOP when you are done." After the tone, speak towards the handset microphone. Then, press 5 when done.

Play the announcement

- Press **MENU** when the phone is not in use.
- Scroll to **Answering sys** and then press **SELECT** twice.
- The handset announces, "Announcement, press play or press record."
- Press 2 to play the announcement.

Delete the announcement

- Press **MENU** when the phone is not in use.
- Scroll to **Answering sys** and then press **SELECT** twice.
- The handset announces, "Announcement, press play or press record."
- Press 3 to delete your own recorded announcement.

Set number of rings

You can set the answering system to answer an incoming call after 2, 3, 4, 5 or 6 rings; or toll saver. If you choose toll saver, the answering system answers a call after 2 rings when you have new messages, or after 4 rings when you have no new messages.

- Press **MENU** when the phone is not in use.
- Scroll to **Answering sys** then press **SELECT**.
- Scroll to **Ans sys setup** then press **SELECT**.
- Scroll to **# of rings** then press **SELECT**.
- Press **↵** or **↗** to choose 2, 3, 4, 5, 6 or Toll saver.
- Press **SELECT** to save and you hear a confirmation tone.

Message alert tone

When the message alert tone is set to on, and there is at least one new message, the telephone base beeps every 10 seconds. The message alert tone is preset to off.

- Press **MENU** when the phone is not in use.
- Scroll to **Answering sys** then press **SELECT**.
- Scroll to **Ans sys setup** then press **SELECT**.
- Scroll to **Msg alert tone** then press **SELECT**.
- Press **↵** or **↗** to choose **On** or **Off**.
- Press **SELECT** to save and you hear a confirmation tone.

Voice guide

This feature is an alternative way for you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

- Press **MENU** when the phone is not in use.
- Scroll to scroll to **Answering sys**, and then press **SELECT**.
- Scroll to highlight **Voice guide**, and then press **SELECT**. You hear the voice prompt "Hello! This voice guide will assist you with the basic setup of your answering system."
- Setup your answering system by inputting designated numbers as instructed in the voice guide.

Use your built-in answering system

New message indication

When there are new answering system messages, The handset displays **XX new messages** and the message window on the telephone base flashes.

Message playback

To playback messages at the telephone base:

- Press **▶/PLAY** when the phone is not in use.

Options during playback:

- Press **— /VOL/+** to adjust the speaker volume.
- Press **▶/SKIP** to skip to the next message.
- Press **◀/REPEAT** to repeat the message currently playing. Press **◀/REPEAT** twice to listen to the previous message.
- Press **X/DELETE** to delete the playing message. The system advances to the next message.
- Press **▶/STOP** to stop.

To playback messages at the handset:

- Press **MENU** to choose **Play messages**. Press **SELECT**.

Options during playback:

- Press **VOLUME/↵** or **VOLUME/↗** to adjust the message playback volume.
- Press 6 to skip to the next message.
- Press 4 to repeat the message. Press 4 during the time and day announcement to hear the previous message.
- Press 3 to delete the playing message.
- Press **OFF** to stop the playback.
- Press **📞** to switch between speakerphone mode and handset mode.

Technical specifications

Transmit frequency	DECT frequency: 1921.536-1928.448 MHz Bluetooth frequency: 2402.000-2480.000 MHz
Channels	DECT: 5 Bluetooth: 79
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environment conditions at the time of use.
Power requirements	Handset: 2.4V Ni-MH battery Telephone base: 6V DC @ 400mA Charger: 6V AC @ 300mA
Memory	Phonebook: 1000 memory locations (shared between home and cell lines); up to 30 digits and 15 characters Caller ID log: 50 memory locations; up to 24 digits and 15 characters

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTEch Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTEch do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTEch's authorized service representative will repair or replace at VTEch's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTEch's option, is your exclusive remedy. VTEch will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTEch repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you; or (b) the time remaining on the original one-year warranty; whichever is longer.

What is not covered by this limited warranty?

This limited warranty does not cover:

- Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
- Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTEch; or
- Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
- Product to the extent that the problem is caused by use with non-VTEch accessories; or
- Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or

- Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- Product returned without a valid proof of purchase (see item 2 on the next page); or
- Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTEch will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTEch assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTEch will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service?

- Return the entire original package and contents including the Product to the VTEch service location along with a description of the malfunction or difficulty; and
- Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
- Provide your name, complete and correct mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and VTEch. It supersedes all other written or oral communications related to this Product. VTEch provides no other warranties for this Product. The warranty exclusively describes all of VTEch's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how

The *Bluetooth®* word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTEch Holdings Limited is under license. VTEch Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Specifications are subject to change without notice.
© 2014 for VTEch Communications, Inc.
All rights reserved. 05/14, DS6621_ACIB_V5.0
Document order number: 91-007312-050-100

