CS6729 CS6729-2 CS6729-21 CS6729-3 CS6729-4 CS6729-4D CS6729-5

DECT 6.0 cordless telephone

PORS 7 (TUV 8 (W172 9)

TONE X OPER O QUET#

MUTE DELETE INT

vtech

Abridged user's manual

Charge the battery

charger to charge.

Place the handset in the telephone base or the

Once you have installed the battery, the

status (see the table below).

continuous charging.

The screen

shows Put in

charger and () flashes.

he screen

hows **Low**

The screen

shows HANDSET X.

handset LCD display indicates the battery

• For best performance, keep the handset in the

elephone base or charger when not in use

Battery status

Charge withou

Charge without

(at least 30

To keep the

place it in the

elephone base

or charger when

(at least 30

The battery is fully charged after 12 hours of

The battery

has no charge

or very little charge. The handset cannot

The battery has

enough charge

The battery is

short time.

charged.

battery and () to be used for a

vtech



Telephones identified with this ogo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants The TIA-1083 Compliant Logo is a trademark of the elecommunications Industry Association. Used under license.



The ENERGY STAR® program www.energystar.gov) recognizes and encourages the use of roducts that save energy and elp protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.


Congratulations What's in the box

on purchasing your new VTech product. Before using this product, please read Important safety instructions.


This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

Please refer to the online Complete user's manual for a full set of installation and operation instructions at www.vtechphones.com.




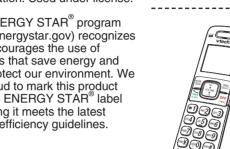



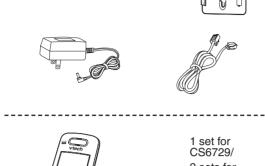

2 sets for CS6729-2/ CS6729-21 3 sets for CS6729-3 4 sets for CS6729-4/ CS6729-4D 5 sets for CS6729-5

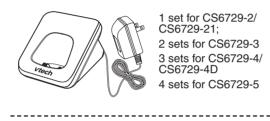

1 set for CS6729-2/ CS6729-21 2 sets for CS6729-3 3 sets for CS6729-4/ CS6729-4D 4 sets for CS6729-5





· Press to start an intercom conversation or transfer a call (for multi-handset models only)

While in a menu, press to select an item, or

Silence the ringer temporarily while the

· Press and hold to erase the missed call

• Press to return to the previous menu; or

Press repeatedly to show other dialing

icator while the phone is not in use.

press and hold to return to idle mode, without

options when reviewing a caller ID log entry.

landset overview

Vtech

ABCZ DEF3

GH14) [JKL5] [MO6]

(TUV 8 (WXYZ 9)

DOPERO QUET#

(E) (INT

1 - Handset earpiece

3 - MENU/SELECT

4 - OFF/CANCEL

6 - INT

Show the menu

Hang up a call.

save an entry or setting.

2 - LCD display

Handset control key panel desired feature menu

To return to the previous menu, press CANCEL

Configure your telephone

2. Use the dialing keys (**0-9**) to enter the hour (HH) and minute (MM). Then press ▼ or ▲

3. Press **SELECT** to save.

Check for dial tone:

Press TALK. If you hear a dial tone, the installation is successful.

If you do not hear a dial tone:

described above are properly done.

 It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing VoIP service provider for more information.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays Out of range or no pwr at base. If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press Talk. Move closer to the telephone base, and then press to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

sing the handset menu

1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ until the screen displays the

3. Press **SELECT** to enter that menu.

The LCD language is preset to English. You can select English, French or Spanish to be used in

1. Press **MENU** when the handset is not in

2. Scroll to Settings, and then press SELECT

3. Scroll to choose **English**, **Français** or **Español**, and then press **SELECT**.

4. Press SELECT again to save.

vear correctly: otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp. 1. Press **MENU** when the handset is not in

2. Scroll to **Set date/time**, and then press

SELECT 3. Use the dialing keys (0-9) to enter the

4. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to choose **AM** or **PM**.

5. Press **SELECT** to save.

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily

1. During a call, press ^{TONE} ★.

Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

ephone operation

Make a call

16 - CHARGE light

Press TALK, ■), or any dialing key.

Press OFF on the handset, or put the handset

 During a call, press on the handset to switch between speakerphone and normal handset use.

During a call, press ▼/VOLUME/▲ on the

 The handset earpiece volume setting and speakerphone volume setting are independent.

The mute function allows you to hear the other party but the other party cannot hear you.

Press **MUTE** again to resume the conversation. The screen displays

Microphone ON.

Call waiting

your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

Press **FLASH** to switch back and forth

between calls.

Use this feature to find all system handsets.

Press **/FIND HANDSET** on the telephone base. All idle handsets ring and display ** Paging **.

To end paging: Press /FIND HANDSET again on the

ØNOTE Do not press and hold FIND HANDSET for

Telephone base overview

• Flashes when there is an incoming call, or

· On when the handset is in use or being

another telephone sharing the same line is in use

Flashes when handsets are being deregistered

· On when the answering system is answering a

· Press to turn the answering system on or off.

Press to adjust the volume during message

the telephone base ringer volume.

Press to page all system handsets.

· Press to delete the playing message

• When the phone is not in use, press twice to

delete all previously reviewed messages.

• Shows the number of messages, and other

information of the answering system or

Press to repeat the playing message.

Press to skip to the next message.

Press twice to play the previous message

Press to play messages.

Press to stop message

elephone base.

• When the phone is not in use, press to adjust

1 - IN USE light

registered.

2 - UANS ON/OFF

3 - ▲VOL+ and ▼VOL-

4 – **I**/FIND HANDSET

5 - ▶/■/PLAY/STOP

7 – Message window

8 - ≪/REPEAT

• Press OFF to exit the call. The call continues until all handsets hang up.

Transfer a call

Press MENU on your handset during a call.

3. Use the dialing keys to enter a destination handset number.

Press **INT** on your handset when not in use.

handset number

4. To end the intercom call, press **OFF** or place the handset back in the telephone base or charger.

intercom feature to transfer the call from one handset to another.

dialing keys to enter a destination handset

any dialing key on the destination handset. You can now have a private conservation before transferring the call.

following options:

Charger overview

1 - Charging pole

ANS ON

isplay icons overview

charging.

The battery icon flashes when

The battery icon animates when

the battery is low and needs

the battery is charging.

The battery icon becomes

The handset ringer is off.

There are new voicemail

service provider.

received from your telephone

The message number currently

playing and total number of

new/old messages recorded.

The ECO mode activates

s within range from the

There are new caller ID log

elephone base.

entries.

automatically to reduce power

consumption when the handset

The answering system is turned

solid when the battery is fully

more than four seconds. It may lead to handset deregistration.

Join a call in progress

at a time on a home line call. You can buy additional expansion handsets (CS6709) for this telephone base. You can register up to five handsets to the telephone base.

When a handset is on a home call, press or on another handset to join the call.

While on an outside call, you can transfer the call from one handset to another.

4. To answer the intercom call, press TALK, ♠), or

any dialing key on the destination handset.

2. Use the dialing keys to enter a destination

While on an outside call, you can use the

2. The current call is put on hold. Use the

3. To answer the intercom call, press TALK, ■), or

The phonebook can store up to 50 entries, which are shared by all handsets. Each entry may 4. From this intercom call, you have the consist of a telephone number up to

Connect

You can choose to connect the telephone base

Use only the power adapters supplied with this

· If you subscribe to digital subscriber line (DSL)

line, make sure you install a DSL filter (not

included) between the telephone line cord and

telephone wall jack. Contact your DSL service

high-speed Internet service through your telephone

for desktop usage or wall mounting.

provider for more information

Connect the telephone base

Connect the charger

Add a directory entry

1. Press **MENU** when the phone is not in use.

2. Scroll to **Directory** then press **SELECT**. 3. Press **SELECT** again to choose

4. Enter the number. • Use the dialing keys to enter the number

(up to 30 digits) Press **SELECT** to move to the name.

6. Use the dialing keys to enter the name (up to

15 characters). Additional key presses show other characters of that particular key.

7. Press **SELECT** to save.

• Press **DELETE** to erase a digit or character.

Press ▼ or ▲ to move the cursor to the left

or right. • Press and hold PAUSE to insert a dialing

pause (for entering phone numbers only)

 Press ^{TONE} ★ to add ★ () appears) or ^{QUIET} # to add # (appears) (for entering phone

numbers only). Review the directory

Entries are sorted alphabetically.

Press 🖾 when the phone is not in use. Scroll to browse through the directory, or

use the dialing keys to start a

3. When the desired entry appears, press or \(\dag{\pi} \) to dial.

Dial a directory entry

TALK or **■** to dial.


Edit a directory entry

2. Use the dialing keys to edit the number, and


Mount the telephone base The telephone comes ready for tableton use

If you have already installed the telephone for tabletop use, unplug the telephone line cord from the telephone wall jack, and unplug the telephone base power adapter from the wall outlet before mounting your telephone on a wall. Follow the steps below to mount your telephone on a wall.


Route the telephone line cord through the rectangular hole on the wall mount bracket Then plug the two ends of the telephone line cord into the telephone base and the wall outlet as shown.

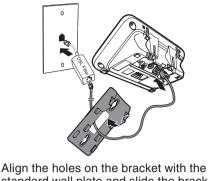

standard wall plate and slide the bracket down until it clicks securely in place.

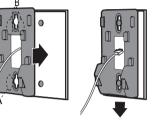

Align the grooves on the telephone base with the tabs on the wall mount bracket, and then slide it down until it clicks securely in place

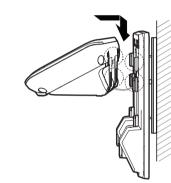

3. Use the dialing keys to edit the name, and then press **SELECT** to save. Delete a directory entry:

When the desired entry displays, press DELETE.

When the screen displays Delete contact?, press **SELECT**.

peed dial

You can copy up to 9 directory entries into the speed dial locations (0 and 2-9) so that you can dial these numbers using fewer keys than usual.

The speed dial memory locations are stored in the telephone base and are shared by all handsets. Changes made to the speed dial entries on one handset apply to all.

Assign a speed dial entry

Press MENU when the phone is not in use.

2. Scroll to **Directory**, then press **SELECT**. Scroll to Speed dial, then press SELECT. 4. Press ▼ or ▲ or the dialing keys (0 or 2-9) to

choose the desired speed dial location. 5. Press SELECT. The screen displays Copy from DIR... and then the first entry in the

6. Scroll to browse to the desired entry

Use the alphabetical search to find the desired entry.

7. Press **SELECT** to save. You hear a confirmation. The name (up to 12 characters)

appears in the selected speed dial location.

If the directory is empty, when you press SELECT in Step 5, the screen displays **Directory empty**. • If the speed dial location you selected is occupied, the new directory entry you selected replaces the old one. Take caution not to replace entries you do

not wish to delete from the speed dial locations. Reassign a speed dial entry

1. Press **MENU** when the phone is not in use.

2. Scroll to **Directory**, then press **SELECT**. Scroll to Speed dial, then press SELECT.


choose the speed dial location you want to

nstall and charge the battery

4. Connect the power adapter to the telephone


by a wall switch.


base and an electrical outlet not controlled

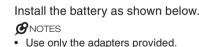

Install the battery

 If the handset will not be used for a long time disconnect and remove the battery to prever possible leakage.

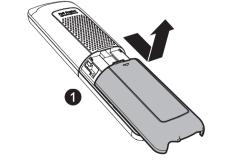

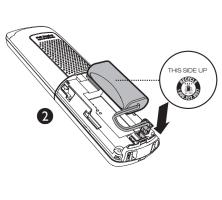

Before use

After you install your telephone or power returns following a power outage, the handset or telephone will prompt you to set the date and time.

Set date and time

· Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your

ecorded messages time stamp 1. Use the dialing keys (**0-9**) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.

to choose AM or PM.

· Make sure the installation procedures

telephone jacks to work. Contact your cable/

To return to idle mode, press and hold CANCEL.

all screen displays

Set date and time

· Make sure you set the date and time including the

month (MM), date (DD) and year (YY). Then press **SELECT**.

Press TALK or ■), and then dial the telephone Answer a call

Speakerphone

handset to adjust the listening volume.

During a call, press **MUTE** on the handset or 2. Scroll to **Transfer**, and then press **SELECT**.

When you subscribe to call waiting service from

and take the new call.

To start paging:

Find handset

Press TALK, ■), OFF, or any dialing key on the

Press FLASH to put the current call on hold

telephone base.

Place the handset in the telephone base or

You can use up to two system handsets

Use the intercom features for conversations petween two devices.

3. To answer the intercom call, press TALK, ■), or any dialing key on the destination handset

Transfer a call using intercom

Press INT on your handset during a call.

 You can let the destination handset join you on the outside call in a three-way conversation. Press and hold **INT** on the originating handset.

You can transfer the call. Press OFF. or

place your handset back in the telephone base or charger. Your handset displays Transferred. The destination handset is then connected to the outside call.

 You can press INT to switch between the outside call (Outside call displays) and the intercom call (**Intercom** displays). The destination handset can end the intercom call by pressing **OFF**, or by

placing the handset back in the telephone

base or charger. The outside call continues with the original system handset

intercom call

If you receive an incoming call during an intercom call, there is an alert tone To answer a call, press TALK. The intercom call ends automatically.

the outside call, press **OFF**. The intercom call

• To end the intercom call without answering

ends and the telephone continues to ring. Redial list

Each handset stores the last 10 telephone

numbers dialed. When there are already 10

Answer an incoming call during an

for the new entry. Review the redial list

entries, the oldest entry is deleted to make room

2. Press ▼, ▲, or REDIAL repeatedly until the desired entry displays Dial a redial list entry

Press TALK or ■) to dial.

Press REDIAL when the handset is not in

Delete a redial list entry When the desired redial entry displays, press

Directory

30 digits, and a name up to 15 characters.

Add contact.

While entering numbers and names, you can:

Press and hold DELETE to erase the entire

• Press 0 to add a space (for entering names

name search (you can enter up to 3 characters for the search).

When the desired entry appears, press

1. When the desired entry displays, press SELECT.

then press **SELECT**.

4. Press ▼ or ▲, or use the dialing keys to

vtech





· Make or answer a call using the handset

During a call, press to switch between the

Mute the microphone during a call.

Delete digits or characters while using the

While you have set the dial mode to pulse

Press to add a space when entering names

Press repeatedly to add or remove 1 in front

of the caller ID log entry before dialing or

Answer an incoming home call when you hear

Press and hold to insert a dialing pause while

• Review the directory when the phone is not in 6 - X/DELETE

• Press repeatedly to review the redial list.

Increase the listening volume during a call.

Move the cursor to the right when entering

Review the caller ID log when the phone is not in

· Decrease the listening volume during a call.

Scroll down while in a menu, or in the

• On when the handset is charging.

directory, caller ID log, or redial list. · Move the cursor to the left when entering

Scroll up while in a menu, or in the directory,

Press and hold to set or dial your voicemail

and on a call, press to switch to tone dialing

Silence the ringer temporarily while the

speakerphone and the handse

MUTE/DELETE

dialing keys.

temporarily.

13 - TALK /FLASH

14 - REDIAL/PAUSE

15 - VOLUME/**▲**/᠍♡

handset is ringing.

saving it to the directory.

Make or answer a home call.

caller ID log, or redial lis

numbers or names.

numbers or names

VOLUME/▼/CID

a call waiting alert

to the base or charger.

Press SELECT. The screen displays Copy from DIR... and then the first entry of the

Press and hold a dialing key (0 or 2-9) to

dial the number stored in the corresponding

When the speed dial location is empty, the screen

displays the speed dial list. See Assign a speed

1. Press **MENU** when the phone is not in use.

4. Press ▼ or ▲, or use the dialing keys to

5. Press **SELECT** to confirm. You hear a

Deleting the speed dial entries does not affect the

about each caller appears after the first or

information appears on the screen, it will not be

The caller ID log stores up to 50 entries. Each

entry has up to 24 digits for the phone number

If the telephone number has more that 15 digits.

7. Scroll to browse to the desired entry.

Dial a speed dial number

dial entry to add a new entry.

Delete a speed dial entry

confirmation tone

entries in the directory.

saved in the caller ID log

and 15 characters for the name

shown and saved in the caller ID log.

Caller ID

speed dial location

directory.

Use the alphabetical search to find the remove 1 in front of the phone number. desired entry.

8. Press **SELECT** to save. You hear a Dial a caller ID log entry confirmation. The name (up to 12 characters)

appears in the selected speed dial location.

• When the desired entry appears, press TALK or ■) to dial.

Press **CID** when the phone is not in use.

When the desired entry appears:

dialing options

Press # repeatedly to show different

Press 1 repeatedly if you need to add or

Save a caller ID log entry to the directory When the desired caller ID log entry displays, press **SELECT**.

- Scroll to To Directory then press SELECT.
- 3. Use the dialing keys to modify the number, and then press **SELECT**.
- 4. Use the dialing keys to modify the name. and then press **SELECT** to save

Delete a caller ID log entry

 When the desired caller ID log entry displays, 2. Scroll to **Directory**, then press **SELECT**. press **DELETE**. Scroll to Speed dial, then press SELECT

Delete all caller ID log entries

choose the desired speed dial location, then • Press **MENU** when the phone is not in press **DELETE**. The screen displays **Clear** use. Scroll to Caller ID log and then press **SELECT**. Scroll to **Del all calls** and then press **SELECT** twice.

Sound settings

Key tone

You can choose from different ringer tones.

- Press **MENU** when the handset is not in use. Scroll to **Settings**, and then press **SELECT**.
- If you subscribe to caller ID service, information Scroll to choose **Key tone**, and then press second ring. If you answer a call before the caller
 - Scroll to choose **On** or **Off**, and then press **SELECT** to save.

Ringer tone

- You can choose from different ringer tones.
- only the last 15 digits appear. If the name has more 2. Scroll to **Ringers**, and then press **SELECT**. than 15 characters, only the first 15 characters are Scroll to choose **Ringer tone**, and then
 - press **SELECT** to save.

The display

dial tone.

The display

register HS..

shows **To**

and **...see**

not record

messages.

manual

hows No line

cannot hear th

- 1. Press **MENU** when the handset is not in use.
- press **SELECT**
- 4. Scroll to sample each ringer tone, and then

Disconnect the telephone line

ord from your telephone and

If there is no dial tone on that

the telephone line cord may be

defective. Try installing a new

If changing telephone line cord

(or the wiring to this wall jack)

may be defective. Contact your

does not help, the wall jack

other telephone either, then

telephone line cord.

onnect it to another telephone

ringer tone samples.

Ringer volume

- You can adjust the ringer volume level, or turn the ringer off 1. Press **MENU** when the handset is not in use

If you turn off the ringer volume, you will not hear

- 3. Press TALK or ♠ to dial the displayed number. 2. Scroll to Ringers, and then press SELECT. 3. Scroll to choose Ringer volume or Cell
 - volume, and then press SELECT. 4. Scroll to adjust the volume, and then press

 If the handset ringer volume is set to off, that handset is silenced for all incoming calls except

Ringer volume (telephone base) You can adjust the telephone base volume level

by pressing ▼VOL- or ▲VOL+ on the top of the telephone base when idle

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the preset volume

 Press OFF or MUTE on the handset. The handset displays A and Ringer muted briefly

Quiet mode

The messages

incomplete

I accidentally

on the answering

You can turn on the guiet mode for a period of time. During this period, all tones (except paging tone) and call screening are muted. When you turn on the quiet mode, the answering system turns on automatically

- 1. Press and hold out # on the handset or lephone base when idle.
- 2. Use the dialing keys (0-9) to enter the duration, and then press **SELECT** to save
- To turn off the quiet mode, press and hold QUET# on the handset or telephone base when idle.

About answering system and

For message recording, your telephone has a built-in answering system, and it also support voicemail service offered by your telephone service provider (subscription is required, and fee may apply)

If a caller leaves a very long

when the answering syster

preset recording time.

disconnects the call after the

message, part of it may be lost

If the memory on the answering

message, the answering system

stops recording and disconnects

While the handset is not in use,

press **MENU** and then enter

¥364# to change the handset

LCD language back to English.

system becomes full during a

The main differences between them are as

I the call.

lessages are essages are Storage tored in a serve read below for the basic settings lephone base or system provid by your telephon Your messages Your messages will not be deleted automatically. automatically leleted after a You have to delete characteristics. eriod of time. your messages manually. Contact vour elephone service orovider for more When you received When you receive new messages. ew messages, o retrieve handset displays the handset essages XX new messages displays 🔀 and and the message l New voicemail window on the telephone base flashes. o retrieve o retrieve nessages, usually essages, you To turn on or off with the handset there are two ways: need an access 1. Press **MENU** when the phone is not in use. number and/or Press a button 2. Scroll to highlight **Answering sys**, and then asscode provid on the telephone y your telephone base; or rvice provider. Access remotely 3. Scroll to highlight **Answer on/off**, and then with an access

Telephone base control key panel: ▼ VOL vtech

date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty: whichever is longer

This limited warranty does not cover

- accident, shipping or other physical damage. improper installation, abnormal operation or handling, neglect, inundation, fire, water or other
- authorized service representative of VTech; or is caused by signal conditions, network reliability,
- by use with non-VTech accessories; or
- have been removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products
- Charges for installation or set up, adjustment of customer controls, and installation or repair of

How do you get warranty service?

features may save you a service call.

Except as provided by applicable law, you assume the **proof of purchase.** risk of loss or damage during transit and transportation not covered by this limited warranty.

What must you return with the Product to get warranty service?

including the Product to the VTech service location along with a description of the malfunction or

Your answering system has various features,

Set your built-in answering system Press **MENU** when the phone is not in use. 2. Scroll to **Answering sys** and then press

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actua recording time depends on individual message Delete the announcement

Your answering system allows you to set your Scroll to Answering sys and then press announcement, to save and delete messages, activate call screening, to set number of rings before pick up, to access remotely, and to control the recording time.

Turn the answering system on or off The answering system must be turned on to answer and record messages.

the built-in answering system on or off.

Scroll to highlight Answer: On or

save. You hear a confirmation tone.

Record your own announcement

Answer: Off, and then press SELECT to

1. Press **MENU** when the phone is not in use.

Scroll to **Answering sys** and then press

Rec [7], and it announces, "To play, press 2.

Press 7 to record. The handset announces,

"Record after the tone. Press 5 when you

are done." After the tone, speak towards the

handset microphone. Then, press **5** when

The handset displays Play [2] Del [3]

press **SELECT**.

press SELECT.

Default announcement

SELECT twice.

To turn on or off with the telephone base:

You can set the answering system to answer ar Press U/ANS ON on the telephone base to turn incoming call after 2, 3, 4, 5 or 6 rings; or toll saver. If you choose toll saver, the answering system answers a call after 2 rings when you have new messages, or

Play the announcement

SELECT twice.

SELECT twice.

announcement.

Set number of rings

To record, press 7."

To record, press 7."

The handset displays Play [2] Del [3]

Press 2 to play the announcement.

Rec [7], and it announces, "To play, press 2.

Press **MENU** when the phone is not in use.

Rec [7], and it announces, "To play, press 2

The handset displays Play [2] Del [3]

4. Press 3 to delete your own recorded

- after 4 rings when you have no new messages. 1. Press **MENU** when the phone is not in use.
- Scroll to Answering sys then press SELECT.
- Scroll to Ans sys setup then press SELECT.
- Scroll to # of rings then press SELECT.
- 5. Scroll to choose 2, 3, 4, 5, 6 or Toll saver.
- 6. Press **SELECT** to save and you hear a

Message alert tone

The telephone is preset with a greeting that When the message alert tone is set to on, answers calls with "Hello, please leave a and there is at least one new message, the message after the tone." You can use this preset telephone base beeps every 10 seconds. The announcement, or replace it with your own. message alert tone is preset to off.

- Press MENU when the phone is not in use. 2. Scroll to **Answering sys** then press **SELECT**.
- The announcement can be up to 90 seconds in Scroll to **Ans sys setup** then press **SELECT**.
 - Scroll to Msg alert tone then press SELECT. 5. Scroll to choose Tone: On or Tone: Off.
 - 6. Press **SELECT** to save and you hear a

Recording time

SELECT.

New message indication

telephone base flashes.

Options during playback:

Press ►/■/STOP to stop.

Options during playback:

Press **SELECT**.

playback volume.

Message playback

You can set the recording time limit for each incoming message

4. Scroll to **Recording time** then press

Scroll to choose 3 minutes, 2 minutes or

6. Press **SELECT** to save and you hear a

When there are new answering system

messages, The handset displays XX new

messages and the message window on the

To playback messages at the telephone base:

Press ►/■/PLAY when the phone is not in use.

Press ▼VOL- or ▲VOL+ to adjust the speaker

currently playing. Press **≪/REPEAT** twice to

message. The system advances to the next

Press ►/SKIP to skip to the next message

Press ***/REPEAT** to repeat the message

Press X/DELETE to delete the playing

To playback messages at the handset:

Press MENU to choose Play messages.

Press ▼/VOLUME/▲ to adjust the message

during the time and day announcement to

listen to the previous message

Use your built-in answering system

- 1. Press MENU when the phone is not in use. Scroll to Answering sys then press SELECT.
- Press **X/DELETE** twice when the phone is not Scroll to Ans sys setup then press SELECT.

SELECT

Remote access

commands

To delete all old messages on a handset:

3. Scroll to **Delete all old**, and then press

the answering system remotely from any

1. Dial your telephone number from any

enter the two-digit security code.

touch-tone telephone.

touch-tone telephone. The preset code is **19**.

You can use this preset code, or set your own.

2. When the system plays your announcement,

3. You can enter one of the following remote

Play all messages.

Play new messages.

(during playback).

(during playback).

Hear a list of remote

(during playback).

Skip to the next message

Record a new announcemen

Turn the answering system

commands.

End the call

on or off.

4. Hang up or press 8 to end the call.

Delete all old messages.

Description

Delete the current message

Repeat the current message

SELECT twice. You hear a confirmation tone.

A two-digit security code is required to access

1. Press **MENU** when the phone is not in use.

Delete all old messages at the telephone

To delete all old messages at the telephone

- 4. Scroll to **Remote code**, and then press 2. Scroll to **Answering sys**, and then press
 - 5. Use the dialing keys to enter a two-digit number.
 - Scroll to a desired two-digit number.

6. Press **SELECT** to save and you hear a confirmation tone

Use the built-in answering system and voicemail service

You can use your answering system and voicemail service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact

If you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message

your telephone service provider

appropriate setting.

Set your answering system to answer calls at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, set your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the

For more details, refer to the user's manual that

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

neral product care

Taking care of your telephone Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatmen Place the handset down gently. Save the original packing materials to protect your telephone if you

ever need to ship it.

Avoid water Your telephone can be damaged if it gets wet Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the

telephone base near a sink, bathtub or shower

Electrical storms Electrical storms can sometimes cause power

surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms. Cleaning your telephon

Your telephone has a durable plastic casing that

should retain its luster for many years. Clean it

only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, visit our website at www.vtechphones.com or call 1 (800) 595-9511

for customer service. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377. My telephone Make sure the telephone base is

Frequently asked questions

does not work installed properly, and battery is at all.

nstalled and charged correctly. For optimum daily performance, eturn the handset to the telephone base after use.

set my LCD elephone service provide language to You may be using a new cable Spanish or or VoIP service, the existing French, and telephone jacks in vour home don't know how may no longer work. Contact you to change it back service provider for solutions. to English.

The handset is deregistered from the telephone base. Place the handset in the telephone base to register it back. The handset shows

alternately. The Registered and you hear a bee handset does not when the registration process work at all. empletes. This process takes about 90 seconds to complete The answering Make sure the answering system is on. When the answering system system does

> the handset and the telephone When the answering machine memory is full, it does not record new messages until some old

messages are deleted.

is on. **ANS ON** should display or

If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail service answers. To determine how many rings activate vour voicemail service, contact your telephone service provider.

and time. See Configure your telephone section.

Make sure you have set the date The answering system does not announce the correct day of the week for recorded messages time stamp.

_imited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "vou") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and sed normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the

What is not covered by this limited warranty?

- Product that has been subjected to misuse.
- Product that has been damaged due to repair, alteration or modification by anyone other than an Product to the extent that the problem experienced
- or cable or antenna systems; or Product to the extent that the problem is caused
- 5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers
- Product returned without a valid proof of purchase (see item 2 on the next page); or

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and

and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are

1. Return the entire original package and contents

Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model)

Provide your name, complete and correct mailing address, and telephone number Other limitations

This warranty is the complete and exclusive agreeme between you and VTech. It supersedes all other written or oral communications related to this Product VTech provides no other warranties for this Product The warranty exclusively describes all of VTech's

responsibilities regarding the Product. There are no

other express warranties. No one is authorized to ma

and the date of purchase or receipt; and

modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other right which vary from state to state or province to province Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (ar unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or

exclusion may not apply to you. Please retain your original sales receipt as

consequential damages, so the above limitation or

Frequency control	Crystal controlled PLL synthesizer
Transmit freuency	Handset: 1921.536-1928.448 MHz Telephone base: 1921.536-1928.448 MHz
Channels	5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environment conditions at the time of use.
Power requirements	Handset: 2.4V Ni-MH battery Telephone base: 6V DC @ 400mA Charger: 6V AC @ 300mA
Memory	Handset directory: 50 memory locations; up to 30 digits and 15 characters
	Handset caller ID log: 50 memory locations; up to 24 digits

Press 6 to skip to the next message. Press 4 to repeat the message. Press 4

- hear the previous message. Press 3 to delete the playing message.
- Press OFF to stop the playback

mode and handset mode.

8

Remote access code

rieve voicemail from A two-digit security code is required to access one service the answering system remotely from any touchtone telephone. The preset code is 19. You can Voicemail is a feature available from most set the code from 00 to 99. telephone service providers. It may be included

- 1. Press **MENU** when the phone is not in use. with vour telephone service, or may be optional Fees may apply. Scroll to Answering sys then press SELECT.
- Scroll to Ans sys setup then press SELECT. Retrieve voicemail

When you received a voicemail, the handset displays 🔀 and New voicemail. To retrieve. vou typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

Turn off the new voicemail indicators If you have retrieved your voicemail while away

voicemail indicators, use this feature to turn off the indicators. · This feature turns off the indicators only, it does not

rom home, and the handset still displays the new

delete vour voicemail messages

- Press MENU when the handset is not in use. Scroll to Settings, and then press SELECT.
- Scroll to Clr voicemail, and then press 4. Press **SELECT** to save and you hear a
- confirmation tone.

xpand your telephone system

You can add new handsets (CS6709, purchased separately) to your telephone system. Your telephone base supports a maximum of five

comes with your CS6709 new handset.



Specifications are subject to change without notice.