Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

SH CANCEL VCID A SO MENUSELECT INT FIND

PURS 7 TUV 8 WXYZ 9 PLAY/STOP VOI

(TONE X) (OPER (1) (QUIET #) (REDI

CS6648-3 CS6649 CS6649-2 CS6649-3

DECT 6.0 cordless telephone

TONE X OPERO QUET#

vtech

Abridged user's manual



ephones identified with this logo have reduced noise and interference when used with most T-coil equipped earing aids and cochlear implants. The TIA-1083 Compliant Logo is a rademark of the Telecommunications ndustry Association. Used under

Congratulations

on purchasing your new VTech product. Before using this telephone, please read **Important** safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form. Please refer to the online User's manual for a full set of installation and operation instructions at www.vtechphones.com





Your telephone package contains the following

items. Save your sales receipt and original


packaging in the event warranty service is

What's in the box

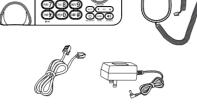

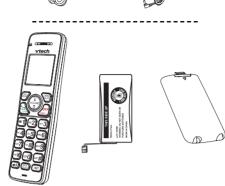

1 set for CS6649: 2 sets for CS6648-2/CS6649-2 3 sets for CS6648-3/CS6649-3

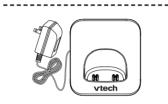


1 set for CS6648-2/CS6649-2 2 sets for CS6648-3/CS66493-3





Telephone base overview

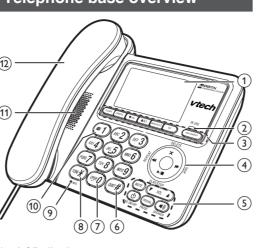

1 - LCD display

2 - IN USE light

- · On when the phone is in use, or when the answering system is answering a call.
- On when a handset is being registered. · Flashes when there is an incoming call.
- · Flashes when handsets are being deregistered Flashes when another telephone on the

same line is in use 3 – FLASH

 Answer an incoming call when you receive a call waiting alert.

· Return to the previous menu or idle mode

- without making changes. Press and hold to erase the missed call
- indicator when the phone is not in use. While the phone is ringing, press to silence the base ringer temporarily.
- Review the caller ID log when the telephone
- is not in use Scroll down while in a menu, or in the
- directory, caller ID log or redial list. · Move the cursor to the left when entering
- Decrease the listening volume during a call

or message playback.

- Review the directory when the phone is not Scroll up while in a menu, or in the directory,
- caller ID log or redial list
- · Move the cursor to the right when entering numbers or names
- Increase the listening volume during a call or

 Press and hold to set and turn on the quiet mode, or turn it off.

Press repeatedly to display other dialing

options when reviewing a caller ID log entry.

· Return to the previous menu or idle mode without making changes.

1 - Handset earpiece

• Show the menu.

Hang up a call.

2 - LCD display

3 - MENU SELECT

Press FIND HANDSET on the telephone base.

save an entry or setting.

Do not $\underline{\text{press and hold}}$ FIND HANDSET for more than four seconds. It may lead to handset deregistration.

· While in a menu, press to select an item or

Press to enter space during text editing.

· Switch to tone dialing temporarily during a call.

While reviewing a caller ID log entry, press

repeatedly to add or remove 1 in front of

· Press and hold to set or dial your voicemail

vtech

the telephone number before dialing or

saving it in the directory.

9 - MIC

Microphone

11 - Speakerphone

12 - Corded handset

andset overview

Use the intercom feature for conversations between the telephone base and a cordless

Press 7 for the telephone base or 1-5 for **HANDSET 1** to **HANDSET 5**.

. Press INT on the cordless handset when the

phone is not in use. 2. To answer the intercom call on the destination

base, press **◄》/SPEAKER**, **INT**, any dialing key, or lift the corded handset.

3. To end the intercom call on either handset, one party presses **OFF**, or places the handset back in the handset charger

To end the intercom call at the telephone base, press INT or ■ ****/SPEAKER** when using the base speakerphone, or place the corded handset back to the telephone base.

lephone base:

- ohone is not in use To answer the intercom call on the destination
- handset back to the telephone base.

in the handset charger.

Delete digits while predialing. Silence the handset ringer temporarily

- while the phone is ringing.
- Press and hold to erase the missed call

indicator when the phone is not in use.

- Press and hold to set and turn on the quiet mode, or turn it off.
- Press repeatedly to display other dialing options when reviewing a caller ID log entry.

· Press to initiate or answer an intercom call,

or to transfer a call. 7 - MUTE/DELETE

- Mute the microphone during a call. Silence the handset ringer temporarily while
- the phone is ringing. Delete the displayed entry while reviewing
- the directory, caller ID log or redial list.
- · Delete digits or characters when entering numbers or names Delete the playing message or playing
- announcement.

8 - Microphone

Press to make or answer a call.

· During a call, press to switch between the handset speakerphone and the handset

Press to switch to tone dialing during a call

saving it in the directory

if you have pulse service.

 While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or

· Press and hold to set or dial your voicemail

Press to make or answer a call.

- During a call, press to answer an incoming call when you receive a call waiting alert
- 13 REDIAL/PAUSE Review the redial list.

· Press and hold to insert a dialing pause

while dialing or entering numbers. 14 - CHARGE light

On when the handset is charging in the handset charger.

Vtech

Charger overview

The battery icon animates when the	
battery is charging.	
The battery icon becomes solid when the battery is fully charged.	
The handset ringer is off.	
There are new voicemail received from your telephone service provider.	
ANS ON The answering system is turned on.	
The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.	
NEW The entry you are reviewing is new in the caller ID log.	
The number of current playing message and the total number of messages recorded.	

Ø	The telephone base ringer is off.
> M	There are new voicemail received from your telephone service provider.
NEW	The entry you are reviewing is new in the caller ID log.
- MSGF	The total number of messages recorded when the telephone base is not in use. The number of the playing message.

Connect


You can choose to connect the telephone base for desktop usage or wall mounting.


Use only the adapters provided. Make sure the electrical outlets are not controlled by


a ceiling, under-the-table or cabinet outlet

 The adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into

If you subscribe to digital subscriber line (DSL) nigh-speed Internet service through your telephone line, make sure you install a DSL filter (not included) between the telephone line cord and telephone wal jack. Contact your DSL service provider for more

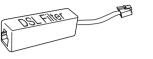

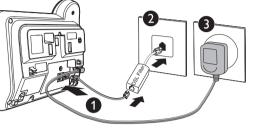

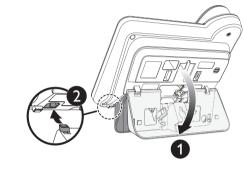

Press ▼ or ▲ to move the cursor to the left or

Press and hold PAUSE to insert a dialing

• Press 0 to add a space (for entering names

1. Press 🖾 on the cordless handset when the

Press ▼ or ▲ to browse through the directory

phone is not in use, or $\blacktriangle \$ on the telephone

base when the telephone base is not in use.

pause (for entering numbers only).

Review a directory entry

Entries are sorted alphabetically.


Install and charge the battery

Install the battery Install the battery as shown below.

- **M**NOTES
- Use only supplied battery. Charge the battery provided with this product only in accordance with the instructions and

limitations specified in this manual.

· If the handset will not be used for a long time disconnect and remove the battery to prevent possible leakage.

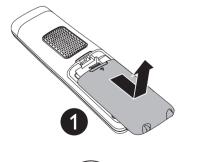



Connect the charger and charge the



Once you have installed the battery, the handset LCD display indicates the battery status (see the table on next page).

ØNOTES

continuous charging.

- · For best performance, keep the handset in the telephone base or charger when not in use. · The battery is fully charged after 11 hours of
- If you place the handset in the telephone base or the charger without plugging in the battery, the screen displays **NO BATTERY**.

Battery indicators	Battery status	Action
The screen is blank, or displays Put in charger and [] flashes.	The battery has no or very little charge. The handset cannot be used.	Charge without interruption (about 30 minutes).
The screen displays Low battery and [] flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (about 30 minutes).
The screen displays HANDSET X.	The battery is charged.	To keep the battery charged, place it in the handset charger

when not in use.

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time.

Set date and time

Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded

- 1. Use the dialing keys (0-9) to enter the month MM), date (DD) and year (YY). Then press
- 2. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to
- choose AM or PM. 3. Press SELECT to save

Check for dial tone Press TALK. If you hear a dial tone, the installation is successful

If you do not hear a dial tone: Make sure the installation procedures

described above are properly done. It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC), Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your

home or office. When the handset is out of range, the handset displays Out of range or no pwr at base. If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press TALK. Move closer to the telephone base, then press TALK to answer the

interference. To improve reception, move closer to

If the handset moves out of range during

a telephone conversation, there may be

ing the telephone base/ dset menu

You can use the telephone base or a cordless handset to change your telephone settings

1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ until the screen displays the desired feature menu.

Configure your telephone

3. Press **SELECT** to enter that menu. To return to the previous menu, press CANCEL

To return to idle mode, press and hold

The LCD language is preset to English. You can select English, French or Spanish to be used in all screen displays

- 1. Press **MENU** when the handset/telephone base is not in use.
- 2. Press **▼** or **△** to scroll to **\$Settings**, then press SELECT. Press SELECT to select \$LCD language.

4. Press ▼ or ▲ to select **†English**, **†Français** or

♦Español, then press **SELECT**. Set date and time

nessages time stamp

⊘NOTE Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded

1. Press **MENU** when the handset/telephone base

- is not in use. 2. Press ▼ or ▲ to scroll to **\$Set date/time**, then press SELECT. 3. Use the dialing keys (**0-9**) to enter the month (MM), date (DD) and year (YY). Then press
- 4. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM. 5. Press SELECT.

If you have pulse (rotary) service only, you can

mode after you end the call.

Temporary tone dialing

switch from pulse to touch-tone dialing temporarily during a call. During a call, press TONEX. 2. Use the dialing keys to enter the number you

wish to dial. The telephone sends touch-tone

signals. It automatically returns to pulse dialing

Telephone operations

number

Lift the corded handset, or press ■ WSPEAKER on the telehpone base, then dial the number.

Answer a call Press → , ■ or any of the dialing keys on the

handset.

 Lift the corded handset, or press ■ **/SPEAKER or any of the dialing keys on the telephone base.

End a call Press **OFF** on the handset or place the handset

Speakerphone

in the handset charger. . When you are using the corded handset, place

it on the telephone base . When you are using the base speakerphone, press **◄)/SPEAKER**.

When the cordless handset is on a call, press ■) to switch between the handset speakerphone and the handset earpiece.

When the corded handset is on a call, press

between the telephone base speakerphone and the corded handset. Volume During a call, press **▲/VOLUME** or **▼/VOLUME**

on the handset, or press **▼ VOL** or **VOL △** on

the telephone base to adjust the listening

■)/SPEAKER on the telephone base to switch

The mute function allows you to hear the other party but the other party cannot hear you. 1. During a call, press **MUTE** on the handset. The handset displays Muted until the mute function

2. Press MUTE on the handset again to resume

the conversation. The handset displays

Microphone on briefly.

is turned off.

- 1. During a call, press **MUTE** on the telephone base. The telephone base displays **Muted** and the MUTE light turns on until the mute function is turned off.
- 2. Press MUTE on the telephone base again to resume the conversation. The telephone base displays **Microphone** on briefly.

Transfer a call

message playback

or to transfer a call.

phone is not in use.

playing announcement.

delete a character or digit

FIND HANDSET

- ▶/■ /PLAY/STOP

X/DELETE

≫/SKIP

▼ VOL ▲

也/ANS ON/OFF

on or off.

REDIAL/PAUSE

Review the redial list

numbers dialed.

speakerphone

5 – MUTE

save an entry or setting.

· While in a menu, press to select an item, or

Press to initiate or answer an intercom call,

· Press to page all handsets when the

Press to start or stop message playback

· Press to delete the playing message or

· While reviewing the redial list, directory or

caller ID log, press to delete an individual

While entering names or numbers, press to

· Press once to repeat the playing message.

· Press twice to play the previous message.

· Silence the base ringer temporarily while

Adjust the telephone base ringer volume

· Press to turn the built-in answering system

Press repeatedly to view the last 10

while dialing or entering numbers.

Press to make, answer or end a call.

the corded handset and the base

During a call, press to switch between

Press and hold to insert a dialing pause

Press to skip to the next message.

Mute the microphone during a call.

the phone is ringing

Adjust the listening volume.

memos in the answering system.

· Flashes when there are new messages or

MENU/SELECT

· Show a menu.

While on an outside call, you can transfer the call from a cordless handset to another handset or the elephone base 1. During a call, press **MENU**.

Press ▼ or ▲ to scroll to \$Transfer, then press

- SELECT. Your handset shows Transfer to: Press 7 for the telephone base or 1-5 for **HANDSET 1** to HANDSET 5.
- 4. To answer the call on the destination handset, press TALK, ■) or any dialing key on the handset

or any dialing key on the telephone base.

Join a call in progress

You can use the telephone base and a cordless handset, or two cordless handsets at a time on an

 When a handset or the telephone base is already on a call, press TALK or ■ on another handset to join the call. Press OFF or place the handset in the handset

charger to exit the call. The call continues until both devices hang up.

 Lift the corded handset or press ■ SPEAKER on the telephone base. · Place the corded handset back to the

the telephone base to exit the call. The call continues until both devices hang up. Call waiting

and take the new call.

If you subscribe to call waiting service from your telephone service provider, you hear an alert tone when there is an incoming call while you are Press FLASH to put your current call on hold

Press FLASH to switch back and forth between

· Press FIND HANDSET on the telephone base

Use this feature helps you find misplaced handsets To start paging:

Find handset

- and its screen displays ** Paging **. All idle handsets ring and display ** Paging **. To stop paging: on the cordless handset.
- Place the cordless handset to the handset

handset, or two cordless handsets.

To initiate an intercom call with a cordless handset:

- handset, press $\frac{1}{100}$, INT, or any dialing key. To answer the intercom call at the telephone

To initiate an intercom call at the

- 1. Press **INT** on the telephone base when the
- . To end the intercom call at the telephone base, press INT, or ■)/SPEAKER when using the base speakerphone, or place the corded
- To end the intercom call on the destination handset, press **OFF**, or place the handset back

Answer an incoming call during an intercom call If you receive an incoming outside call during ar

ntercom call, you will hear an alert tone.

To answer on a cordless handset: To answer the call, press Talk. The intercom call ends automatically

To end the intercom call without answering or

canceling the incoming call, press OFF. The telephone continues to ring. To answer at the telephone base:

handset back to the base. The intercom call ends automatically. Then press **◄ **/SPEAKER** or lift up the corded handset to answer the call To end the intercom call without answering or

■)/SPEAKER, or place the corded handset

back to the base. The telephone continues to

Press ■ SPEAKER, or place the corded

Call transfer using intercom Use the intercom feature to transfer an outside

canceling the incoming call, press

To transfer a call with a cordless handset: During a call, press INT. 2. To answer the call on the destination handset,

To answer the call at the telephone base,

press INT, ■ WSPEAKER, any dialing key or

lift the corded handset. The outside call is still

call to another cordless handset or the telephone

press TALK, INT, ■), or any dialing key. The outside call is still on hold. You can now have a private intercom conversation.

on hold. You can now have a private intercom To transfer a call at the telephone base:

 During a call, press INT. 2. To answer the call on the destination handset press TALK, INT, ■®, or any dialing key. The outside call is still on hold. You can now have a private intercom conversation.

Directory

Add a directory entry

press **SELECT**.

of that particular key.

Press SELECT to save.

or characte

Each handset and the telephone base store the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to

make room for the new entry. Review and dial a redial list entry 1. Press **REDIAL** on the handset or the telephone

base when the phone is not in use. 2. Press **▼**, **△** or **REDIAL** repeatedly until the desired entry displays. 3. When the desired entry displays, press TALK or

X/DELETE on the telephone base.

The directory can store up to 50 entries, which are

1. Enter the number when the phone is not in use.

telephone base when the phone is not in

Press ▼ or ▲ to scroll to ♣Add contact, then

Copy a number from the redial list by pressing

repeatedly to find the desired number. Press

Additional key presses show other characters

While entering names and numbers, you can:

Press DELETE to backspace and erase a digit

Press and hold DELETE to erase the entire entry

3. Press **SELECT** to move on to enter the name.

4. Use the dialing keys to enter the name.

REDIAL and then press **▼**, **△** or **REDIAL**

SELECT to copy the number.

Press MENU on the handset or on the

use, then press ▼ or ▲ to scroll to ♦

Directory, then press SELECT.

2. Use the dialing keys to enter the number.

shared by all handsets and the telephone base.

Each entry may consist of a telephone number

with up to 30 digits and a name with up to 15

Press **MENU**, then go to Step 3.

on the handset to dial.

Lift the corded handset or press **◄ **/SPEAKER** on the telephone base to dial.

Delete a redial list entry · While the screen displays the desired number, press **DELETE** on the handset or press

SELECT.

Press TALK or ■ on the handset.

Delete a directory entry

press **SELECT**.

. When the desired entry appears, press **DELETE**. When the screen displays **Delete** contact?, press SELECT.

speed dial locations (0 and 2-9) so that you can dial these numbers more quickly.

press **SELECT**.

SELECT. 3. Press ▼ or ▲ to scroll to **\$Speed dial**, then

the desired speed dial location

press **SELECT**. Dial a speed dial number

 When the phone is not in use, press and hold a in the corresponding speed dial location.

or use the dialing keys to start a name search Dial a directory entry When the desired entry appears:

Lift the corded handset or press **■)/SPEAKER** on the telephone base.

- Edit a directory entry 1. When the desired entry displays, press
- 2. Use the dialing keys to edit the number, then press **SELECT**. 3. Use the dialing keys to edit the name, then

Speed dial

Assign a speed dial number 1. Press **MENU** when the phone is not in use.

You can copy up to nine directory entries into the

2. Press ▼ or ▲ to scroll to **†Directory**, then press

4. Press **▼**, **△** or a dialing key (**0** or **2-9**) to choose Press SELECT. The screen displays Copy

6. Press ▼ or ▲ to scroll to desired entry, then

dialing key (0 or 2-9) to dial the number stored



Handset display icons


IJ	battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
Ø	The handset ringer is off.
>	There are new voicemail received from your telephone service provider.
ANS ON	The answering system is turned on.
ECO	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.
NEW	The entry you are reviewing is new in the caller ID log.
MSG#	The number of current playing message and the total number of messages recorded.


V ^M	There are new voicemail received from your telephone service provider.
NEW	The entry you are reviewing is new in the caller ID log.
MEG = 11	The total number of messages recorded when the telephone base is not in use. The number of the playing message.


	The battery icon animates when the battery is charging.	USE
	The battery icon becomes solid when the battery is fully charged.	Connect the telephone base
	The handset ringer is off.	
	There are new voicemail received from your telephone service provider.	
N	The answering system is turned on.	
	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.	1
	The entry you are reviewing is new in the caller ID log.	Mount the telephone base
		i


Telephone base display icons

>>	There are new voicemail received from your telephone service provider.		
NEW	The entry you are reviewing is new in the caller ID log.		
MSGs —	The total number of messages recorded when the telephone base is not in use. The number of the playing message.		

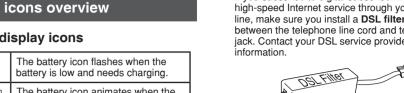

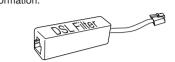

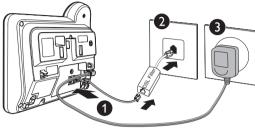

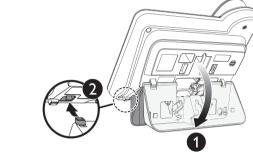

- 2. Press ▼ or ▲ to scroll to **†Directory**, then press SELECT
- 3. Press ▼ or ▲ to scroll to **\$Speed dial**, then press SELECT. 4. Press **▼**, **▲** or a dialing key (**0** or **2-9**) to choose
- the desired speed dial location, then press **SELECT** to show the speed dial entry. 5. Press **SELECT** again. Then press **▼** or **△** to scroll to **Clear SD** and then press **SELECT**

Press **DELETE**. The screen shows **Clear SD**

The screen shows Clear SD #X?

6. Press **SELECT** to confirm.

Caller ID

If you subscribe to caller ID service, information about each caller will appear after the first or second ring. If you answer a call before the caller's information appear on the screen, it will not be saved in the caller ID log

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the phone number has more than 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry 1. Press CID on the cordless handset or the

telephone base when the phone is not in use. 2. Press ▼ or ▲ to browse through the caller ID

Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the screens display XX missed calls.

Each time you review a caller ID log entry marked **NEW** on the handset or **NEW** on the telephone base, the number of missed calls decreases by one When you have reviewed all the missed calls, the missed call indicator no longer displays. If you do not want to review the missed calls one

by one, press and hold CANCEL when not in use to clear the missed call indicator. All the entries are then considered old.

Dial a caller ID log entry When the desired entry displays, press → or ■ on the handset to dial.

When the desired entry displays, press ■ **NSPEAKER** or lift the corded handset to dial.

Frequently asked questions

Save a caller ID log entry to the directory

machine memorv is full Make sure the telephone it does not record new base is installed properly nessages until some old messages are deleted. and charged correctly. For optimum daily performance If you subscribe to return the handset to the voicemail service, change telephone base after use the number of rings so that vour answering system Disconnect the telephone answers before your voicemail service answers To determine how many rings activate vour voicema service, contact your elephone service provider

The answering

system does

not announce

of the week

for recorded

system are

stamp.

the correct day

messages time

system does

ot record

iessages.

If changing the telephone line cord does not help. the wall iack (or the wiring to this wall jack) may be defective. Contact your telephone service provider You may be using a new

cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your service provider for solutions.

register HS and alternately. The handset does not work at all.

The handset is deregistered register it back: Press and hold

Press QUIET# on the handset. The handset shows **Registering...** Both the telephone base and cordless handset show **Registered**, and you hear a beep when the registration process completes. This process takes about 60 seconds

f registration fails, the

handset displays Failed.

Repeat steps 1 to 2 again.

When the desired caller ID log entry displays,

2. Use the dialing keys to modify the number, if necessary. Then press SELECT. 3. Use the dialing keys to modify the name, if

Delete caller ID log entries · When the desired caller ID log entry displays,

necessary. Then press SELECT.

press **DELETE**. To delete all caller ID log entries:

1. Press **MENU** on the handset or on the telephone base when the phone is not in use. 2. Scroll to **†Caller ID log** and then press

Scroll to **Del all calls** then press SELECT

Sound settings

Key tone

You can turn the key tone on or off for each handset and the telephone base 1. Press MENU when the handset/telephone base

- is not in use. 2. Scroll to \$Settings and then press SELECT.
- 3. Scroll to choose **♦Key tone**, then press SELECT
- 4. Press ▼ or ▲ to choose **†Key tone:On** or **†Key** tone:Off, then press SELECT to save.

Ringer tone You can choose from different ringer tones for

each handset and the telephone base. 1. Press **MENU** when the handset/telephone base

- Scroll to **†Ringers** and then press **SELECT**.
- 3. Scroll to choose **♦Ringer tone**, then press
- 4. Press ▼ or ▲ to sample each ringer tone, then press **SELECT** to save.

If you turn off the ringer volume on a cordless handset, you will not hear ringer tone samples. Telephone base ringer volume

Press **▼ VOL** or **▲ VOL** on the telephone base to adjust the ringer volume when the telephone base is not in use. When you set the ringer volume to zero, the base

ringer is off. The telephone base announces, "Base ringer is off," and displays Ringer off and

Make sure the answering

nswering system is on

system is on. When the

ANS ON should display

on the handset and the

Make sure you have set

he date and time. See

Configure your telephone

If a caller leaves a very long

system disconnects the call

after the preset recording

answering system becomes

full during a message, the

recording and disconnects

While the handset is not in

use, press MENU and then

enter **\(\frac{\colon}{364#} \) to change the**

handset LCD language

back to English.

answering system stops

If the memory on the

lost when the answering

on the answering | message, part of it may be

the call.

When the answering

telephone base.

Handset ringer volume You can adjust the handset ringer volume level, or

1. Press MENU when the handset/telephone base is not in use. 2. Scroll to **†Ringers** and then press **SELECT**

3. Press ▼ or ▲ to sample each volume level,

then press **SELECT** to save.

⊘NOTE

turn the ringer off.

When the ringer volume is set to off, the handset still rings when you press FIND HANDSET at the telephone

Temporary ringer silencing When the telephone is ringing, you can temporarily

silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer: Press **MUTE** or **CANCEL** on the handset and it

displays **Ringer muted** and \searrow . To silence the telephone base ringer:

• Press MUTE or CANCEL on the telephone base and it displays

Quiet mode

You can turn on guiet mode for a period of time (1-12 hours). During this period, all tones (except paging tone) and call screening are muted.

- To set and turn the quiet mode on: 1. Press and hold QUIET# when the handset/
- ephone base is not in use. 2. Use the dialing keys to enter the desired duration (1-12), then press **SELECT**

To turn the quiet mode off:

While the quiet mode is on, press and hold QUIET#.

About the built-in answering system and voicemail service

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fee may apply). The main differences between them are:

ored in the

elephone base.

You messages

When you

essages, the

andset and the

elephone base

both display **XX**

and the ►/■

/PLAY/STOP lig

on the telephone

essages, usuall

Press ►/■/

PLAY/STOP

the telephon

remotely with

an access

base: or

Access

code.

base flashes.

there are two

To retrieve

new messa

to retrieve | received new

will not be deleted

utomatically. You

have to delete your | deleted after a

essage manually. | period of time.

lessages are

tored in a server

by your telephone

Your messages

automatically

ontact your

elephone service

provider for more

When you receive

ne handset and

e telephone ba splay 🔀 and

iew messages

To retrieve

nessages, vou

need an access

mber and/or a

y your telephone

service provider.

sword provided

may be

r system provided

he recording time

Turn the answering system on or off The answering system must be turned on to

Press **b/ANS ON/OFF** to turn the built-in answering system on or off.

1. Press **MENU** when the handset/telephone base

- 2. Press ▼ or ▲ to scroll to **\$Answering sys**, then press SELECT
- 3. Press **▼** or **△** to scroll to **♦**Answer on/off, then press SELECT
- Press ▼ or ▲ to scroll to ♣Answer: On or ♦ Answer: Off, then press SELECT.

Default announcement

The telephone is preset with a greeting that answers calls with, "Hello. Please leave a message after the tone." You can use this preset announcement, or replace it with your own. Record your own announcement

The announcement can be up to 90 seconds in

- 1. Press **MENU** when the phone is not in use. 2. Press **▼** or **△** to scroll to **♦**Answering sys, then press **SELECT** twice.
- 3. The system announces, "To play, press 2. To record, press 7." Press 7 to record.
- 4. The system announces, "Record after the tone. Press 5 when you are done." After the tone. speak towards the microphone.

5. Press 5 when done. Play your announcement

province to province.

. Press **MENU** when the phone is not in use 2. Press **▼** or **△** to scroll to **♦**Answering sys, then press **SELECT** twice

modifications to this limited warranty and you

State/Provincial Law Rights: This warranty gives

you specific legal rights, and you may also have

other rights, which vary from state to state or

ordinary use) are limited to one year from the

lasts, so the above limitation may not apply to

you. In no event shall VTech be liable for any

from the use of this Product. Some states/

imitation or exclusion may not apply to you.

provinces do not allow the exclusion or limitation of

incidental or consequential damages, so the above

Please retain your original sales receipt

as proof of purchase.

ndirect, special, incidental, consequential, or

should not rely on any such modification

3. The system announces, "To play, press 2. To record, press 7." Press 2 to play the current

Options during playback: Set your built-in answering system Press **▼/VOLUME** or **▲/VOLUME** on the

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message

Your answering system allows you to set your announcement, to save and delete messages activate call screening, to set number of rings before pick up, to access remotely, and to control

Set number of rings You can set the answering system to answer an incoming call after two, three, four, five or six

rings; or toll saver. If you choose toll saver, the answering system answers a call after two rings

with the default announcement.

Press 5 to stop playback.

press **SELECT** twice.

Delete your announcement

your recorded announcement.

if you have new messages, or after four rings when there are no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges when you are calling from outside your local area.

1. Press **MENU** when the phone is not in use.

cordless handset, or lacktriangle **VOL** or **VOL** lacktriangle on the

telephone base to adjust the listening volume.

1. Press **MENU** when the phone is not in use.

2. Press ▼ or ▲ to scroll to **\$Answering sys**, then

3. The system announces, "To play, press 2. To

record, press 7." Press 3 or DELETE to delete

When your announcement is deleted, calls are answered

- 2. Press ▼ or ▲ to scroll to **\$Answering sys**, then Options during playback: press SELECT
- 3. Press **▼** or **△** to scroll to **♦**Ans sys setup, then press SELECT
- Scroll to **†# of rings**, then press **SELECT**.
- 5. Press **▼** or **△** to select **♦2**, **♦3**, **♦4**, **♦5**, **♦6** or **♦Toll saver**, and then press **SELECT**.

Set recording time You can set the recording time allowed for each

incoming message 1. Press **MENU** when the phone is not in use.

- 2. Press **▼** or **△** to scroll to **♦**Answering sys, then press SELECT
- 3. Press ▼ or ▲ to scroll to \$Ans sys setup, then press SELECT
- Scroll to **Recording time**, then press
- 5. Press ▼ or ▲ to select **\$3 minutes**, **\$2 minutes** or **\$1 minute**, and then press **SELECT**.

Jsing your built-in answering

New message indication

When there are new answering system messages the handset and the telephone base display XX new messages, and the ▶/■/PLAY/STOP light on the telephone base flashes.

Frequency Crystal controlled PLL synthesizer

imitations: Implied warranties, including those of 1921.536-1928.448 MHz fitness for a particular purpose and merchantability elephone base: (an unwritten warranty that the Product is fit for 1921.536-1928.448 MHz Channels 5 date of purchase. Some states/provinces do not allow limitations on how long an implied warranty Nominal effective similar damages (including, but not limited to lost profits or revenue, inability to use the Product or requirement 2.4V Ni-MH batterv other associated equipment, the cost of substitute equipment, and claims by third parties) resulting

> Directory: 50 memory locations up to 30 digits and 15 characters Caller ID log: 50 memory locations up to 24 digits and 15 characters

6V AC @ 300mA

Remote access

If the message alert tone is turned on, the

Message playback

Options during playback:

playback volume.

telephone base beeps every 10 seconds when

there are messages that have not been reviewed.

To play messages at the telephone base:

1. Press **MENU** when the phone is not in use.

Press ▼ VOL or VOL ▲ to adjust the message

Press **≪/REPEAT** twice to hear the previous

message. The system advances to the next

To play messages with a cordless handset:

Press ▼/VOLUME or ▲/VOLUME to adjust the

· Press 4 to repeat the message. Press 4 twice

message. The system advances to the next

You can only delete old (reviewed) messages.

them. You cannot retrieve deleted messages

You cannot delete new messages until you review

To delete all messages with the telephone

1. Press **X/DELETE** twice when the phone is not

To delete all old messages with a handset:

Press ▼ or ▲ to scroll to \$Answering sys, then

1. Press **MENU** when the phone is not in use.

3. Press ▼ or ▲ to scroll to **†Delete all old**, and

Press 3 or DELETE to delete the playing

1. Press **MENU** when the phone is not in use.

Press SELECT to select ₱Play messages

message playback volume.

to hear the previous message

· Press OFF to stop the playback.

Delete all old messages

then press **SELECT** twice.

Press 6 to skip to the next message.

Press SELECT to select ₱Play messages.

Press ►/SKIP to skip to the next message.

Press REPEAT to repeat the message

· Press X/DELETE to delete the playing

· Press STOP or 5 to stop the playback.

Press ►/■/PLAY when the phone is not in use.

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is 19. You can use this oreset code, or set your own

- 1. Dial your telephone number from any touch-
- tone telephone
- 2. When the system plays your announcement
- enter the two-digit security code
- 3. Enter one of the following remote commands.

1	Play all messages.
2	Play only new messages.
3	Delete the current message (during playback).
33	Delete all old messages.
4	Repeat the current message (during playback).
5	Stop.
*5	Hear a list of remote commands.
6	Skip to the next message (during playback).
*7	Record a new announcement.
8	End the call.
0	Turn the answering system on or off.

Ising the built-in answering system and voicemail service

service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact your telephone service

s busy recording a message and you receive another call, the second caller can leave a voicemail message.

appropriate setting.

etrieve voicemail from telephone

telephone service providers. It may be included with your telephone service, or may be optional.

Avoid rough treatment Place the handset down gently. Save the original

Taking care of your telephone

ever need to ship it. **Avoid water**

not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms can sometimes cause power

messages, the indicators on the handset and the

should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

Designed to fit your home.

VTech Communications, Inc. A member of THE VTECH GROUP OF COMPANIES. VTech is a registered trademark of VTech Holdings Limited. Specifications are subject to change without notice © 2014 VTech Communications Inc. All rights reserved. 12/14. CS6649-X_ACIB V10.0

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, visit our website at www.vtechphones.com or call 1 (800) 595-9511 for customer service.

My telephone does not work and battery is installed The display shows **No line**. I line cord from your cannot hear the dial tone.

telephone and connect it to another telephone. If there is no dial tone on that othe telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.

from the telephone base. To FIND HANDSET on the telephone base for about four seconds until the IN USE light turns on and it shows Registering...

I accidentally set my LCD language to Spanish or French, and I don't know how to change it back to English.

imited warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in

the United States of America and Canada. What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially

Defective Product")?

How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

This limited warranty does not cover: Product that has been subjected to misuse

an authorized service représentative of VTech: 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems:

4. Product to the extent that the problem is

caused by use with non-VTech accessories;

Product whose warranty/quality stickers. product serial number plates or electronic

America or Canada, or used for commercial or nstitutional purposes (including but not limited to Products used for rental purpos 7. Product returned without a valid proof of

customer controls, and installation or repair of

improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or 2. Product that has been damaged due to repair, alteration or modification by anyone other than

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement should expect the repair or replacement to take

What is not covered by this limited warranty?

accident, shipping or other physical damage,

This warranty is the complete and exclusive

Other limitations

this limited warranty.

serial numbers have been removed, altered or 6. Product purchased, used, serviced, or shipped or repair from outside the United States of

purchase (see item 2 below); or 8. Charges for installation or set up, adjustment of

systems outside the unit. How do you get warranty service? To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377. **NOTE:** Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and

transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs

What must you return with the Product to get warranty service? Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and

for the repair of Products that are not covered by

2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address, and telephone number.

agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make

Technical specifications

control Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at Telephone base

6V DC @ 400mA

4. Hang up or press 8 to end the call.

3. Scroll to **CIr voicemail** #, then press **SELECT** 4. Press **SELECT** again to confirm. You can use your answering system and voicemail Expand your telephone system

If you are on a call, or if the answering system

Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, if your voicemail answers after six rings, set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the

Voicemail is a feature available from most

and the telephone base display and New

number provided by your telephone service

After you have listened to all new voicemail

Turn off the new voicemail indicator

If you have retrieved your voicemail while away

from home, and the telephone still displays the

new voicemail indicators, use this feature to turn

This feature turns off the indicators only, it does

2. Scroll to **\$Settings**, then press **SELECT**.

You can add new handsets (CS6609, purchased

For more details, refer to the user's manual that

separately) to your telephone system. Your

comes with your CS6609 new handset

telephone base supports a maximum of five

1. Press **MENU** when the handset/telephone base

telephone base turn off automatically.

not delete your voicemail messages.

voicemail. To retrieve, you typically dial an access

provider, and then enter a security code. Contact

your telephone service provider for instructions on

how to configure the voicemail settings and listen

Fees may apply

to messages.

off the indicators.

⊘NOTE

handsets.

⊘NOTE

Retrieve voicemai

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

packing materials to protect your telephone if you When you received a voicemail, the handset

General product care

Your telephone can be damaged if it gets wet. Do

Electrical storms

surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that

Document order number: 91-007067-040-100