CS6758-3 CS6759 CS6759-3

DECT 6.0 cordless telephone

PORS TUV 8 WEEZ 9

TONE X OPER O QUET#







 
The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of roducts that save energy and elp protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

Please refer to the online Complete user's manual for a full set of installation and operation instructions at www.vtechphones.com.




Telephones identified with this ogo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the elecommunications Industry Association. Used under license.

What's in the box

Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is



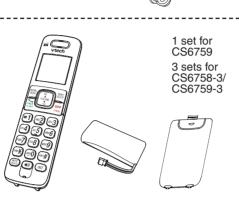



Charge the battery

charger to charge.



Abridged user ortant Safe manual

Place the handset in the telephone base or the

Once you have installed the battery, the

status (see the table below).

continuous charging.

shows **Put in** I or very little

The screer

is blank, or

charger and () flashes.

The screen

shows Low

The screen

shows HANDSET X.

flashes.

battery and (

handset LCD display indicates the battery

For best performance, keep the handset in the

telephone base or charger when not in use.

The battery is fully charged after 12 hours of

he battery

as no chard

charge. The

The battery has

to be used for a

enough charge

The battery is

short time.

charged.

be used.

Charge withou

Charge without

minutes).

To keep the

battery charge

elephone base

or charger wher

(at least 30

Instructions

Press to start an intercom conversation or

OPERO OUET#

(INT)

1 - Handset earpiece

2 - LCD display

3 - MENU/SELECT

4 - OFF/CANCEL

Show the menu

· Hang up a call.

handset is ringing.

save an entry or setting.

Handset overview

Vtech

transfer a call (for multi-handset models only)

While in a menu, press to select an item, or

Silence the ringer temporarily while the

Press and hold to erase the missed call

Press to return to the previous menu: or

Press repeatedly to show other dialing

ndicator while the phone is not in use.

press and hold to return to idle mode, without

options when reviewing a caller ID log entry.

- · Make or answer a call using the handset
- During a call, press to switch between the speakerphone and the handse

- MUTE/DELETE

- Mute the microphone during a call. Delete digits or characters while using the dialing keys.
- Silence the ringer temporarily while the handset is ringing.

 While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

Press to add a space when entering names.

 Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the directory.

• Press and hold to set or dial your voicemail

13 - TALK /FLASH Make or answer a home call.

- · Answer an incoming home call when you hear
- a call waiting alert.

14 - REDIAL/PAUSE

• Press repeatedly to review the redial list. Press and hold to insert a dialing pause while

15 - VOLUME/**▲**/᠍♡

- Review the directory when the phone is not in
- Increase the listening volume during a call.
- Scroll up while in a menu, or in the directory, caller ID log, or redial lis
- Move the cursor to the right when entering numbers or names.

VOLUME/▼/CID

- · Review the caller ID log when the phone is not in
- · Decrease the listening volume during a call.
- · Scroll down while in a menu, or in the directory, caller ID log, or redial list.
- Move the cursor to the left when entering

16 - CHARGE light

numbers or names

· On when the handset is charging.



6 - X/DELETE

≫/SKIP

≪/REPEAT

►/■/PLAY/STOP

- ■ SPEAKER

Press to play messages

handset is ringing.

temporarily

entering a number

message playback

Charger overview

1 - Charging pole

Answer a call

12 - MIC (Microphone)

13 - REDIAL/PAUSE

14 - Charging pole

15 - **▲/VOL/**▼

Press to delete the playing message.

Press to repeat the playing message.

Press to skip to the next message.

Press to stop message playback.

Press to make or answer a call.

Mute the microphone during a call.

Silence the ringer temporarily while the

· Press repeatedly to show other dialing

options when reviewing a caller ID log entry.

· Press to add a space when entering names.

While you have set the dial mode to pulse

Press repeatedly to review the redial list.

Adjust the listening volume during a call or

Press to start an intercom conversation or

the telephone base ringer volume.

• When the phone is not in use, press to adjust

transfer a call (for multi-handset models only).

Press and hold to insert a dialing pause while

and on a call, press to switch to tone dialing

Press twice to play the previous message.

When the phone is not in use, press twice to

1 - LCD display

2 - IN USE light

- · Flashes when there is an incoming call, or another telephone sharing the same line is in
- On when the handset is in use.

3 - MENU/SELECT Show the menu

· While in a menu, press to select an item, or save an entry or setting.

Answer an incoming home call when you hear a call waiting alert.

- Review the directory when the phone is not in
- Scroll up while in a menu, or in the directory,
- caller ID log, or redial list Move the cursor to the right when entering numbers or names.

▼ CID

- Review the caller ID log when the phone is not in use.
- Scroll down while in a menu, or in the directory, caller ID log, or redial list.
- Move the cursor to the left when entering numbers or names

OFF/CANCEL

- Press and hold to erase the missed call ndicator while the phone is not in use
- Press to return to the previous menu; or press and hold to return to idle mode, without

4 - ¶/FIND HANDSET

- · Press to page all system handsets.
- 5 UANS ON/OFF
- · Press to turn the answering system on or off.

Press TALK , ■), OFF, or any dialing key on the Press TALK or ■), and then dial the telephone handset

Display icons overview

charging.

charged.

when the battery is charging.

The battery icon becomes

The handset ringer is off.

There are new voicemail

The ECO mode activates

automatically to reduce

the telephone base.

entries.

turned off.

recorded.

service provider.

reviewing is new.

listening is new.

Telephone base icons

service provider.

received from your telephone

power consumption when the

handset is within range from

There are new caller ID log

The telephone base ringer is

There are new voicemail received from the telephone

The message number

currently playing, or the

The message you are

total number of messages

The caller ID log entry you are

solid when the battery is fully

Handset icons

≻Ĥ→Ĥ

Place the handset in the telephone base or

charger. **⊘**NOTE

Do not press and hold **I/FIND HANDSET** for more than four seconds. It may lead to handset deregistration.

this telephone base. You can register up to five handsets to the telephone base.

When a handset is on a home call, press

Press OFF to exit the call. The call continues

until all handsets hang up.

Transfer a call

While on an outside call, you can transfer the

call from one handset to another. 1. Press **MENU** on your handset during a call.

- 2. Scroll to Transfer, and then press SELECT. telephone base. The screen displays **Muted**. 3. Use the dialing keys to enter a destination
 - handset number. 4. To answer the intercom call, press TALK, ■), or any dialing key on the destination handset,

or press **■%SPEAKER**, **INT** or any dialing key (0-9, ouler#, or Tone ₹) on the telephone

Intercom

Use the intercom features for conversations between two devices.

- 1. Press **INT** on your handset or telephone base when not in use.
- 2. Use the dialing keys to enter a destination
- device number. 3. To answer the intercom call, press Talk
- ■), INT or any dialing key on the destination handset; or press **◄ */SPEAKER**, **INT** or any dialing key (0-9, QUET#, or TONE X) on the telephone base. 4. To end the intercom call, press **OFF** or

place the handset back in the telephone base or charger.

Handset lights On when the handset The battery icon flashes when the battery is low and needs speakerphone is in use. On when the handset is charging in the telephone base The battery icon animates or handset charger.

Telephone base lights

IN USE

Lights overview

	iii use.
	On when you are registering a handset.
	Flashes quickly when there is an incoming call.
	Flashes when another telephone sharing the same line is in use.
	Flashes when you are deregistering all handsets.
UANS ON/OFF	On when the answering system is turned on.
MUTE	On when the mute function is turned on during a call.
▶/ ■ /PLAY/STOP	Flashes when there are new messages or memos in the answering system.
■WSPEAKER	On when the telephone base speakerphone is in use.

Connect

by wall switches

for desktop usage or wall mounting.

TONE X OPER O CLET#

MUTE DELETE INT


vtech

- Use only the adapters provided. Make sure the electrical outlets are not controlled
- The adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs plugged into a ceiling, under-the-table or cabinet outlet. are not designed to hold the plug in place if it is


• If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSL filter (not telephone wall jack. Contact your DSL service provider for more information



Connect the telephone base

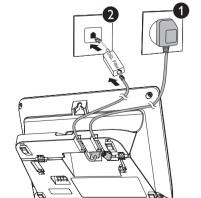

Connect the charger

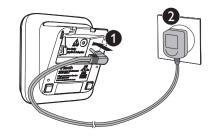

Mount the telephone base

Abridged user's manual


You can choose to connect the telephone base

INT B 1 ABC 2 DEF 3

GHI 4 JKL 5 MNO 6

MEDIAL TONE X OPER O QUIET #


PORS 7 TUV 8 WXYZ 9

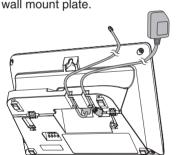


mount bracket down to wall mount position




of the telephone base with the standard wall plate. Slide the bracket down until it clicks not controlled by a wall switch.

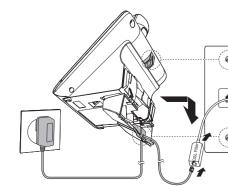


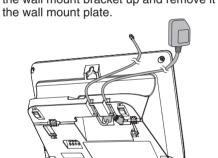

 bracket on the telephone base to release it clicks into place.






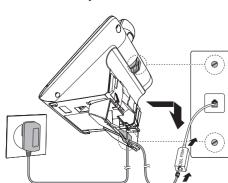


Unplug the telephone line cord (or the DSL filter) from the telephone wall jack. Unplug the power adapter from the electrical outlet. Slide the wall mount bracket up and remove it from

vtech

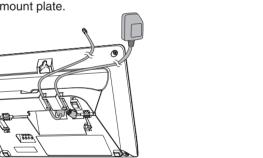


2. Press down on the tabs on the wall mount it from tabletop orientation. Rotate the wall and then push it into the telephone base until



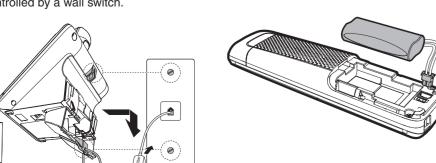


4. Slide the telephone base down until it clicks securely in place. Bundle the telephone line ties if necessary

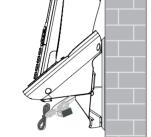


nstall and charge the battery


possible leakage.

 Install the battery as shown below.



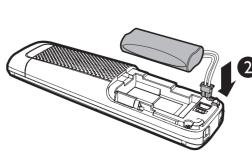

 cord and power adapter cord neatly with twist





Install the battery

MNOTES Use only the adapters provided

. If the handset will not be used for a long time.

 disconnect and remove the battery to prevent



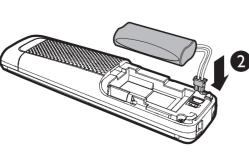

Before use

6 - INT

After you install your telephone or power returns following a power outage, the handset or

Set date and time

ØNOTE

Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.

(HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM. Press **SELECT** to save.

Press TALK. If you hear a dial tone, the installation is successful.

Check for dial tone:

If you do not hear a dial tone: Make sure the installation procedures

service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/ VoIP service provider for more information.

Operating range

When the handset is out of range, the handset

displays **Out of range or no pwr at base**.

closer to the telephone base.

If there is a call while the handset is out of

range, it may not ring, or if it does ring, the call

closer to the telephone base, and then press

 
may not connect well when you press TALK. Move

to answer the call. If the handset moves out

of range during a telephone conversation, there

may be interference. To improve reception, move

telephone will prompt you to set the date and time.



described above are properly done. changed your telephone service to digital

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC), Even so, this handset and telephone base can communicate over only a certain distance which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

Jsing the menu

Press **MENU** when the handset or telephone base is not in use.

Press ▼ or ▲ until the screen displays the desired feature menu.

Press SELECT to enter that menu. To return to the previous menu, press CANCEL.

To return to idle mode, <u>press and hold</u> CANCEL.

Configure your telephone

Set language The LCD language is preset to English. You can select English, French or Spanish to be used in

all screen displays. 1. Press MENU when the handset is not in use. 2. Scroll to Settings, and then press SELECT

Scroll to choose English, Français or **Español**, and then press **SELECT**.

4. Press SELECT again to save

Set date and time

⊘NOTE Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.

Press **MENU** when the handset is not in use.

Scroll to **Set date/time**, and then press SELECT. 3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY).

4. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM.

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily during a call.

5. Press SELECT to save.


Temporary tone dialing

Then press **SELECT**.

During a call, press ™X. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

ephone operation

-----Handset control key panel:

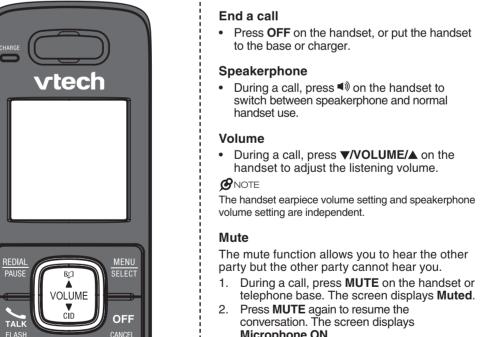

switch between speakerphone and normal handset use.

During a call, press ▼/VOLUME/▲ on the

Press TALK, ■®, or any dialing key.

handset to adjust the listening volume. The handset earpiece volume setting and speakerphone

The mute function allows you to hear the other party but the other party cannot hear you.

conversation. The screen displays Microphone ON. Call waiting

When you subscribe to call waiting service from

your telephone service provider, you hear an

alert tone if there is an incoming call while you are on another call. Press FLASH to put the current call on hold and take the new call.

Press **FLASH** to switch back and forth between calls

Use this feature to find all system handsets.

• Press **/FIND HANDSET** on the telephone

base. All idle handsets ring and display ** Paging **

Find handset

To start paging

To end paging: • Press **/FIND HANDSET** again on the telephone base.

Join a call in progress You can use up to two system handsets at a time on a home line call. You can buy additional expansion handsets (CS6709) for

or on another handset to join the call.

• You can press INT to switch between the

outside call (Outside call displays) and the intercom call (**Intercom** displays). intercom call by pressing **OFF**, or by

If you receive an incoming call during an

ends automatically. To end the intercom call without answering

the outside call, press **OFF**. The intercom call ends and the telephone continues to

On when the telephone line is

Transfer a call using intercom

intercom feature to transfer the call from one handset to another 1. Press INT on your handset or telephone

base during a call.

While on an outside call, you can use the

2. The current call is put on hold. Use the dialing keys to enter a destination handset 3. To answer the intercom call, press TALK,

, INT or any dialing key on the destination

- handset; or press **◄ 》/SPEAKER**, **INT** or any dialing key (0-9, out #, or tone ★) on the telephone base.
- following options: You can let the destination handset join you on the outside call in a three-way conversation. Press and hold

INT on the originating handset

· You can transfer the call. Press OFF, or

1. From this intercom call, you have the

- place your handset back in the telephone base or charger. Your handset displays **Transferred**. The destination handset is then connected to the outside call.
- placing the handset back in the telephone base or charger. The outside call continues

with the original system handset.

Answer an incoming call during an intercom call

ntercom call, there is an alert tone. To answer a call, press TALK. The intercom call

Redial list

Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry

Review the redial list Press REDIAL when the handset is not in use.

2. Press ▼, ▲, or REDIAL repeatedly until the desired entry displays.

Dial a redial list entry

Press TALK or ■ to dial.

Delete a redial list entry

When the desired redial entry displays, press

The phonebook can store up to 50 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a directory entry

- 1. Press **MENU** when the phone is not in use.
- Scroll to **Directory** then press **SELECT**. Press SELECT again to choose Add contact.
- Enter the number. Use the dialing keys to enter the number
- (up to 30 digits). Press SELECT to move to the name.
- 6. Use the dialing keys to enter the name (up to 15 characters). Additional key presses show
- other characters of that particular key. 7. Press **SELECT** to save.

While entering numbers and names, you

- Press **DELETE** to erase a digit or character Press and hold DELETE to erase the entire
- Press ▼ or ▲ to move the cursor to the left or
- Press and hold PAUSE to insert a dialing pause (for entering phone numbers only)

Hear a list of remote

(during playback).

Skip to the next message

Record a new announcement.

Turn the answering system

commands

End the call

A two-digit security code is required to access

the answering system remotely from any touch-

tone telephone. The preset code is **19**. You can

1. Press **MENU** when the phone is not in use.

3. Scroll to **Ans sys setup** then press **SELECT**.

5. Use the dialing keys to enter a two-digit number.

4. Scroll to **Remote code**, and then press

Scroll to a desired two-digit number

6. Press **SELECT** to save and you hear a

Use the built-in answering system

You can use your answering system and

voicemail service together by setting your

answering system to answer before voicemail

service answers as described below. To learn

If you are on a call, or if the answering system

is busy recording a message and you receive

another call, the second caller can leave a

Set your answering system to answer calls

at least two rings earlier than your voicemail

service is set to answer. For example, if your

voicemail service answers after six rings, se

rings. Some voicemail service providers may

your answering system to answer after four

program the delay before answering calls in

six seconds per ring when determining the

seconds instead of rings. In this case, allow

how to program your voicemail settings, contact

on or off.

4. Hang up or press 8 to end the call.

- Press 0 to add a space (for entering names
- Press TONE X to add X (► appears) or QUIET # to add # (₩ appears) (for entering phone

numbers only).

*7

Remote access code

set the code from 00 to 99.

confirmation tone

and voicemail service

your telephone service provider.

voicemail message.

appropriate setting.

Entries are sorted alphabetically.

3 characters for the search).

Review the directory

- Press when the phone is not in use. 2. Scroll to browse through the directory, or use the dialing keys to start a name search (you can enter up to
- 3. When the desired entry appears, press or •) to dial.

Dial a directory entry

When the desired entry appears, press TALK or **◄** to dial.

Edit a directory entry

- When the desired entry displays, press SELECT.
- 2. Use the dialing keys to edit the number, and then press **SELECT**. 3. Use the dialing keys to edit the name, and
- then press **SELECT** to save.

Delete a directory entry:

- When the desired entry displays, press DELETE.
- 2. When the screen displays Delete contact?, press SELECT

Speed dial

You can copy up to 9 directory entries into the speed dial locations (0 and 2-9) so that you can dial these numbers using fewer keys than usual.

The speed dial memory locations are stored in the telephone base and are shared by all handsets. Changes made to the speed dial entries on one handset apply to all.

Assign a speed dial entry

- 1. Press **MENU** when the phone is not in use 2. Scroll to **Directory**, then press **SELECT**.
- 3. Scroll to **Speed dial**, then press **SELECT**.
- 4. Press ▼ or ▲ or the dialing keys (0 or 2-9) to
- choose the desired speed dial location. 5. Press **SELECT**. The screen displays **Copy** from DIR... and then the first entry in the directory.
- 6. Scroll to browse to the desired entry.
- Use the alphabetical search to find the desired

7. Press **SELECT** to save. You hear a confirmation. The name (up to 12 characters) appears in the selected speed dial location. entries in the directory.

• If the directory is empty, when you press **SELECT** in Step 5, the screen displays **Directory empty**.

• If the speed dial location you selected is occupied, the new directory entry you selected replaces the old one. Take caution not to replace entries you do not wish to delete from the speed dial locations.

Reassign a speed dial entry

- 1. Press **MENU** when the phone is not in use. 2. Scroll to **Directory**, then press **SELECT**.
- Scroll to Speed dial, then press SELECT. 4. Press ▼ or ▲, or use the dialing keys to choose the speed dial location you want to
- 5. Press **SELECT** twice. The screen displays Reassign SD.
- 6. Press SELECT. The screen displays Copy from DIR... and then the first entry of the directory.
- 7. Scroll to browse to the desired entry. Use the alphabetical search to find the
- desired entry . Press **SELECT** to save. You hear a confirmation. The name (up to 12 characters)

appears in the selected speed dial location.

Dial a speed dial number Press and hold a dialing key (0 or 2-9) to dial the number stored in the corresponding speed dial location.

When the speed dial location is empty, the screen displays the speed dial list. See Assign a speed dial entry to add a new entry.

Delete a speed dial entry

- 1. Press **MENU** when the phone is not in use. 2. Scroll to **Directory**, then press **SELECT**.
- 3. Scroll to **Speed dial**, then press **SELECT**. 4. Press ▼ or ▲, or use the dialing keys to
- choose the desired speed dial location, then press **DELETE**. The screen displays **Clear** 5. Press **SELECT** to confirm. You hear a
- confirmation tone.

Deleting the speed dial entries does not affect the

Caller ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the telephone number has more that 15 digits. only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry

- Press CID when the phone is not in use. 2. Scroll to browse through the caller ID log. When the desired entry appears:
- Press # repeatedly to show different dialing options.
- Press 1 repeatedly if you need to add or remove 1 in front of the phone number. 3. Press TALK or ■® to dial the displayed number.

Dial a caller ID log entry

or • to dial.

Save a caller ID log entry to the directory

When the desired entry appears, press

- When the desired caller ID log entry displays, press SELECT. 2. Scroll to **To Directory** then press **SELECT**.
- Use the dialing keys to modify the number, and then press **SELECT**.
- 4. Use the dialing keys to modify the name, and then press **SELECT** to save.

Delete a caller ID log entry

· When the desired caller ID log entry displays, press **DELETE**.

Delete all caller ID log entries

 Press MENU when the phone is not in use. Scroll to Caller ID log and then press SELECT. Scroll to Del all calls and then press **SELECT** twice.

Sound settings

Key tone

- time. During this period, all tones (except paging tone) and call screening are muted. When you
- You can choose from different ringer tones. turns on automatically. Press **MENU** when the handset is not in use. Scroll to **Settings**, and then press **SELECT**.
- Scroll to choose **Key tone**, and then press Scroll to choose **On** or **Off**, and then press
- **SELECT** to save.

Ringer tone

- You can choose from different ringer tones.
- Press **MENU** when the handset is not in use. Scroll to Ringers, and then press SELECT.
- Scroll to choose Ringer tone, and then press **SELECT**. Scroll to sample each ringer tone, and then

press **SELECT** to save.

If you turn off the ringer volume, you will not hear ringer tone samples

Ringer volume

- You can adjust the ringer volume level, or turn the ringer off. Press **MENU** when the handset is not in use
- Scroll to Ringers, and then press SELECT. Scroll to choose Ringer volume or Cell volume, and then press SELECT.
- Scroll to adjust the volume, and then press **SELECT** to save

If the handset ringer volume is set to off, that handset is silenced for all incoming calls except paging tone.

Ringer volume (telephone base) You can adjust the telephone base volume level

by pressing **▼VOL-** or **▲VOL+** on the top of the telephone base when idle.

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the preset volume. · Press OFF or MUTE on the handset. The

handset displays A and Ringer muted briefly.

turn on the quiet mode, the answering system Press and hold out # on the handset or ephone base when idle. 2. Use the dialing keys (0-9) to enter the

You can turn on the guiet mode for a period of

- duration, and then press **SELECT** to save
- To turn off the guiet mode, press and hold QUIET# on the handset or telephone base when idle.

bout answering system and

built-in answering system, and it also support voicemail service offered by your telephone service provider (subscription is required, and fee may apply). The main differences between them are as

For message recording, your telephone has a

follows Built-in answering Voicemail from

Category	system	telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.
Method to retrieve messages	When you received new messages, handset displays XX new messages and the message window on the telephone base flashes.	When you received new messages, the handset displays and New voicemail.
	To retrieve messages, usually there are two ways: Press a button on the telephone base; or Access remotely with an access	To retrieve messages, you need an access number and/or a passcode provided by your telephone service provider.

Set your built-in answering system

Telephone base control key panel:

CANCEL ▼CID MENU/SELECT ▲ BCJ FLASH

 $(\mathsf{INT}) \, (\mathbf{1}) \, (\mathsf{ABC} \, 2) \, (\mathsf{DEF} \, 3) \, (\mathbf{1}) \, (\mathbf{0})$

(GH14) (JKL 5) (MN0 6)

PQRS 7 (TUV 8) (WXYZ 9)

(REDMA, PAUSE) (TONE X) (OPER (O) (QUIET #) (MUTE)

Your answering system has various features, read below for the basic settings

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message Your answering system allows you to set your

announcement, to save and delete messages. activate call screening, to set number of rings before pick up, to access remotely, and to control the recording time. Turn the answering system on or off

answer and record messages To turn on or off with the telephone bases

 Press (I)/ANS ON on the telephone base to turn the built-in answering system on or off.

The answering system must be turned on to

- To turn on or off with the handset
- 1. Press **MENU** when the phone is not in use. 2. Scroll to highlight **Answering sys**, and then
- press **SELECT**. 3. Scroll to highlight **Answer on/off**, and then
- press **SELECT**.
- 4. Scroll to highlight Answer: On or Answer: Off, and then press SELECT to save. You hear a confirmation tone.

Default announcement

Record your own announcement

SELECT twice.

To record, press 7."

Play the announcement

To record, press 7."

Delete the announcement

SELECT twice.

announcement.

Set number of rings

confirmation tone.

To record, press 7."

4. Press **2** to play the announcement.

SELECT twice.

The announcement can be up to 90 seconds in

Press **MENU** when the phone is not in use.

The handset announces, "To play, press 2.

Press 7 to record. The handset announces,

"Record after the tone. Press 5 when you

are done." After the tone, speak towards the

Press **MENU** when the phone is not in use.

Scroll to **Answering sys** and then press

The handset announces, "To play, press 2.

1. Press **MENU** when the phone is not in use.

Scroll to **Answering sys** and then press

3. The handset announces, "To play, press 2.

You can set the answering system to answer an

incoming call after 2, 3, 4, 5 or 6 rings; or toll saver. If

you choose toll saver, the answering system answers

a call after 2 rings when you have new messages, or

Press **MENU** when the phone is not in use.

2. Scroll to **Answering sys** then press **SELECT**.

Scroll to **Ans sys setup** then press **SELECT**.

after 4 rings when you have no new messages.

4. Scroll to # of rings then press SELECT.

6. Press **SELECT** to save and you hear a

5. Scroll to choose 2, 3, 4, 5, 6 or Toll saver.

4. Press 3 to delete your own recorded

handset microphone. Then, press 5 when done.

Scroll to **Answering sys** and then press

When the message alert tone is set to on, The telephone is preset with a greeting that answers calls with "Hello, please leave a and there is at least one new message, the message after the tone." You can use this preset telephone base beeps every 10 seconds. The announcement, or replace it with your own.

Message alert tone

Recording time

incoming message

SELECT

1 minute.

confirmation tone

New message indication

telephone base flashes

Message playback

volume.

message.

Press ►/■/STOP to stor

Options during playback:

1. Press **MENU** when the phone is not in use.

You can set the recording time limit for each

1. Press **MENU** when the phone is not in use.

2. Scroll to **Answering sys** then press **SELECT**.

Scroll to Ans sys setup then press SELECT.

Scroll to choose 3 minutes, 2 minutes o

Use your built-in answering system

Scroll to **Recording time** then press

6. Press **SELECT** to save and you hear a

When there are new answering system

messages, The handset displays XX new

messages and the message window on the

To playback messages at the telephone base:

Press ▼ VOL- or ▲ VOL+ to adjust the speaker

Press **►/SKIP** to skip to the next message.

Press **≪/REPEAT** to repeat the message

Press X/DELETE to delete the playing

listen to the previous message

currently playing. Press **≪/REPEAT** twice to

message. The system advances to the next

- 3. Scroll to **Ans sys setup** then press **SELECT**.
- 4. Scroll to **Msg alert tone** then press **SELECT**.
- Scroll to choose Tone: On or Tone: Off. 6. Press **SELECT** to save and you hear a

To delete all old messages at the telephone

Press X/DELETE twice when the phone is not

- 2. Scroll to **Answering sys**, and then press

1. Dial your telephone number from any

touch-tone telephone 2. When the system plays your announcement,

- Press ►/■/PLAY when the phone is not in use. enter the two-digit security code.

Command	Description
1	Play all messages.
2	Play new messages.
3	Delete the current message (during playback).
33	Delete all old messages.
4	Repeat the current message (during playback).
5	Stop.

trieve voicemail from ione service

Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional. ees may apply.

Retrieve voicemai

voicemail settings and listen to messages.

from home, and the handset still displays the new the voicemail indicators, use this feature to turn off 2. Scroll to **Answering sys** then press **SELECT**.

This feature turns off the indicators only, it does not

- Press **MENU** when the handset is not in use.

Expand your telephone system

You can add new handsets (CS6709, purchased separately) to your telephone system. Your telephone base supports a maximum of five For more details, refer to the user's manual that

ECO mode

consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Place the handset down gently. Save the original packing materials to protect your telephone if you ever

use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

When you received a voicemail, the handset displays and New voicemail. To retrieve you typically dial an access number provided by your telephone service provider, and then ente a security code. Contact your telephone service provider for instructions on how to configure the

Turn off the new voicemail indicators

the indicators.

2. Scroll to **Settings**, and then press **SELECT**. 3. Scroll to **Clr voicemail**, and then press

Avoid rough treatment

If you have retrieved your voicemail while away

- SELECT.

comes with your **CS6709** new handset.

This power conserving technology reduces power

General product care Taking care of your telephone

Electrical storms can sometimes cause power surges

harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms. Cleaning your telephone

The display

register HS.

alternately. The

and **...see**

manual

work at all.

shows To

retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth o cleaning solvents of any kind.

Frequently asked questions

Your telephone has a durable plastic casing that should

e cordless telephour question, visit over the condition with the condition of the condition	tions most frequently asked about one. If you cannot find the answer our website at .com or call 1 (800) 595-9511 e. In Canada, go to a.com or call 1 (800) 267-7377.
ly telephone	Make sure the telephone base

nstalled and charged correctly For optimum daily performance return the handset to the telephone base after use Disconnect the telephone line cord from your telephone and connect i cannot hear the to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord. If changing telephone line cord does not help, the wall jack (or

the wiring to this wall jack) may be defective. Contact your telephone service provider. You may be using a new cable or VoIP service, the existing

it back. The handset shows

handset does not | when the registration process

Registered and you hear a beep

completes. This process takes

about 90 seconds to complete.

telephone jacks in your home may no longer work. Contact your service provider for solutions. The handset is deregistered from the telephone base. Place the handset in the telephone base to register

The answering Your telephone can be damaged if it gets wet. Do not system does not record

not announce

l accidentally

set my LCD

language to

Spanish or

to English.

French, and I

don't know how

to change it back

stamp.

the handset and the telephone When the answering machine memory is full, it does not record new messages until some old messages are deleted. If you subscribe to voicemail

Make sure the answering system

is on, **ANS ON** should display on

is on. When the answering system

service, change the number of rings so that your answering system answers before your voicemail service answers. To determine how many rings activate your voicemail service, contact you elephone service provider. The answering Make sure you have set the date system does and time. See Configure your

elephone section

the correct day of the week for recorded messages time What is not covered by this limited warranty?

If a caller leaves a very long The messages on the answering message, part of it may be lost when the answering system system are disconnects the call after the incomplete. preset recording time. If the memory on the answering system becomes full during a nessage, the answering system stops recording and disconnects

While the handset is not in use.

press MENU and then enter

X364# to change the handset

LCD language back to English.

Limited warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to

the holder of a valid proof of purchase ("Consumer" or 'you") that the Product and all accessories provided n the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive medy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period? The limited warranty period for the Product extends for

ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

Product that has been subjected to misuse accident, shipping or other physical damage mproper installation, abnormal operation of handling, neglect, inundation, fire, water or other

This limited warranty does not cover:

alteration or modification by anyone other than an authorized service representative of VTech; or Product to the extent that the problem experienced is caused by signal conditions, network reliability,

or cable or antenna systems; or

Product that has been damaged due to repair

Product to the extent that the problem is caused

repair from outside the United States of America

or Canada, or used for commercial or institutional

Product returned without a valid proof of purchase

purposes (including but not limited to Products

- by use with non-VTech accessories; or Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for
- (see item 2 on the next page); or Charges for installation or set up, adjustment of customer controls, and installation or repair of

used for rental purposes); or

systems outside the unit.

How do you get warranty service?

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges

incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty or proof of purchase does not meet the terms of this nited warranty, VTech will notify you and will reques that you authorize the cost of repair prior to any furthe repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

warranty service? Return the entire original package and contents including the Product to the VTech service location

What must you return with the Product to get

along with a description of the malfunction or difficulty: and Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model and the date of purchase or receipt; and

Provide your name, complete and correct mailing

address, and telephone number.

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to mak modifications to this limited warranty and you should not rely on any such modificati State/Provincial Law Rights: This warranty gives you

specific legal rights, and you may also have other rights

which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

	•
Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	Handset: 1921.536-1928.448 MHz
	Telephone base: 1921.536-1928.448 MHz
Channels	5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environment conditions at the time of use.
Power requirements	Handset: 2.4V Ni-MH battery Telephone base: 6V DC @ 400mA Charger: 6V AC @ 300mA
Memory	Handset directory: 50 memory locations; up to 30 digits

and 15 characters

and 15 characters

Handset caller ID log:

50 memory locations; up to 24 digits

 Press MENU to choose Play messages. Press **SELECT**. message alert tone is preset to off.

 
Scroll to Answering sys then press SELECT.

- during the time and day announcement to hear the previous message.

 - Press 3 to delete the playing message
 - Press OFF to stop the playback.

To delete all old messages on a handset:

You can use this preset code, or set your own.



Specifications are subject to change without notice

Options during playback:

- Press ▼/VOLUME/▲ to adjust the message playback volume
 - Press 6 to skip to the next message Press 4 to repeat the message. Press 4

To playback messages at the handset:

- mode and handset mode.

Delete all old messages at the telephone

Press MENU when the phone is not in use.

3. Scroll to Delete all old, and then press **SELECT** twice. You hear a confirmation tone.

A two-digit security code is required to access

the answering system remotely from any touch-tone telephone. The preset code is 19.

3. You can enter one of the following remote commands.