

vtech®

User's manual
www.vtechphones.com



Models:

LS6475-2/LS6475-3/
LS6476-4



DECT 6.0

Congratulations

on purchasing your new VTech product. Before using this telephone, please read **Important safety instructions** on page 81 of this manual.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech telephone. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product. For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com. In Canada, please visit www.vtechcanada.com.

Compatible with
Hearing Aid T-Coil



Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

Register online to get an additional 3-month warranty!

Visit www.vtechphones.com.



Registration

Register your product online for enhanced warranty support.



Product news

Learn about the latest VTech products.

Table of contents

Getting started	1	Mute.....	26
Parts checklist	1	Temporary ringer silencing	26
Telephone installation.....	2	Temporary tone dialing.....	27
Handset battery installation	3	Find handset/headset.....	27
Handset battery charging	4	Call waiting	28
Headset charging	5	Equalizer.....	28
Headset battery	5	Redial	28
Earbud installation	6	Review and dial a redial entry	29
Ear hook installation	7	Delete a redial entry	29
Head band installation	10	Copy a number from the redial list to the directory	29
Handset layout.....	12	Chain dialing.....	30
Telephone base layout	15	Multiple handset use	31
Headset layout.....	16	Join a call in progress.....	31
Telephone settings	17	Intercom.....	32
Using the menu	17	Answer an incoming call during an intercom call	33
Ringer volume (telephone base)	18	Announced transfer	34
Ringer volume (handset)	18	Blind transfer	35
Ringer volume (headset)	18	Push-to-talk (PTT)	36
Ringer tone.....	19	Turn PTT on or off	36
Set date and time	19	PTT to a single handset.....	37
LCD language.....	20	PTT to multiple handsets.....	38
Caller ID Announce	20	Answer a PTT call	39
Clear voicemail indicators.....	21	Change a one-to-one PTT call to intercom call.....	39
Rename handset	22	End a PTT call.....	40
Key tone	22	Answer an incoming call during a PTT call	40
CID time synchronization.....	23	Make an outgoing call during a PTT call	40
Home area code	23	Directory	41
Dial mode	24	About the directory	41
Website.....	24	Add a directory entry	42
Telephone operation	25	Search the directory	43
Make a call	25	Alphabetical search	43
Predial a call.....	25		
Answer a call	25		
End a call.....	25		
Speakerphone	25		
Listening volume.....	25		

Table of contents

Dial a directory entry.....	43	Answering system operation	57
Edit a directory entry.....	44	Answering system and voicemail	57
Delete a directory entry	44	Using the answering system and	
Assign a directory entry to a		voicemail together.....	57
speed dial location.....	45	Message capacity.....	58
Dial a speed dial entry.....	45	New message indication.....	58
Reassign a speed dial number	46	Call screening.....	58
Delete a speed dial entry.....	46	Call intercept.....	58
Caller ID.....	47	Message playback.....	59
About caller ID	47	Delete all old messages	61
Information about caller ID with		Record, play and delete memos.....	62
call waiting.....	47	Message window displays.....	62
Caller ID log.....	48	Remote access.....	63
Memory match.....	48	Appendix	64
Missed call indicator	49	Handset display screen messages ...	64
Review the caller ID log.....	49	Handset and telephone base	
View dialing options.....	49	indicators.....	66
Dial a caller ID log entry	50	Headset indicators.....	67
Save a caller ID log entry to the		Expand your telephone system	68
directory	50	Add and register a handset	68
Delete the caller ID log entries	51	Deregister handsets/headsets.....	70
Caller ID log display		Troubleshooting.....	71
screen messages	51	Important safety instructions.....	81
Answering system settings.....	52	The RBRC® seal	83
Answering system	52	FCC, ACTA and IC regulations	84
Announcement	52	Operating range.....	86
Record your own announcement.....	52	Maintenance	86
Play your announcement.....	53	California Energy Commission	
Delete your announcement	53	battery charging testing	
Answer on/off.....	54	instructions	87
Call screening.....	54	For C-UL compliance only.....	88
Number of rings	55	Limited warranty	91
Remote access code	55	Technical specifications.....	93
Message alert tone	56	Index	94
Message recording time	56		

Getting started

Parts checklist

Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.



Ear hooks (3)



Ear pad



Additional earbuds (3)




Telephone line cord




Cordless headset with an earbud attached



Handset
(1 for LS6475-2,
2 for LS6475-3
and 3 for LS6476-4)

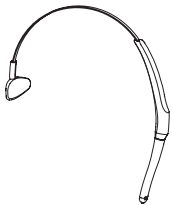


Head band

 


Telephone base power adapter



Handset battery compartment cover
(1 for LS6475-2, 2 for
LS6475-3 and 3 for LS6476-4)

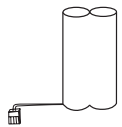


Handset battery
(1 for LS6475-2,
2 for LS6475-3 and 3
for LS6476-4)

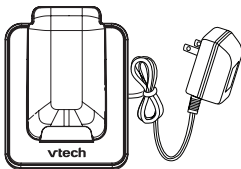


Handset charger and charger adapter

(1 for LS6475-3 and 2 for LS6476-4)

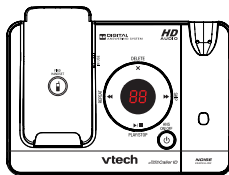

Telephone base

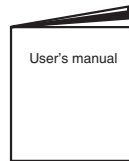

User's manual



Quick start guide

note

- The headset battery is not replaceable.
- To purchase replacement batteries or power adapters, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.


Getting started

Telephone installation

Install the telephone base and charger(s) as shown below.

Make sure that the electrical outlet is not controlled by a wall switch.

If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Contact your DSL service provider for more information about DSL filters.




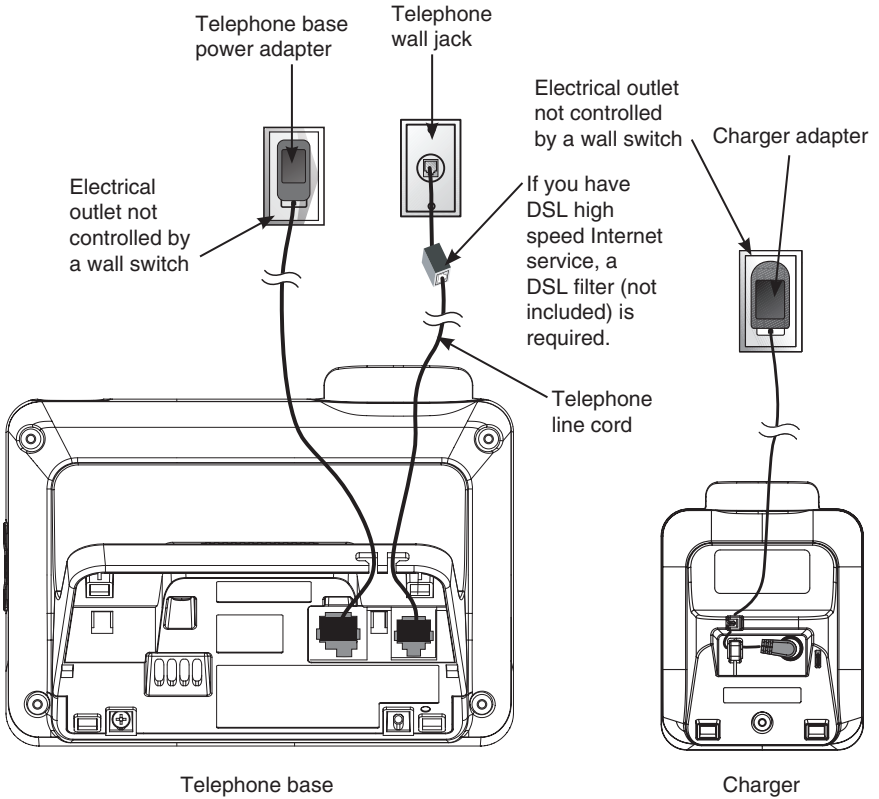


Getting started

Handset battery installation

Install the battery as shown below.

1. Plug the battery connector securely into the socket inside the handset battery compartment, matching the color-coded label.
2. Place the battery with the label **THIS SIDE UP** facing up and the wires inside the battery compartment.
3. Align the cover flat against the battery compartment, then slide it towards the center of the handset until it clicks into place.
4. Charge the handset by placing it in the telephone base or charger. The **CHARGE** light is on when the handset is charging.

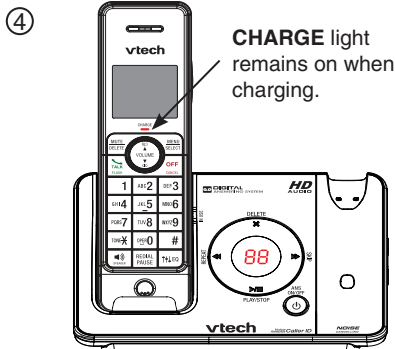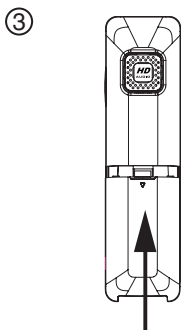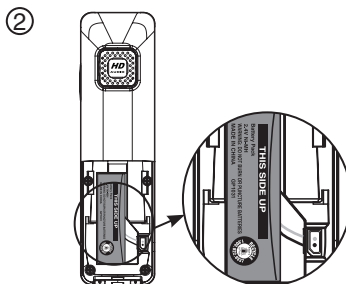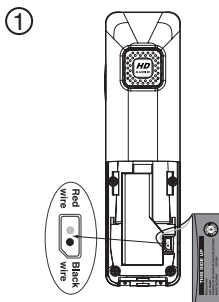

note

- If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.
- To purchase replacement batteries, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.



Getting started

Handset battery charging

Once you have installed the battery, the screen indicates the battery status (see the table below).

note

- For best performance, keep the handset in the telephone base or charger when not in use.
- The battery is fully charged after 10 hours of continuous charging.
- If you place the handset in the telephone base or the charger without plugging in the battery, the screen displays **No battery**.

Battery indicators	Battery status	Action
The screen is blank, or displays Place in charger and  flashes.	Battery has no or very little charge. The handset cannot be used.	Charge without interruption (about 30 minutes).
The screen displays Low battery and  flashes.	Battery has enough charge to be used for a short time.	Charge without interruption (about 30 minutes).
The screen displays HANDESET X .	Battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.

When the battery is fully charged, you can expect the following performance:

Operation	Operating time
While in handset use (talking*)	Up to seven hours
While in speakerphone mode (talking*)	Up to five hours
While not in use (standby**)	Up to seven days

*Operating times vary depending on your actual use and the age of the battery.


**Handset is not charging or in use.

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time (see page 19). To skip setting the date and time, press **OFF/CANCEL**.




Getting started


Headset charging

After installing the telephone base, charge the headset as shown below. If the  light does not turn on while charging, you need to charge the headset without interruption for at least 15 minutes to give the headset enough charge to use for a short time.

note

- The headset is fully charged after three hours of continuous charging.
- For best performance, keep the headset in the telephone base when not in use.

1. Place the tip of the headset in the small cradle on the telephone base.
2. The magnet holds the top of the headset in place. The  light turns on when charging.

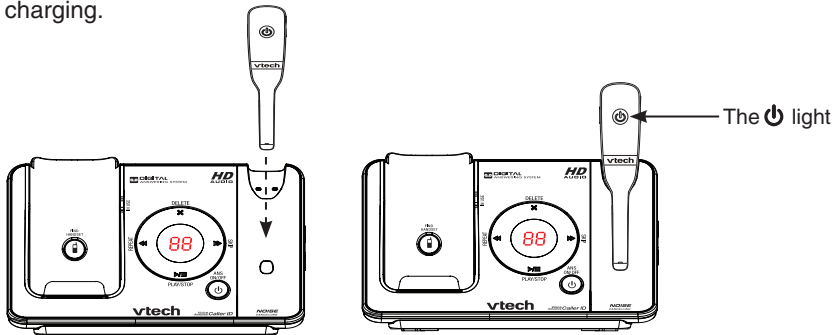

Headset battery



When the battery is fully charged, you can expect the following performance:

Operation	Operating time
While in use (talking*)	Up to nine hours
While not in use (standby**)	Up to ninety hours


*Operating times vary depending on your actual use and the age of the battery.

**Headset is not charging or in use.

The battery needs charging when:

- The headset beeps twice every 20 seconds.
- The  light is off when in idle mode.
- The  light flashes every 10 seconds in red.

Conserve battery life:

- The headset battery is not replaceable.
- If the headset will not be used for a long period of time, press and hold  on the headset for two seconds to power it off.


Getting started

Earbud installation

There are four earbuds provided and one of them has already been attached to the headset.


To remove the earbud from the headset earpiece:

Hold both sides of the earbud and then pull the earbud until it separates from the earpiece.

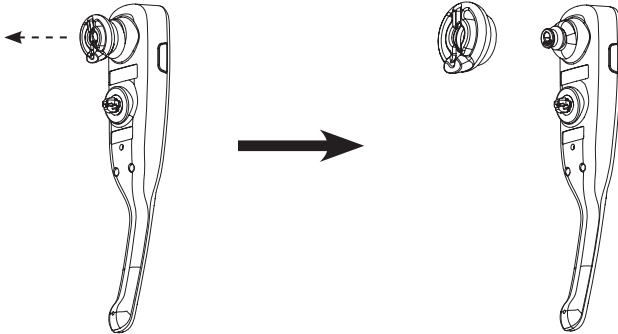

To attach the earbud to the headset earpiece:

1. Choose an appropriate earbud.
2. Press the earbud towards the earpiece until it clicks into place. Move the earbud around so that the protruding bump on the earbud is pointing towards your mouth when placed on your ear. The protruding bump on the earbud holds the headset securely in your ear.

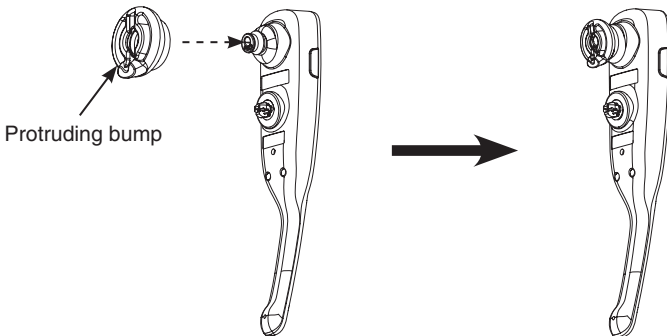


Getting started

Ear hook installation


There are three ear hooks provided. The smallest ear hook is a flexible ear hook. If you choose to use it, adjust to suit your ear comfortably before use.

To attach the ear hook to the headset:

1. Remove any headset attachment (earbud excluded) connected to the headset.
2. Choose an appropriate ear hook.
3. Insert the ear hook [A] into the rotating clip [B] on the headset until it clicks into place.

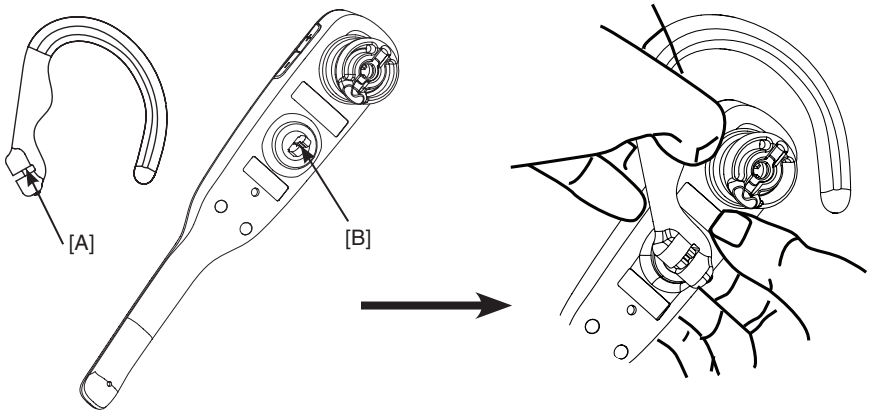

4. Hook the headset on your right ear. Adjust the angle of the headset until the microphone is pointing towards your mouth. Firmly grip the earpiece with one hand whenever adjusting the headset microphone up or down.


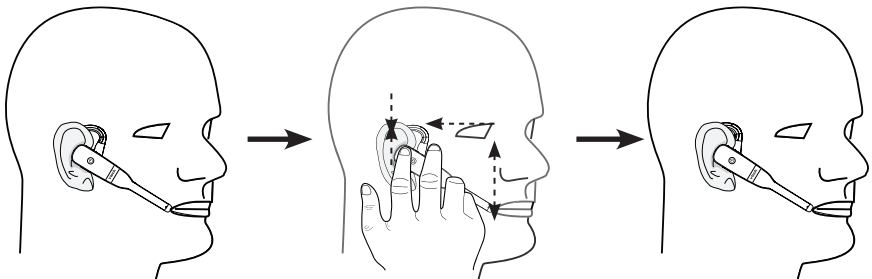


Getting started


Ear hook installation

To adjust the headset to wear on your left ear:


1. Hold the headset with one hand.
Lift the ear hook upward.
2. Twist the ear hook 180 degrees clockwise.

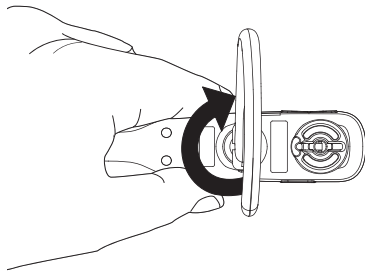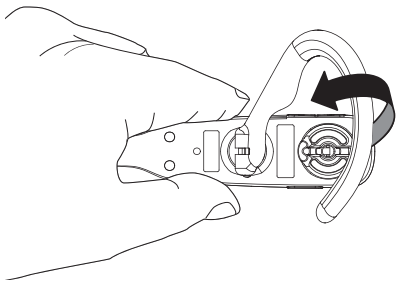

3. Push the ear hook downward.

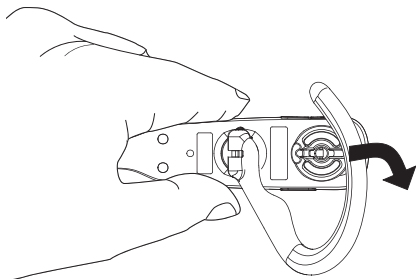

4. Hook the headset on your left ear.
Adjust the angle of the headset until the microphone is pointing towards your mouth.

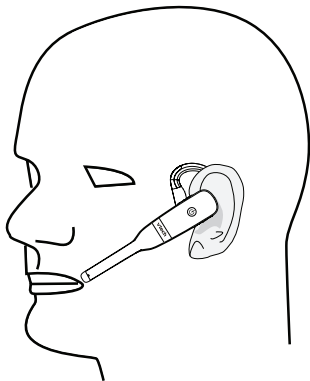


Getting started

Ear hook installation

To remove the ear hook from the headset:

1. Hold the headset with one hand and the ear hook with your other hand.
2. Pull the end of the ear hook up until it separates from the rotating clip on the headset.

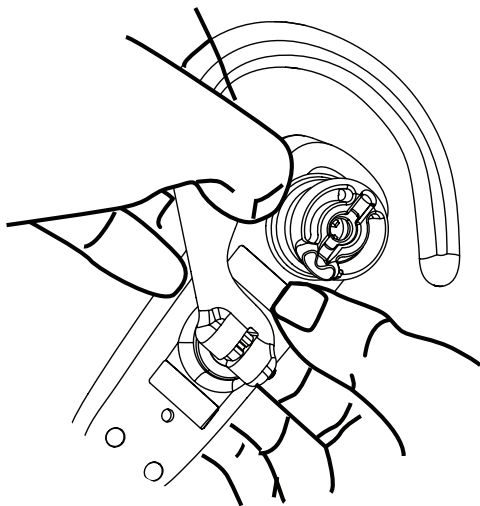


Getting started


Head band installation

To attach the head band to the headset:

1. Remove any headset attachment connected to the headset.
2. Attach the ear pad to the headset earpiece.

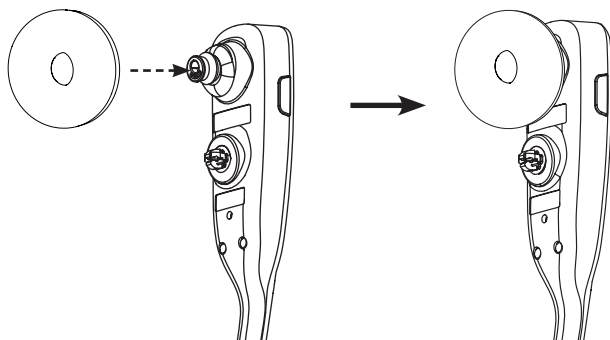


3. To wear the headset on your right ear, insert the end [A] of the head band into the rotating clip [B] on the headset until it clicks into place.

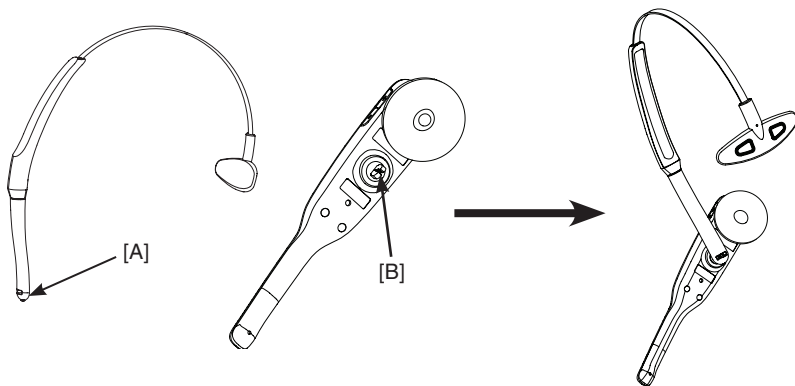

Getting started

Head band installation

4. Adjust the head band to fit your head. Adjust and rotate the angle of the headset until the microphone is pointing towards your mouth. Firmly grip the earpiece with one hand whenever adjusting the headset microphone up or down.

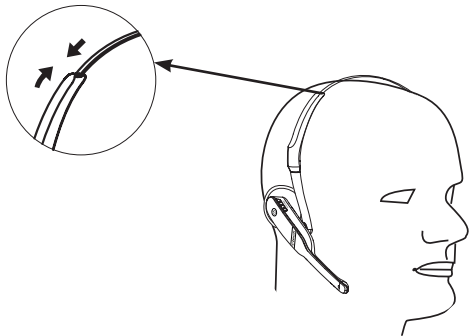


note

To wear on your left ear, hold the headset on one hand and the head band with your other hand. Rotate the head band within the rotating clip on the headset.

To remove the head band from the headset:

1. Hold the headset with one hand and the head band with your other hand.
2. Pull the end of the head band until it separates from the rotating clip on the headset.

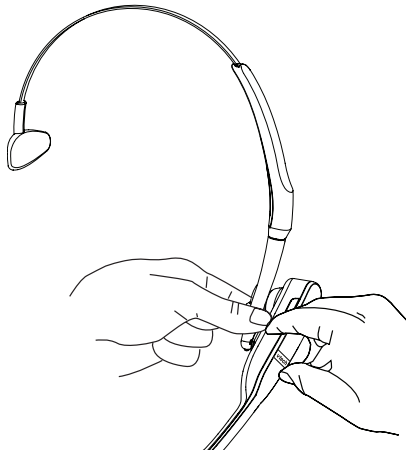

Getting started

Handset layout

CHARGE light

On when the handset is charging in the telephone base or charger (page 3).

▲/VOLUME (directory/volume)

Press to enter the directory when the telephone is not in use (page 43).

While in a menu, press to scroll up.

During a call or message playback, press to increase the listening volume (page 25 or page 60).

When entering numbers or names in the directory, press to move the cursor to the right.

MUTE/DELETE

While on a call, press to mute the microphone (page 26).

While reviewing the redial list, directory or caller ID log, press to delete an individual entry (pages 29, 44 and 51 respectively).

While the handset is ringing, press to silence the ringer temporarily (page 26).

While predialing, press to delete digits (page 25).

/FLASH

Press to make or answer a call (page 25).

During a call, press to answer an incoming call when you receive a call waiting alert (page 28).

1

While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the directory (page 49).


tone

With the phone set for pulse dialing, press to temporarily change to tone dialing while on a call (page 27).

/SPEAKER


Press to make or answer a call (page 25).

During a call, press to switch between the speakerphone and the handset (page 25).

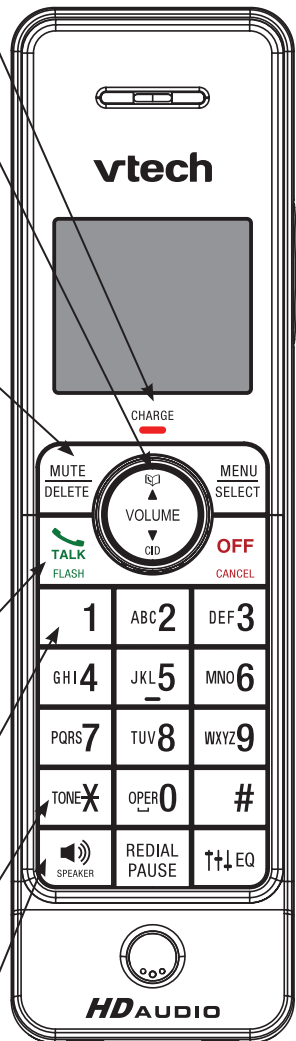

Getting started

Handset layout

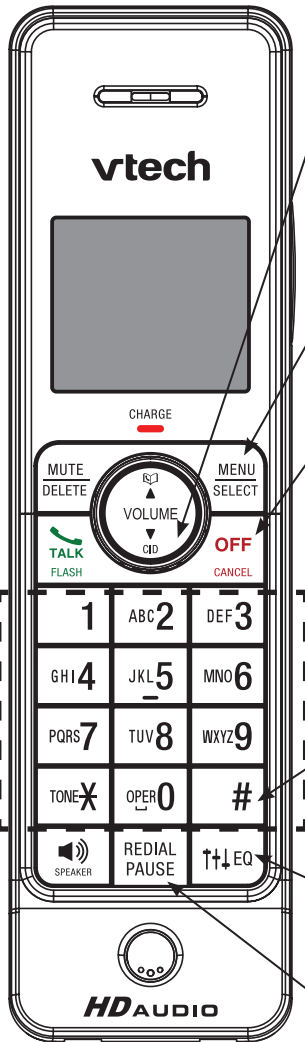

CID/▼/VOLUME (caller ID/volume)

Press to review the caller ID log when the telephone is not in use (page 49).

While in a menu, press to scroll down.

During a call or message playback, press to decrease the listening volume (page 25 or page 60).

When entering numbers or names in the directory, press to move the cursor to the left.

MENU/SELECT

Press to show the menu.

While in a menu, press to choose an item, or save an entry or setting.

OFF/CANCEL

During a call, press to hang up (page 25).

While the handset is ringing, press to silence the ringer temporarily (page 26).

While the telephone is not in use, press and hold to delete the missed call indicator (page 49).

While in a menu, press to go back to the previous menu.

While in a menu, press and hold to return to idle mode.

Dialing keys

Press to enter numbers or characters.

(pound key)

Press repeatedly to show other dialing options when reviewing a caller ID log entry (page 49).

When saving the caller ID log entries to the directory, press to switch the name order (page 50).

↑↓EQ

During an outside call, intercom call, message or announcement playback, press to change the audio quality to best suit your hearing (page 28).

REDIAL/PAUSE

Press to review the redial list (page 29).

While predialing or entering numbers into the directory, press and hold to insert a dialing pause (page 42).

Getting started

Handset layout



PUSH TO TALK (PTT)

Press to begin a broadcast to one or multiple handsets (page 37 or page 38).

Press and hold to broadcast to a group of handsets when the handset is not in use (page 38).

Getting started

Telephone base layout

IN USE light

Flashes when there is an incoming call, another telephone sharing the same line is in use or when the handsets/headsets are being deregistered.

On when the telephone is in use, or the answering system is answering a call.

On when the handset/headset is being registered.

📞/FIND HANDSET

Press to page all system handsets and the headsets (page 27).

◀/REPEAT

Press once to repeat a message or press twice to play the previous message (page 59).

X/DELETE

Press to delete the message currently playing (page 59).

When the telephone is not in use, press twice to delete all old messages (page 61).

Message window

Shows the number of messages and other answering system information (page 62).

▶/SKIP

Press to skip to the next message (page 59).

▼/VOL/▲

Press to adjust the speaker volume during playback (page 59).


Press to adjust the base ringer volume when the telephone is not in use (page 18).

🔌/ANS ON/OFF

Press to turn the answering system on or off (page 54).

▶/■/PLAY/STOP

Press to play messages or press to stop message playback (page 59).

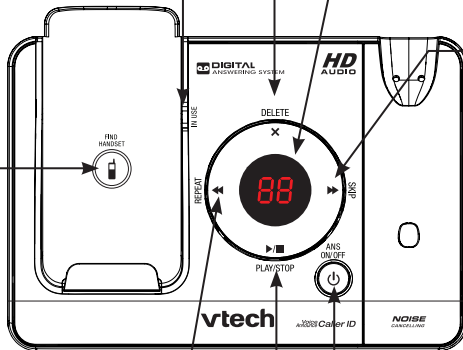

Getting started

Headset layout



⏻ (on/off)

Press and hold two seconds to power on or off.

Press to answer, end or join a call (pages 25 and 31).

On in red when charging in the telephone base.

On in blue when fully charged in the telephone base.

Flashes once every 10 seconds in blue when in idle mode.


Flashes once every 10 seconds in red when in low battery mode.

Flashes twice every three seconds in blue while on a call.

Flashes quickly in blue while being paged.

Flashes quickly and alternately in red and blue while being registered.

Flashes four times every four seconds in blue when there is an incoming call.

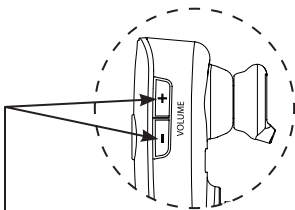

+/-/VOLUME

While on a call, press to adjust the listening volume (page 25).

When the headset is not in use, press to adjust the ringer volume (page 18).


Rotating clip

Connect the ear hook or head band.

RESET inset button

Insert a paper clip or similar object to reset the headset when deregistration fails (page 70).

Earpiece

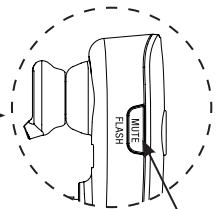


MUTE/FLASH

While on a call, press to mute the microphone (page 26).

While on a call, press and hold to answer an incoming call when you receive a call waiting alert (page 28).

 When there is an incoming call, press to silence the ringer in the earpiece temporarily.



Microphone

Telephone settings

Using the menu

In the ringers menu, you can select the ringer tones and adjust the ringer volume for incoming calls.

In the settings menu, you can change the settings for LCD language, announce caller ID, voicemail indicators, handset name, key tone, CID time synchronization, home area code and dial mode.

Go to **Answering system settings** starting on page 52 for instructions on how to use a system handset to modify the answering system settings shown below.

Setting	Page
Announcement (record, play and delete)	52-53
Answer on/off	54
Call screening	54
Number of rings	55
Remote access code	55
Message alert tone	56
Message recording time	56

To enter the handset menu:

1. Press **MENU/SELECT** when the handset is not in use.
 2. Press **▼** or **▲** until the screen displays the desired feature menu.
 3. Press **MENU/SELECT** to enter that menu.
- To return to the previous menu, press **OFF/CANCEL**.
 - To return to idle mode, press and hold **OFF/CANCEL**.

note


The settings in the handset menus do not affect the headset.

Telephone settings

 
Ringer volume (telephone base)

- Press ▲/VOL or ▼/VOL on the side of the telephone base to adjust the ringer volume when the telephone is not in use. When you set the base ringer volume to off, the message window displays **0** and the system announces, “*Base ringer is off.*” When the telephone is ringing, press ▼/VOL to temporarily turn the base ringer off.

Ringer volume (handset)

You can set the ringer volume or turn the ringer off. When the ringer is off, **Ringer off** and  appear on the screen.

1. Press **MENU/SELECT** when the handset is not in use.
2. Press ▼ or ▲ to highlight **>Ringers**, then press **MENU/SELECT**.
3. Press **MENU/SELECT** to select **>Ringer volume**.
4. Press ▼ or ▲ to sample each volume level.
5. Press **MENU/SELECT** to save your selection and return to the previous menu. You hear a confirmation tone.



note


- The ringer volume also determines the ringer volume of the intercom calls and paging tone. However, paging volume ranges from levels 4 to 6 only.
- If the ringer volume is set to off, the handset displays **Caller ID won't be announced** when you save the setting. The caller ID will not be announced when you have an incoming call (page 20).

Ringer volume (headset)

The headset does not have an external ringer. When there is an incoming call, the headset earpiece rings.

To adjust the ringer volume:

Press **+/-/VOLUME** on the side of the headset when it is not in use.


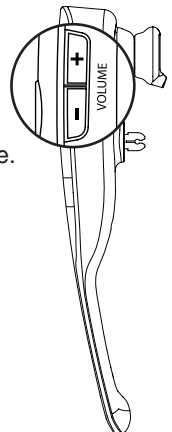


Telephone settings

Ringer tone

You can choose from different ringer tones for each handset.

  1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Ringers**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Ringer tone**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to sample each ringer tone.
5. Press **MENU/SELECT** to save your selection and return to the previous menu. You hear a confirmation tone.




note

If you turn off the ringer volume, you will not hear ringer tone samples.

Set date and time

The answering system announces the date and time of each message prior to playing it. Before using the answering system, set the date and time as follows. If you subscribe to caller ID service, the day, month and time are set automatically with each incoming call. However, the year must be correct so that the day of the week can be calculated from the caller ID information. You can also turn off the date and time settings of the caller ID service (see **CID time synchronization** on page 23) and set the date and time manually.

 1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Set date/time**, then press **MENU/SELECT**.
3. When the month is flashing, press **▼** or **▲** until the screen displays the correct month. Press **MENU/SELECT** to confirm.



-OR-

Use the dialing keys (**0-9**) to enter the current month (for example, if the month is March, you must enter **03**).

4. Repeat Step 3 to set the correct date and year and then press **MENU/SELECT** to advance to set the time.
5. Repeat Step 3 until the time is set. Press **▼** or **▲** to select **AM** or **PM**, or press **2** for **AM** or **7** for **PM**.
6. Press **MENU/SELECT** to save the settings and return to the previous menu. You hear a confirmation tone.

note

 
- If the date and time are not set when a message is recorded, the system announces, "Time and date not set," before each message plays.
- The telephone plays two beeps if you enter an invalid number.

Telephone settings

LCD language

You can select a language (English, French or Spanish) to be used in all screen displays.


1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Settings**, then press **MENU/SELECT**.
3. Press **MENU/SELECT** to select **>LCD language**.
4. Press **▼** or **▲** to highlight **English**, **Français** or **Español**.
5. Press **MENU/SELECT** to save your selection and return to the previous menu. You hear a confirmation tone.



Caller ID Announce

The caller ID announce feature lets you know who's calling without having to look at the display. When you have an incoming call, the handset and/or base announces the caller's name based on the directory or caller ID information. If the caller's name is private or unknown, the phone number will be announced. If the caller's phone number is also private or unknown, no caller information will be announced. If the telephone number has over 11 digits, only the last 11 digits will be announced. Unless you change it, the caller ID announce feature is already turned on.

 1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Settings**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Annc Caller ID**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to highlight **>HANDSET** or **>BASE**, then press **MENU/SELECT**.
5. Press **▼** or **▲** to choose **>On** or **>Off**.
6. Press **MENU/SELECT** to save your selection and return to the previous menu. You hear a confirmation tone.




note

- To use the caller ID announce feature, you must subscribe to caller ID service from your telephone service provider.
- Caller ID announce is available in English only.
- The caller ID announce is muted when you turn the ringer off.
- Only the first four registered handsets are able to use the caller ID announce feature.
- It takes at least 2 rings for the phone to receive caller ID information and announce it. If the phone is answered before the end of the second ring, it will not have time to announce the caller ID information.
- Pronunciation of names may vary with this feature. Not all names may be pronounced correctly.

Telephone settings

 
 
Clear voicemail indicators

If you subscribe to voicemail service offered by your telephone service provider, **New voicemail** and  appear on the handset when you have new voicemail messages. Contact your telephone service provider for more information and assistance about using your voicemail service.

After you have listened to all new voicemail messages, the indicators on the handset turn off automatically.

Use the clear voicemail feature when the telephone indicates that there is new voicemail but there are none (for example, when you have accessed your voicemail while away from home). Clearing the voicemail waiting indicator only turns off the indicators; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal to turn on the indicators.

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Settings**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Clr voicemail**, then press **MENU/SELECT**. The screen displays **Turn off indicator?**
4. Press **MENU/SELECT** to confirm and return to the previous menu. You hear a confirmation tone.



note

 
- Your telephone service provider may alert you of new messages with a stutter (broken) dial tone. Contact your telephone service provider for details.
- Voicemail is different from answering system messages recorded in your cordless phone's answering system. For more information about the difference, see page 57.

Telephone settings

Rename handset

You can change the name for each registered handset. The name can be up to 11 characters.

1. Press **MENU/SELECT** when the handset is not in use.
2. Press ▼ or ▲ to highlight **>Settings**, then press **MENU/SELECT**.
3. Press ▼ or ▲ to highlight **>Rename handset**, then press **MENU/SELECT**.
4. Use the dialing keys to enter a name.
 - Press **MUTE/DELETE** to delete a character.
 - Press and hold **MUTE/DELETE** to delete all characters.
 - Press ▼ or ▲ to move the cursor to the left or right.
5. Press **MENU/SELECT** to save the name and return to the previous menu. You hear a confirmation tone.





note

If the new handset name contains no characters or digits, the default handset name will be used.

Key tone

You can adjust the key tone volume or turn it off for each handset. If you turn the key tone off, there are no beeps when you press the handset keys.

  1. Press **MENU/SELECT** when the handset is not in use.
2. Press ▼ or ▲ to highlight **>Settings**, then press **MENU/SELECT**.
3. Press ▼ or ▲ to highlight **>Key tone**, then press **MENU/SELECT**.
4. Press ▼ or ▲ to select the desired volume or **Off**.
5. Press **MENU/SELECT** to save your selection and return to the previous menu. You hear a confirmation tone.





Telephone settings

CID time synchronization

This feature allows the time and date to be set by incoming caller ID information. The default setting is **On**.


 
 
1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Settings**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>CID time sync**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to choose **>On** or **>Off**.
5. Press **MENU/SELECT** to save your selection and return to the previous menu. You hear a confirmation tone.



Home area code

If you dial your local calls using only seven digits (area code not required), you can program your home area code so that when you receive a call within your local area, the telephone number is automatically stored without the area code in the caller ID log.

   1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Settings**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Home area code**, then press **MENU/SELECT**. The screen displays **Only for 7digit dial from CID**, then advances to home area code edit mode.
4. Use the dialing keys to enter a three-digit home area code.
 - Press **MUTE/DELETE** to delete a digit.
 - Press and hold **MUTE/DELETE** to delete all digits.
 - Press **▼** or **▲** to move the cursor to the left or right.
5. Press **MENU/SELECT** to save. You hear a confirmation tone. The screen displays **Area code will not show in CID**, then automatically returns to the previous menu.



note

 
If, in the future, your telephone service provider requires you to dial the area code when making a local call, or, if you move to a location that requires it, delete the home area code you have already programmed, following the steps above. After you have deleted the home area code, **_ _ _** will appear on the display.

Telephone settings

Dial mode

The dial mode is preset to tone dialing. If you have pulse (rotary) service, you must change the dial mode to pulse dialing before using the telephone to make calls.

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Settings**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Dial mode**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to choose **>Tone** or **>Pulse**.
5. Press **MENU/SELECT** to save your selection and return to the previous menu. You hear a confirmation tone.





note

While on a call in pulse dialing mode, press *****X** to temporarily change to tone dialing mode.

Website

Use this feature to view the VTech website address.

  
1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Website**, then press **MENU/SELECT**. The screen displays the website address.



Telephone operation


Make a call

1. Press /FLASH or /SPEAKER on the handset.
2. When you hear a dial tone, dial the number.
3. Press on the headset to join the call. Hang up the handset at any time to leave the call and the headset continues the call.

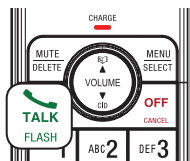

Predial a call

1. Dial the number on the handset.
2. Press /FLASH or /SPEAKER.
3. Press on the headset to join the call. Hang up the handset at any time to leave the call and the headset continues the call.

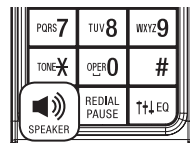

Answer a call

- Press on the headset.
- Press /FLASH, /SPEAKER or any dialing key (0-9, # or TONE X) on the handset to answer a call.

End a call

- Press on the headset or place the handset in the telephone base.
- Press **OFF/CANCEL** on the handset or place the handset in the telephone base or charger.

note


- The handset screen shows the elapsed time as you talk (in hours, minutes and seconds).
- When predialing (preview numbers before dialing), press **MUTE/DELETE** to backspace and delete a digit; press and hold **REDIAL/PAUSE** to insert a dialing pause (a **p** appears).
- The handset displays **Unable to call. Line in use** if you predial a number while your telephone line is in use.

Speakerphone

When the handset is on a call, press /SPEAKER to switch between the speakerphone and the handset. When the speakerphone is active, the handset displays **Speaker** and .

Listening volume

During a call, press /VOLUME or /VOLUME on the side of the headset to adjust the listening volume.

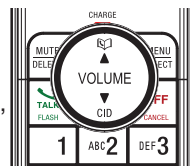


Telephone operation

Mute

The mute function allows you to hear the other party but the other party cannot hear you.

On a handset:

- During a call, press **MUTE/DELETE**. The handset displays **Muted** for a few seconds and **MUTE** displays until the mute function is turned off.
- Press **MUTE/DELETE** again to resume the conversation. The handset screen temporarily displays **Microphone ON**.

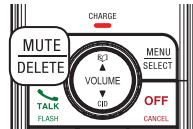

On a headset:

- During a call, press **MUTE/FLASH**. The headset announces, “Mute on.” The headset beeps every 30 seconds until the mute function is turned off. Press **MUTE/FLASH** again to resume the conversation. The headset announces, “Mute off.”

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer of the handset, headset or telephone base without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **OFF/CANCEL** or **MUTE/DELETE** on the handset. The handset displays **Ringer muted** and .

To silence the headset ringer:

- Press **MUTE/FLASH** on the headset.

To silence the telephone base ringer:

- Press **▼/VOL** on the telephone base to turn off the base ringer.

note

Each handset rings when there is an incoming call unless the ringer volume is turned off on that handset.

Telephone operation

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily during a call. This is useful if you need to send touch-tone signals to access your telephone banking or long distance services.


1. During a call, press **tone** ~~X~~ on the handset.
2. Use the dialing keys to enter the number you wish to dial. The telephone sends touch-tone signals. The telephone automatically returns to pulse dialing mode after you end the call.

Find handset/headset

This feature helps you find misplaced handsets and headset.

To start the paging tone:

- Press **FIND HANDSET** on the telephone base. All idle handsets and headset ring and the handsets display **** Paging **** and the **🔔** light on the headset flashes in blue.

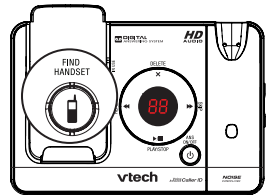

To end the paging tone:

- To end the paging tone, press **TALK/FLASH**, **SPEAKER** or any dialing key (**0-9**, **#**, **tone** ~~X~~) on the handset, or press **🔔** on the headset, or press **FIND HANDSET** on the telephone base.



note

- Press **OFF/CANCEL** or **MUTE/DELETE** to temporarily turn off the paging tone on the handset. Its screen shows **Ringer muted** and **🔇**.
- All registered handsets and headsets ring when being paged even if the ringer volume is set to off.

Telephone operation


Call waiting

If you subscribe to call waiting service from your telephone service provider, you hear an alert tone when there is an incoming call while you are on another call.


- Press  **FLASH** on the handset or press and hold **MUTE/FLASH** for two seconds on the headset to put your current call on hold and take the new call.
- Press  **FLASH** on the handset or press and hold **MUTE/FLASH** for two seconds on the headset at any time to switch back and forth between calls.

Equalizer

The equalizer feature on the handset enables you to change the audio quality of the handset to best suit your hearing.

While on a call or intercom call, or listening to a message or announcement, press  **EQ** to select the equalizer setting **Treble 1**, **Treble 2**, **Bass** or **Natural** (the default setting) for the handset.

The current setting is displayed on the handset briefly.

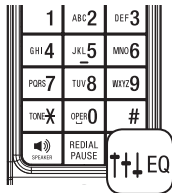

Redial

Each system handset stores the last 10 dialed numbers. Entries are shown in reverse chronological order. When there are already 10 entries, the oldest entry is deleted to make room for the new entry. When you access the redial list with no records, the handset plays two beeps and shows **Redial empty**.

Telephone operation

Review and dial a redial entry

1. Press **REDIAL/PAUSE** to enter the redial list.
2. Press **▼** or **▲**, or **REDIAL/PAUSE** repeatedly to browse.
3. When the desired entry displays, press **TALK/FLASH** or **📞/SPEAKER** to dial.



-OR-

1. Press **TALK/FLASH** or **📞/SPEAKER**.
2. Press **REDIAL/PAUSE**.
3. Press **▼** or **▲**, or **REDIAL/PAUSE** repeatedly to browse.
4. When the desired entry displays, press **MENU/SELECT**.

Delete a redial entry

1. Press **REDIAL/PAUSE** to enter the redial list.
2. Press **▼**, **▲**, or press **REDIAL/PAUSE** repeatedly to browse to the desired entry.
3. Press **MUTE/DELETE** to delete the displayed entry. You hear a confirmation tone.

Copy a number from the redial list to the directory

1. Press **REDIAL/PAUSE** to enter the redial list.
2. Press **▼**, **▲** or **REDIAL/PAUSE** repeatedly to browse to the desired entry, then press **MENU/SELECT**. The screen displays **EDIT NUMBER**.
3. Use the dialing keys (**0-9**) to edit the number (up to 30 digits).
 - Press **MUTE/DELETE** to backspace and delete a digit.
 - Press and hold **MUTE/DELETE** to delete all digits.
 - Press **▼** or **▲** to move the cursor to the left or right.
 - Press and hold **REDIAL/PAUSE** to insert a dialing pause (a **p** appears).
4. Press **MENU/SELECT** to move on to the name. The screen displays **ENTER NAME**.
5. Use the dialing keys to enter the name (up to 15 characters).
 - Press **0** to add a space.
 - Press **MUTE/DELETE** to backspace and delete a character.
 - Press and hold **MUTE/DELETE** to delete all characters.
 - Press **▼** or **▲** to move the cursor to the left or right.
6. Press **MENU/SELECT** to save the entry. The handset shows **Saved** with a confirmation tone.

Telephone operation

 
Chain dialing

Use this feature to initiate a dialing sequence from numbers stored in the directory, caller ID log or redial list while you are on a call.

Chain dialing can be useful if you wish to access other numbers (such as bank account numbers or access codes) from the directory, caller ID log or redial list.


To access a number from the directory while on a call:

1. Press **MENU/SELECT**.
2. Press ▼ or ▲ to highlight >Directory, then press **MENU/SELECT**.
3. Press ▼ or ▲ to scroll to the desired entry.
4. Press **MENU/SELECT** to dial the displayed number.



To access a number from the caller ID log while on a call:

 1. Press **MENU/SELECT**.
2. Press ▼ or ▲ to highlight >Caller ID log, then press **MENU/SELECT**.
3. Press ▼ or ▲ to scroll to the desired entry.
4. Press **MENU/SELECT** to dial the displayed number.



To access a number from the redial list while on a call:





1. Press **REDIAL/PAUSE** to enter the redial list.
2. Press ▼ or ▲, or press **REDIAL/PAUSE** repeatedly to browse to the desired entry.
3. Press **MENU/SELECT** to dial the displayed number.

Multiple handset use

Join a call in progress

You can use four system handsets on an outside call at a time. You can buy additional expansion handsets (**LS6405**) and an additional cordless headset (**IS6100**) for the telephone base. You can register up to 12 handsets to the telephone base. You can register a maximum of two cordless headsets to the telephone base. The telephone base recognizes and counts a headset the same as a handset.

To share an outside call:

- When a handset is already on a call, you can join the call by pressing  **FLASH** or  **SPEAKER** on another handset, or  on the headset.
- To exit the call, press **OFF/CANCEL** or place the handset in the telephone base or charger, or press  on the headset. The call will not end until all handsets and headsets hang up.



Multiple handset use

Intercom

 
Use the intercom feature for conversations between two handsets, or a handset and a headset.

1. When the handset is not in use, press **MENU/SELECT**. Press ▼ or ▲ to highlight **>Intercom**, then press **MENU/SELECT**.




-OR-

Press /FLASH or /SPEAKER, then press **MENU/SELECT**. Press ▼ or ▲ to highlight **>Intercom**, then press **MENU/SELECT**.

- If you have one handset and one headset, your handset displays **Calling headset**.
- If you have two handsets, your handset displays **Calling other handset**.
- If you have three or more handsets and/or headsets, your handset displays **INTERCOM TO:** Use the dialing keys to enter a handset number (1-9 for handsets 1-9, ^{tone}✕ and 0 for handset 10, ^{tone}✕ and 1 for handset 11, ^{tone}✕ and 2 for handset 12, ^{tone}✕ and # for all handsets, # and 1 for headset 1 or # and 2 for headset 2), or press ▼ or ▲ to scroll to the desired handset or headset then press **MENU/SELECT**. Your handset displays **Calling HANDSET X**, **Calling HEADSET X** (X represents the destination handset or headset number) or **Calling all handsets**.

The destination handset rings and its screen displays **Other handset is calling** or **HANDSET Y is calling** (Y represents the originating handset number), or the headset earpiece rings and the  light flashes in blue.

2. To answer the intercom call:

- Press /FLASH, /SPEAKER or any dialing key (0-9, # or ^{tone}✕) on the destination handset. Both handsets now display **Intercom**.
- Press  on the headset. The originating handset displays **Intercom**.

3. To turn off the microphone during an intercom call:

- Press **MUTE/DELETE** on the originating or destination handset. The handset screen displays **Muted** for a few seconds and **MUTE** appears until the mute function is turned off. Press **MUTE/DELETE** again to resume the conversation.
- Press **MUTE/FLASH** on the headset. The headset announces, “Mute on.” The headset beeps every 30 seconds until the mute function is turned off. Press **MUTE/FLASH** again to resume the conversation. The headset announces, “Mute off.”

Multiple handset use

4. To end the intercom call:

- Press **OFF/CANCEL** or place the handset in the telephone base or charger. Both handsets display **Intercom ended**.
- Press **⏻** or place the headset in the telephone base. The originating handset displays **Intercom ended**.

note

- You cannot use a cordless headset to make intercom calls but you can use it to answer them.
- You can cancel the intercom call before it is answered by pressing **OFF/CANCEL**.
- If the other handset does not answer the intercom call within 100 seconds, or if it is accessing the answering system, is out of range, or has no power, your handset displays **No answer. Try again** and returns to idle mode.
- Only one intercom call can be established with two handsets, or one handset and one headset at a time.

Answer an incoming call during an intercom call




If you receive an incoming outside call during an intercom call, there will be an alert tone.

- To answer the call, press **TALK/FLASH** on the handset or press and hold MUTE/FLASH for two seconds on the headset. The intercom call ends automatically.
- To end the intercom call without answering the incoming call, press **OFF/CANCEL** on the handset or press **⏻** on the headset. The telephone continues to ring.

Multiple handset use

Announced transfer

Use the intercom feature to transfer an outside call to another system handset or headset.

1. When the handset is on a call, press **MENU/SELECT**.
 2. Press ▼ or ▲ to scroll to **>Intercom**, then press **MENU/SELECT**. The outside call is put on hold automatically.
 - If you have one handset and one headset, your handset displays **Calling headset**.
 - If you have two handsets, your handset displays **Calling other handset**.
 - If you have three or more handsets and/or headsets, your handset displays **INTERCOM TO**: Use the dialing keys to enter a handset number (1-9 for handsets 1-9, ^{tone}✕ and 0 for handset 10, ^{tone}✕ and 1 for handset 11, ^{tone}✕ and 2 for handset 12, ^{tone}✕ and # for all handsets, # and 1 for headset 1 or # and 2 for headset 2), or press ▼ or ▲ to scroll to the desired handset or headset then press **MENU/SELECT**. Your handset displays **Calling HANDSET X**, **Calling HEADSET X** (X represents the destination handset or headset number) or **Calling all handsets**.
 3. To answer the intercom call:
 - Press ^{TALK}FLASH, /SPEAKER or any dialing key (0-9, # or ^{tone}✕) on the destination handset. Both handsets now display **Intercom**.
 - Press  on the headset. The originating handset displays **Intercom**.
 4. From this intercom call, you have the following options:
 - To transfer the call, press **MENU/SELECT** twice on the originating handset to choose **>Transfer**. The originating handset displays **Call transferred**. The destination handset is automatically connected to the outside call.
 - To share the call, press **MENU/SELECT** on your handset and then press ▼ or ▲ to highlight **>Share call**. Then press **MENU/SELECT**. Both handsets are connected to the outside call.
 5. To end the outside call:
 - Press **OFF/CANCEL** or place the handset in the telephone base or charger.
 - Press  or place the headset in the telephone base.
- The call continues until all handsets hang up.

note

- You can cancel the intercom call before it is answered by pressing **OFF/CANCEL**.
- If the destination handset does not answer the intercom call within 100 seconds, or if it is accessing the answering system, is out of range, or has no power, the originating handset displays **No answer**. Try again and returns to idle mode.

Multiple handset use

Blind transfer

Use this feature to transfer an outside call to other system handsets without notifying them. This feature is not available if only one handset is available or registered.

1. When the handset is on a call, press **MENU/SELECT**.
2. Press **MENU/SELECT** to choose **>Transfer**, then press **MENU/SELECT**.
 - If you have two handsets, your handset displays **Transferring call...**
 - If you have three or more handsets, your handset displays **TRANSFER TO**: Use the dialing keys to enter a handset number (**1-9** for handsets 1-9, ^{tone}***0** and **0** for handset 10, ^{tone}***1** and **1** for handset 11, ^{tone}***2** and **2** for handset 12 or ^{tone}***#** and **#** for all handsets), or press **▼** or **▲** to scroll to the desired handset, then press **MENU/SELECT**. Your handset displays **Transferring call...** or **Transferring call to all...**

The destination handset rings and its screen displays

Transfer from other handset or **Transfer from HANDSET X**.

3. To answer the outside call, press ^{TALK}**FLASH**, **📞/SPEAKER** or any dialing key (**0-9**, **#** or ^{tone}***X**) on the destination handset.
4. To end the outside call, press **OFF/CANCEL** or place the handset in the telephone base or charger. The call continues until all handsets hang up.

note

 
- To cancel the blind transfer and return to the external call before it is answered, press **OFF/CANCEL** on your handset.
- If the destination handset does not answer the transferring call within 30 seconds, is accessing the answering system, is out of range, or has no power, your handset displays **No response to transfer**. If you do not press ^{TALK}**FLASH**, **📞/SPEAKER** or any dialing key (**0-9**, **#** or ^{tone}***X**) on your handset to reconnect the outside call within 30 seconds, the call hangs up automatically.

Multiple handset use

Push-to-talk (PTT)


You can directly broadcast messages from one handset to the speakerphone of one or multiple handsets. Press and hold **PUSH TO TALK** to begin two-way communication. If only one handset is available or registered, the handset screen shows **PTT requires two handsets** when you press **PUSH TO TALK**.

- Only one handset can talk at a time. To do so, press and hold **PUSH TO TALK** while you are talking.
- You must release **PUSH TO TALK**, so the other person can respond.
- Only one PTT session can be active at a time.
- While PTT is in use between two handsets, other handsets cannot use the intercom feature.
- If you attempt to place a PTT call to another handset that is on an outside call or intercom call, or accessing the answering system, your handset displays **Not available at this time**.



Turn PTT on or off

 1. Press **PUSH TO TALK** when the handset is not in use. The **PUSH TO TALK** menu displays.
2. Press ▼ or ▲ to highlight **>PTT On/Off**, then press **MENU/SELECT**.
3. Press ▼ or ▲ to choose **>On** or **>Off**, then press **MENU/SELECT**.



note

When PTT is turned off, the handset shows **No Incoming PTT** while the phone is not in use.

Multiple handset use

PTT to a single handset

1. You have two ways to begin a PTT call:
 - If you have two handsets, press and hold **PUSH TO TALK** when the handset is not in use.
 - If you have three or more handsets, press **PUSH TO TALK** when the handset is not in use. Then use the dialing keys to enter a handset number (**1-9** for handsets 1-9, ^{tone}**X** and **0** for handset 10, ^{tone}**X** and **1** for handset 11, or ^{tone}**X** and **2** for handset 12), or press **▼** or **▲** to scroll to the desired handset and then press **MENU/SELECT** or **PUSH TO TALK** to create the push-to-talk session.

Your handset displays **Connecting to HANDSET X...** for a few seconds. When the connection is made, both the originating and the destination handsets display **Press and hold [PTT] to talk** and beep once.

2. Press and hold **PUSH TO TALK** on your handset. A chirp indicates your microphone is on. Speak towards the handset. Your voice is broadcast to the destination handset. While you are speaking, your handset displays **PTT To handset: X** (X represents the destination handset).
3. Release **PUSH TO TALK** after speaking. Both handsets beep once again. After the handsets beep, you can press and hold **PUSH TO TALK** to continue speaking or the destination handset can respond (see **Answer a PTT call** on page 39).
4. Press **OFF/CANCEL** to end the PTT call. The handset displays **Push to talk Ended** for a few seconds.

-OR-

Place the handset in the telephone base or charger to end the PTT call.

note

After **PUSH TO TALK** is released, the PTT call remains open for a short time. If no one presses **PUSH TO TALK** within 10 seconds, the PTT call ends automatically.

Multiple handset use

PTT to multiple handsets

When there are multiple handsets registered to the telephone system, PTT supports one-to-group calls. PTT supports a maximum of one-to-four calls when one to five handsets are registered, and a maximum of one-to-three calls when six or more handsets are registered. The first four registered handsets will be able to use this feature. Other handsets can only use PTT for one-to-one calls.

1. To begin a PTT call to multiple handsets:

- Press and hold **PUSH TO TALK** when the handset is not in use.
- If you have more than two handsets, press **PUSH TO TALK** when the handset is not in use. Press ^{tone} * and #, or ▼ or ▲ to highlight **>All handsets** then press **MENU/SELECT** or **PUSH TO TALK**.

Your handset displays **Connecting to all handsets...** for a few seconds. When the connection is made, all handsets display **Press and hold [PTT] to talk** and beep once.

2. Press and hold **PUSH TO TALK** on your handset. A chirp indicates your microphone is on. Speak towards the handset. Your voice is broadcast to all destination handsets.

While you are speaking, your handset displays **PTT To handset: X** (X represents the destination handset).

3. Release **PUSH TO TALK** after speaking. All eligible handsets beep once again. After the handsets beep, you can press and hold **PUSH TO TALK** to speak again or the destination handsets can respond (see **Answer a PTT call** on page 39).
4. Press **OFF/CANCEL** to end the PTT call. The handset displays **Push to talk Ended** for a few seconds.

-OR-

Place the handset in the telephone base or charger to end the PTT call.

note

After **PUSH TO TALK** is released, the PTT call session remains open for a short time. If no one presses **PUSH TO TALK** within 10 seconds, the PTT call session ends automatically.

Multiple handset use

Answer a PTT call

You can respond to a PTT call whenever the speakerphone light is off, as described below.

1. When your handset receives a PTT call, the handset beeps and the screen displays **Press and hold [PTT] to talk**.
2. When the other party is speaking, your speakerphone light is on, and your handset displays **PTT From HS X To HS Y** (X represents the originating handset and Y represents the destination handset; a maximum of four handset numbers appear).
3. When your speakerphone light is off and the screen displays **Press and hold [PTT] to talk**, press and hold **PUSH TO TALK** on your handset. You will hear a chirp. Speak towards the handset.
 - While you are speaking, your handset displays **PTT To handset: X** (X represents the handset numbers of one or more destination handsets; a maximum of four handset numbers appear).
 - Your voice is broadcast to all destination handsets.

After speaking, release **PUSH TO TALK**. Your handset will beep. After the beep, if your speakerphone light is off, you can press and hold **PUSH TO TALK** to speak again or the destination handset can respond.

Change a one-to-one PTT call to intercom call

You can convert a one-to-one PTT session to an intercom call.

1. When your handset displays **Press and hold [PTT] to talk**, press **MENU/SELECT**. The screen displays **>Intercom**.
2. Press **MENU/SELECT**.
 - If you have two handsets, your handset displays **Calling other handset**. The destination handset temporarily displays **Push to talk Ended** and then **Other handset is calling**.
 - If you have three or more handsets, your handset displays **Calling HANDSET Y** (Y represents the destination handset). The destination handset temporarily displays **Push to talk Ended** and then **HANDSET X is calling** (X represents the originating handset).
3. On the destination handset, press **TALK/FLASH**, **Speaker** or any dialing key (**0-9**, **#** or **TONE**) to answer the intercom call. Both handsets now display **Intercom**.
4. To end the intercom call, press **OFF/CANCEL** or place the handset in the telephone base or charger. Both screens display **Intercom ended**.

Multiple handset use

End a PTT call

- For a one-to-one PTT call, both the originating and destination handsets can end the PTT call.
- For a PTT call to multiple handsets, the originating handset can end the PTT call. If any one of the destination handsets leaves the PTT call, the call continues until all handsets hang up.

To end or leave a PTT call:

- Press **OFF/CANCEL** or place the handset in the telephone base or charger. The handset displays **Push to talk Ended**.

note

After **PUSH TO TALK** is released, the PTT call remains open for a short time. If no one presses **PUSH TO TALK** within 10 seconds, the PTT call ends automatically.

Answer an incoming call during a PTT call

When you receive an incoming outside call during PTT, there is an alert tone.

- During a one-to-one PTT call, press **TALK/FLASH** on the originating or destination handset. The PTT call ends automatically and the outside call is answered.
- During a PTT call to multiple handsets, press **TALK/FLASH** on the originating handset. The PTT call ends automatically and the outside call is answered.
- During a PTT call to multiple handsets, press **TALK/FLASH** on any one of the destination handsets and that handset answers the outside call. The PTT call continues for the rest of the PTT participants.
- To leave the PTT call without answering the incoming call, press **OFF/CANCEL**. The telephone continues to ring.

Make an outgoing call during a PTT call

- During a one-to-one PTT call, press **TALK/FLASH** to get a dial tone. The PTT call ends automatically.
- During a PTT call to multiple handsets, press **TALK/FLASH** on the originating handset. The PTT call ends automatically and you get a dial tone.
- During a PTT call to multiple handsets, press **TALK/FLASH** on any one of the destination handsets and that handset gets a dial tone. The PTT call continues for the rest of the PTT participants.

Directory

About the directory

The directory can store up to 50 entries with up to 30 digits for each phone number and 15 alphanumeric characters for each name.

 
- Directory entries are shared by all system handsets. Any additions, deletions or edits made on one handset are reflected on all handsets.
- When you access the directory with no records, the screen displays **Directory empty**.
- When the directory is full and you try to save an entry, the screen displays **Directory full**.
- When you try to save a number already stored in the directory, the screen displays **Number already saved**.
- When reviewing a directory entry with a telephone number that exceeds 15 digits, <x appears in front of the telephone number. Press TOGGLE X to move towards the end of the telephone number or press # (pound key) to move towards the beginning of the telephone number.
- Only one handset can review the directory at a time. If a handset tries to enter the directory while another handset is already in it, **Not available at this time** appears.

Directory

Add a directory entry




Use the following steps to store an entry in the directory.

1. Enter the number when the handset is not in use and press **MENU/SELECT**. The screen displays **EDIT NUMBER**.



-OR-

   - a. Press **MENU/SELECT** when the handset is not in use.
 - b. Press **▼** or **▲** to highlight **>Directory**, then press **MENU/SELECT**.
 - c. Press **▼** or **▲** to highlight **>Add contact**, then press **MENU/SELECT**. The screen displays **ENTER NUMBER**.
2. Use the dialing keys to enter or modify the number.
 - Press **MUTE/DELETE** to backspace and delete a digit.
 - Press and hold **MUTE/DELETE** to delete all digits.
 - Press **▼** or **▲** to move the cursor to the left or right.
 - Press and hold **REDIAL/PAUSE** to insert a dialing pause (a **p** appears).



-OR-

Copy a number from the redial list by pressing **REDIAL/PAUSE** and then press **▼** or **▲**, or **REDIAL/PAUSE** repeatedly to choose a number. Press **MENU/SELECT** to copy the number.

3. Press **MENU/SELECT** to move to the name. The screen displays **ENTER NAME**.
4. Use the dialing keys to enter the name. Additional key presses show other characters of that particular key. Press the key repeatedly until the desired character appears. The first character and the character after a space are automatically capitalized.
 - Press **0** to add a space.
 - Press **MUTE/DELETE** to backspace and delete a character.
 - Press and hold **MUTE/DELETE** to delete all characters.
 - Press **▼** or **▲** to move the cursor to the left or right.
5. Press **MENU/SELECT** to confirm. The screen displays **Saved** and you hear a confirmation tone.

Directory

 
 
Search the directory

Entries are sorted alphabetically.

1. Press /▲ when the handset is not in use.

-OR-

- a. Press **MENU/SELECT** when the handset is not in use.
 - b. Press ▼ or ▲ to highlight **>Directory**, then press **MENU/SELECT**.
 - c. Press **MENU/SELECT** again to select **>Review**.
2. Press ▼ or ▲ to browse.



Alphabetical search

1. Press /▲ when the handset is not in use.

-OR-

- a. Press **MENU/SELECT** when the handset is not in use.
 - b. Press ▼ or ▲ to highlight **>Directory**, then press **MENU/SELECT**.
 - c. Press **MENU/SELECT** again to select **>Review**.
2. Use the dialing keys to enter the letters associated with the name. For example, if you have name entries Jenny, Jessie, Kristen and Laura in your directory, press **5** (JKL) once to see Jenny (when Jenny displays, press ▼ to see Jessie), twice to see Kristen, or three times to see Laura. If there is no name entry matching your search, the next closest match in alphabetical order appears. If necessary, press ▼ or ▲ to browse.

Dial a directory entry

1. Search for the desired entry in the directory (see **Search the directory** or **Alphabetical search** above).
2. Press /FLASH or /SPEAKER to dial the displayed number.

 
 
 
-OR-

1. Press /FLASH or /SPEAKER.
2. Press **MENU/SELECT**.
3. Press ▼ or ▲ to highlight **>Directory**, then press **MENU/SELECT**.
4. Press ▼ or ▲ or start an alphabetical search to browse to the desired entry, then press **MENU/SELECT** to dial the displayed number.

Directory



Edit a directory entry

1. Search for the desired entry in the directory (see **Search the directory** or **Alphabetical search** on page 43).
2. Press **MENU/SELECT**. The screen displays **EDIT NUMBER**.
3. Use the dialing keys to edit the number.
 - Press **MUTE/DELETE** to backspace and delete a digit.
 - Press and hold **MUTE/DELETE** to delete all digits.
 - Press **▼** or **▲** to move the cursor to the left or right.
4. Press **MENU/SELECT**. The screen displays **EDIT NAME**.
5. Use the dialing keys to enter the name. Additional key presses show other characters of that particular key. Press the key repeatedly until the desired character appears. The first character and the character after a space are automatically capitalized.
 - Press **0** to add a space.
 - Press **MUTE/DELETE** to backspace and delete a character.
 - Press and hold **MUTE/DELETE** to delete all characters.
 - Press **▼** or **▲** to move the cursor to the left or right.
6. Press **MENU/SELECT** to save the entry. The screen displays **Saved** and then the revised entry.



Delete a directory entry

  1. Search for the desired entry in the directory (see **Search the directory** or **Alphabetical search** on page 43).
2. Press **MUTE/DELETE**. The screen displays **Delete contact?**
3. Press **MENU/SELECT** to confirm. The screen displays **Contact deleted** and you hear a confirmation tone.




Directory

Assign a directory entry to a speed dial location


You can store up to 10 directory entries in the speed dial directory. The speed dial entries are shared by all handsets.

 1. Press and hold an empty speed dial key (0-9).



-OR-

 - a. Press **MENU/SELECT** when the handset is not in use.
 - b. Press ▼ or ▲ to scroll to **>Directory** and then press **MENU/SELECT**.
 - c. Press ▼ or ▲ to scroll to **>Speed dial**, then press **MENU/SELECT**.
 - d. Press ▼ or ▲ to select an empty speed dial location.
2. Press **MENU/SELECT**. The screen displays **Copy from Directory...**
 3. Press ▼ or ▲ to select a desired directory entry.



-OR-

Use the dialing keys to start an alphabetical search (see page 43).

4. Press **MENU/SELECT** to save. You hear a confirmation tone.



note

If the speed dial location is occupied, the new entry replaces the old one.

Dial a speed dial entry

Press and hold a speed dial key (0-9) of the desired entry when the handset is not in use. Then the number will be dialed automatically.

 
 
note

When the speed dial location chosen is empty, the handset will prompt you to the speed dial list. See **Assign a directory entry to a speed dial location** above to assign entries to the speed dial locations.

Directory



Reassign a speed dial number

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to scroll to **>Directory** and then press **MENU/SELECT**.
3. Press **▼** or **▲** to scroll to **>Speed dial**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to select a desired speed dial location, then press **MENU/SELECT**.
5. Press **MENU/SELECT** to choose **>Change SD**.
6. Press **MENU/SELECT** and then the screen displays **Copy from Directory...**
7. Press **▼** or **▲** to select a desired directory entry.
-OR-
Use the dialing keys to start an alphabetical search (see page 43).
8. Press **MENU/SELECT** to save. You hear a confirmation tone.



Delete a speed dial entry

  1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to scroll to **>Directory** and then press **MENU/SELECT**.
3. Press **▼** or **▲** to scroll to **>Speed dial**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to select a desired speed dial location.
5. Press **MUTE/DELETE** to clear the speed dial location.
-OR-
Press **MENU/SELECT** twice. Press **▼** or **▲** to scroll to **>Clear SD**, then press **MENU/SELECT**. The screen displays **Speed dial empty**. You hear a confirmation tone.



note

Clearing the speed dial locations does not affect the entries in the directory.

Caller ID

About caller ID

This product supports caller ID services provided by most telephone service providers. Depending on your service subscription, you may see the caller's number, or the caller's name and number that are sent by your telephone service provider after the first or second ring. Caller ID allows you to see the name, number, date and time of calls.

Information about caller ID with call waiting

Caller ID with call waiting lets you see the name and telephone number of the caller before answering the telephone, even while on another call.

It may be necessary to change your telephone service to use this feature. Contact your telephone service provider if:

- You have both caller ID and call waiting, but as separate services (you may need to combine these services).
- You have only caller ID service, or only call waiting service.
- You do not subscribe to caller ID or call waiting services.

There may be fees for caller ID services. In addition, services may not be available in all areas.

This product can provide information only if both you and the caller are in areas offering caller ID service and if both telephone service providers use compatible equipment. The time and date are sent by your telephone service provider along with the call information.

You can use this product with regular caller ID service, or you can use this product's other features without subscribing to either caller ID or combined caller ID with call waiting service.

Caller ID

Caller ID log

If you subscribe to caller ID service, information about each caller will appear after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log.

- The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name. If the phone number has more than 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.
- You can review, redial and copy an entry into the directory.
- Entries appear in reverse chronological order.
- When the caller ID log is full, the oldest entry is deleted to make room for new incoming call information.
- **XX Missed calls** displays when there are new caller ID log entries that have not been reviewed.
- **Caller ID log empty** displays when you access the caller ID log with no records.
- Only one handset can review the caller ID log at a time. If a handset tries to enter the caller ID log while another handset is already in it, **Not available at this time** appears.

note

- The caller ID information may not be available for every incoming call. The callers may intentionally block their names and/or telephone numbers.
- For caller ID log entries with numbers between 16 and 24 digits, in order to view the entire number, you must save the entry to the directory (see page 50).
- If the phone number has more than 24 digits, it will not be saved or shown in the caller ID log.

Memory match

If the last seven digits of the incoming telephone number is an exact match with a telephone number in your directory, the name that appears on the screen matches the corresponding name in your directory.

For example, if Elizabeth Jones calls, her name appears as Liz if this is how you entered it into your directory.

note

The number you see on your caller ID is in the format sent by the telephone service provider. It usually delivers 10-digit telephone numbers (area code plus telephone number). If the last seven digits of the incoming telephone number does not match a number in your directory, the name appears as it is delivered by the telephone service provider.



Caller ID

Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the handset displays **XX Missed calls**. When you have reviewed all the missed calls, the missed call indicator no longer displays.

Each time you review a caller ID log entry marked **NEW**, the number of missed calls decreases by one.

  If you do not want to review the missed calls one by one, press and hold OFF/CANCEL when the handset is not in use to clear the missed call indicator. All the entries are then considered old and kept in the caller ID log.




Review the caller ID log

1. Press **CID/▼** when the handset is not in use.
2. Press **▼** or **▲** to browse.

-OR-

 1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to scroll to **>Caller ID log**, then press **MENU/SELECT**.
3. Press **MENU/SELECT** to select **>Review**.
4. Press **▼** or **▲** to browse. You hear a double beep when you reach the beginning or end of the caller ID log.



View dialing options


Although the caller ID log entries received have 10 digits (the area code plus the seven-digit number), in some areas, you may need to dial only the seven digits, or **1** plus the seven digits, or **1** plus the area code plus the seven digits. You can change the number of digits that you dial from the caller ID log and store the new number to the directory.

While reviewing the caller ID log, press **#** (pound key) repeatedly to display different dialing options for local and long distance numbers before dialing or saving the telephone number in the directory.


Press **1** repeatedly if you need to add or remove **1** in front of the telephone number before dialing or saving it in the directory.

When the number is displayed in the correct format for dialing, press **TALK/FLASH** or **SPEAKER** to dial.


Press # →

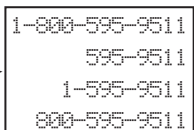

Press 1 →

 


Press 1 →

 




Caller ID

Dial a caller ID log entry

1. Search for the desired caller ID entry (see **Review the caller ID log** on page 49).
2. When the desired entry displays, press /FLASH or /SPEAKER to dial.

Save a caller ID log entry to the directory

   1. Search for the desired caller ID entry (see **Review the caller ID log** on page 49).
2. Press **MENU/SELECT** to select an entry. The screen displays **EDIT NUMBER**.
3. Use the dialing keys to edit the number (up to 30 digits).
 - Press **MUTE/DELETE** to backspace and delete a digit.
 - Press and hold MUTE/DELETE to delete all digits.
 - Press **▼** or **▲** to move the cursor to the left or right.
 - Press and hold REDIAL/PAUSE to insert a dialing pause (a **p** appears).
4. Press **MENU/SELECT** to move to the name. The screen displays **EDIT NAME**.
5. Use the dialing keys to edit the name (up to 15 characters).
 - Press **0** to add a space.
 - Press **MUTE/DELETE** to backspace and delete a character.
 - Press and hold MUTE/DELETE to delete all characters.
 - Press **▼** or **▲** to move the cursor to the left or right.
 - Press **#** (pound key) to switch the order of the names. For example, Miller Tom becomes Tom Miller when you press **#** (pound key).
6. Press **MENU/SELECT** to save the entry to the directory. The screen displays **Saved** and you hear a confirmation tone.



note

- If the name received from your telephone service provider is all in capital letters, the first letter of every word remains a capital letter. However, the next letter after the prefix **Mac**, **Mc**, **D'** or **O'** is kept as a capital letter. For example, the **D** in **MacDonald** is kept as a capital letter. Another exception is that **VAN DER** will be changed to **Van der**.
- When you try to save a caller ID entry without any caller ID information, the handset displays **Unable to save**.

Caller ID

Delete the caller ID log entries

 
 
To delete one entry:

1. Search for the desired caller ID entry (see **Review the caller ID log** on page 49).
2. Press **MUTE/DELETE** to delete the selected entry.



To delete all entries:

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Caller ID log**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Del all calls**, then press **MENU/SELECT**. The screen displays **Delete all calls?** Press **MENU/SELECT** to confirm. You hear a confirmation tone and the screen returns to the previous menu.



Caller ID log display screen messages

Displays:	When:
PRIVATE NAME	The caller is blocking the name.
PRIVATE NUMBER	The caller is blocking the telephone number.
PRIVATE CALLER	The caller is blocking the name and number.
UNKNOWN NAME	This caller's name is unavailable.
UNKNOWN NUMBER	This caller's number is unavailable.
UNKNOWN CALLER	No information is available about this caller.

Answering system settings

Answering system

Use the answering system menu of a system handset to turn on or off the answering system, set up the announcement message, activate the call screening, or change the number of rings, remote access code, message alert tone and message recording time. If your answering system is turned off and you change any of its settings, the answering system automatically turns on again.

You may also turn on or off the answering system at the telephone base.

 
 
Announcement

The telephone is preset with a greeting that answers calls with *"Hello, please leave a message after the tone."* You can use this preset announcement, or replace it with your own.

Record your own announcement

You can record an announcement up to 90 seconds, but announcements shorter than two seconds will not be recorded.

1. Press **MENU/SELECT** when the handset is not in use.
2. Press ▼ or ▲ to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press **MENU/SELECT** to select **>Announcement**.
4. Press ▼ or ▲ to highlight **>Record annnc**, then press **MENU/SELECT**. The system announces, *"Record after the tone. Press 5 when you are done,"* and the screen shows **RECORDING ANNC... 5-Stop**.
5. After the tone, speak towards the handset microphone.
6. Press **5** when done. The answering system automatically plays back the newly recorded announcement, then returns to the previous menu.





-OR-

Press **OFF/CANCEL** to exit without saving the recording.

Answering system settings

Play your announcement

  1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press **MENU/SELECT** to select **>Announcement**.
4. Press **MENU/SELECT** to select **>Play annc**. The handset plays the announcement and the screen shows **PLAYING ANNC... 5-Stop**.
5. Press **5** to stop the playback and return to the previous menu, or the handset screen automatically returns to the previous menu after the playback. Press **OFF/CANCEL** to return to the previous menu during playback.



Delete your announcement

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press **MENU/SELECT** to highlight **>Announcement**.
4. Press **MENU/SELECT** to select **>Play annc**.
5. When the handset is playing the announcement, press **MUTE/DELETE**. The handset displays **Annc. deleted** and announces, "Announcement deleted."

note

When your announcement is deleted, calls are answered with the preset announcement.


Answering system settings

Answer on/off

The answering system must be turned on to answer and record messages. When the answering system is turned on, the **ANS ON/OFF** light on the telephone base turns on and **ANS ON** displays on the handset.

To turn on or off with the telephone base:

Press **ANS ON/OFF** to turn the built-in answering system on or off. When the answering system is turned on, it announces, "Calls will be answered." When the answering system is turned off, it announces, "Calls will not be answered."

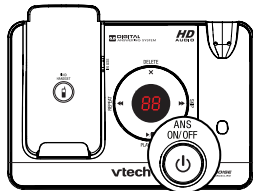

To turn on or off with a handset:

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Answer ON/OFF**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to choose **>On** or **>Off**, then press **MENU/SELECT**.

note

 
 
- When you turn on the answering system at the telephone base with no memory capacity left, the telephone announces, "Memory is full. Calls will not be answered." and the answering system cannot be turned on. When you turn on the answering system with a handset, the handset displays **Memory full**.
- If the answering system has less than 3 minutes of recording time left, the telephone announces, "Less than 3 minutes to record," and the handset displays **Less than 3 min to record**.

Call screening

Use this feature to choose whether incoming messages can be heard when they are being recorded.

To turn on or off with a handset:

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Ans sys setup**, then press **MENU/SELECT**.
4. Press **MENU/SELECT** to select **>Call screening**.
5. Press **▼** or **▲** to choose **>On** or **>Off**, then press **MENU/SELECT** to save.




Answering system settings

Number of rings

You can choose from two, three, four, five, six rings or toll saver. With toll saver selected, the answering system answers after two rings when you have new messages, and after four rings when you have no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges if you are calling from out of your local area.

 1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Ans sys setup**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to highlight **># of rings**, then press **MENU/SELECT**.
5. Press **▼** or **▲** to choose **6, 5, 4, 3, 2** or **Toll saver**, then press **MENU/SELECT** to save.




note

If you set the number of rings that the answering system answers calls as 3 rings, the answering system may not have enough time to announce the caller's full information.

Remote access code

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is **19**. You can set the code from **00** to **99**.

 1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Ans sys setup**, then press **MENU/SELECT**.
4. Press **▼** or **▲** to highlight **>Remote code**, then press **MENU/SELECT**.
5. Use the dialing keys (**0-9**) to enter the two-digit number, then press **MENU/SELECT** to save.




Answering system settings

Message alert tone

The telephone base beeps every 10 seconds to alert you of new messages. The tone stops when all new messages have been reviewed.

 1. Press **MENU/SELECT** when the handset is not in use.
2. Press ▼ or ▲ to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press ▼ or ▲ to highlight **>Ans sys setup**, then press **MENU/SELECT**.
4. Press ▼ or ▲ to highlight **>Msg alert tone**, then press **MENU/SELECT**.
5. Press ▼ or ▲ to choose **>On** or **>Off**, then press **MENU/SELECT** to save.




note

- The answering system must be turned on for the message alert tone to function.
- Press any key on the telephone base (except **📞/FIND HANDSET**) to temporarily silence the message alert tone.

Message recording time

You can set the recording time allowed for incoming messages. The message length is three minutes by default.

 
1. Press **MENU/SELECT** when the handset is not in use.
2. Press ▼ or ▲ to highlight **>Answering sys**, then press **MENU/SELECT**.
3. Press ▼ or ▲ to highlight **>Ans sys setup**, then press **MENU/SELECT**.
4. Press ▼ or ▲ to highlight **>Recording time**, then press **MENU/SELECT**.
5. Press ▼ or ▲ to choose **>3 minutes**, **>2 minutes**, or **>1 minute**, then press **MENU/SELECT** to save.



Answering system operation

Answering system and voicemail

Your telephone has separate indicators for two different types of voice messages: those left on its built-in answering system and those left at your service provider's voicemail. Your telephone's built-in answering system messages and voicemail messages are separate. Each alerts you to new messages differently.

- If **00** and **XX New messages** display on the handset and the message window on the telephone base flashes, there are new messages in the built-in answering system. To listen to the messages recorded on your digital answering system, press **▶/■/PLAY/STOP** on the telephone base. To listen to messages with a handset, see **To play messages with a handset** on page 60.
- If  and **New voicemail** display on the handset, your telephone service provider is indicating that it has new voicemail for you. To listen to your voicemail, you typically dial an access number provided by your telephone service provider, followed by a security code or PIN.

Some service providers bundle or combine multiple services like voicemail and call waiting, so you may not be aware that you have voicemail. To check what services you have and how to access them, contact your telephone service provider.

To use your voicemail service rather than your answering system, turn off your answering system. To use your answering system rather than your voicemail service, contact your telephone service provider to deactivate your voicemail service.

Using the answering system and voicemail together

You can also use your telephone answering system and voicemail together by setting your built-in answering system to answer before voicemail answers as described below. To learn how to program your voicemail settings, contact your telephone service provider. Then, if you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.

Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, if your voicemail answers after six rings, set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

Answering system operation

Message capacity

The answering system can record and store up to 99 messages. The recording time of each message depends on the message length you set (see **Message recording time** on page 56). The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message characteristics. Messages remain available for replay until you delete them.

New message indication

The message window on the telephone base flashes and **XX New messages** displays on the handset when there are new answering system messages.

If the message alert tone is turned on, the telephone base beeps every 10 seconds when there are messages that have not been reviewed.

Call screening

Call screening at the telephone base:

If the answering system and call screening are on (see **Call screening** on page 54), the announcement and the incoming message broadcast at the telephone base while the call is answered by the answering system.

Options while a message is being recorded:

- Press **▲/VOL** or **▼/VOL** on the telephone base to adjust the call screening volume.
- Press **▶/■/PLAY/STOP** to temporarily silence the call screening.
- Press **▶/■/PLAY/STOP** or **▲/VOL** to temporarily turn on the call screening if call screening is set to off.

Call screening at the handset:

If the answering system is on and your answering system is recording a message, your handset shows **To screen call, press [SELECT]**. Press **MENU/SELECT** to screen the call on your handset and the screen displays the caller ID information. If you do not subscribe to caller ID service, the handset shows **Screening...**

note

The call screening setting does not affect the call screening on the handset.

Call intercept

If you want to talk to the person whose message is being recorded, press **TALK/FLASH** or **📞/SPEAKER** on the handset.

Answering system operation

Message playback

On the telephone base, if you have new messages, the telephone plays only the new messages (oldest first). If there are no new messages, the telephone plays all messages (oldest first).

On the handset, if you have both new and old messages, you can play either new or old messages. The caller ID information displays on the handset screen when you play messages and you can call back the caller.

When playback begins, you hear the total number of messages followed by the day and time of the message. If the time and date are not set, the telephone announces, *"Time and date not set."* After the last message, the telephone announces, *"End of messages."*

To play messages with the telephone base:

- Press **▶/■/PLAY/STOP** when the telephone is not in use.

 
 
 
Options during playback:

- Press **▲/VOL** or **▼/VOL** to adjust the speaker volume.
- Press **▶/SKIP** to skip to the next message.
- Press **◀/REPEAT** once to repeat the message currently playing.
Press **◀/REPEAT** twice to listen to the previous message.
- Press **X/DELETE** to delete the message currently playing. The system advances to the next message.
- Press **▶/■/PLAY/STOP** to stop. The telephone plays a long beep.

Answering system operation

To play messages with a handset:

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **MENU/SELECT** to select **>Play messages**. If you have either new or old messages, the messages play automatically. If you have both new and old messages:
 - To play new messages, press **MENU/SELECT** to select **>Play new msgs**.
 - To play old messages, press **▼** or **▲** to highlight **>Play old msgs**, then press **MENU/SELECT**.



When the handset is playing a message, its screen shows the caller's name or number. If the caller's information is unavailable, the handset shows **No caller info**.

Options during playback:

- Press **MENU/SELECT** to pause the playback, and display the caller's information, then press **TALK/FLASH** or **📞/SPEAKER** to call back the caller. If you do not press **TALK/FLASH** or **📞/SPEAKER** within 10 seconds, message playback resumes automatically.
- Press **TALK/FLASH** to stop the playback and the screen displays **Call back?** then press **MENU/SELECT**, **TALK/FLASH** or **📞/SPEAKER** to call back the caller.
- Press **▼/VOLUME** or **▲/VOLUME** to adjust the speaker volume.
- Press **↑↓EQ** to adjust the handset message playback audio quality.
- Press **6** to skip to the next message.
- Press **4** once to repeat the message currently playing. Press **4** twice to listen to the previous message.
- Press **MUTE/DELETE** to delete the message currently playing. The system announces, *"Message deleted,"* and advances to the next message.
- Press **5** to stop.

note

- When the answering system has less than three minutes of recording time left, *"Less than three minutes to record"* is announced.
- When the telephone is not in use, if **F** and the number of messages are flashing alternately in the message window, or the handset displays **Rec mem full**, the memory is full. Delete some messages to make room for more.

Answering system operation

 
 
 
 
Delete all old messages

To delete all old messages with the telephone base:

1. Press **X/DELETE** when the phone is not in use. The telephone announces, *“To delete all old messages, press **DELETE** again.”*
2. Press **X/DELETE** again. All previously heard messages are deleted and the telephone announces, *“All old messages deleted.”*

To delete all old messages with a handset:

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Answering Sys**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Delete all old**, then press **MENU/SELECT**. The handset displays **Delete all old messages?** If there are no old messages in the answering system, the handset displays **No old messages to delete**.
4. Press **MENU/SELECT** to save. The handset displays **Deleting...** and then **All old msgs deleted!** You hear a confirmation tone.

**note**

You can only delete old messages, which are messages you have played.

Answering system operation

Record, play and delete memos

Memos are your own recorded messages used as reminders for yourself or others using the same answering system. You can record your own memos using a system handset. Play and delete them in the same way as incoming messages (see **Message playback** on pages 59-60).

To record a memo:

1. Press **MENU/SELECT** when the handset is not in use.
2. Press **▼** or **▲** to highlight **>Answering Sys**, then press **MENU/SELECT**.
3. Press **▼** or **▲** to highlight **>Record memo**, then press **MENU/SELECT**.
4. The system announces, *"Record after the tone. Press 5 when you are done."* After the tone, speak towards the handset microphone.
5. Press **5** when you finish recording. The system announces, *"Recorded."*

note

- If you record a memo when the answering system memory is full, the system announces, *"Memory is full."*
- Each memo can be up to four minutes in length.
- Memos shorter than two seconds are not recorded.

Message window displays

Window display	Description
0	No message.
1-99	The total number of old messages recorded. The message number currently playing.
0-99 (flashing)	When time and date are not set, it flashes 0 , the total number of new messages recorded, or total number of old messages recorded. The telephone base may have lost and regained power. The clock needs to be set.
1-99 & F (alternating)	The answering system memory is full with total number of messages recorded.
1-8	The telephone base speaker volume level while adjusting.
0-6	The telephone base ringer level while adjusting.
---	The system is answering a call, or recording a memo or announcement. The telephone is answering a call or being accessed remotely. The answering system is being programmed.

Answering system operation

Remote access

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is **19**; see **Remote access code** on page 55 to change it.

1. Dial your telephone number from any touch-tone telephone.
2. When the system plays your announcement, enter the two-digit security code.
3. Then you can enter one of the following remote commands.

Command	Function
1	Play all messages.
2	Play new messages.
3	Delete the current message (during playback).
33	Delete all old messages.
4	Repeat the current message (during playback).
44	Listen to the previous message (during playback).
5	Stop.
*5	Hear a list of remote commands.
6	Skip to the next message (during playback).
*7	Record a new announcement.
8	End the call.
0	Turn the answering system on or off.

4. Hang up or press **8** to end the call.

note

- If you do not press any keys after you enter the remote access code, all new messages play. If there are no new messages, all old messages play.
- Once the new messages have played, the telephone announces the help menu options. If you do not press any key within 20 seconds, the remote access call automatically disconnects.
- When the answering system is turned off, the telephone answers after 10 rings, and announces, *"Please enter your remote access code."*
- When the answering system memory is full, the telephone announces, *"Memory is full. Enter the remote access code."*

Appendix

Handset display screen messages

Answering sys is ON	The answering system is automatically turned on when you change the settings under answering system setup menu.
Caller ID log empty	There are no caller ID log entries.
Calling HANDSET X (for models with three or more handsets) Calling other handset (for models with two handsets)	Calling another handset (intercom).
Directory empty	There are no directory entries.
Directory full	The directory is full.
Ended	You have just ended a call.
HANDSET X is calling (for models with three or more handsets) Other handset is calling (for models with two handsets)	Another system handset is calling (intercom).
Incoming call	There is an incoming call.
Intercom	The handset is on an intercom call.
Intercom ended	You have just ended an intercom call.
Line in use	A system handset or another telephone on the same line is in use, or the answering system is answering a call.
Low battery	The handset battery needs to be recharged.
Microphone ON	MUTE is turned off and the person on the other end can hear you.
Muted	You have turned off the handset microphone. The other party cannot hear you but you can hear the other party.
New voicemail	There are new voicemail messages from your telephone service provider.
No answer. Try again	You have attempted to make an intercom call, but the handset you are calling is in the directory, in the caller ID log or out of range, or the handset you are calling is accessing the answering system or on an outside call.

Appendix


Handset display screen messages

No battery	No battery is installed. Follow the directions for battery installation on page 3 to install the battery before charging.
No line	There is no telephone line connected.
No signal, call ended	Communication between the handset and telephone base is lost during a call.
Not available at this time	One handset is already viewing the caller ID log or directory, and another handset attempts to review it. You attempt to place a PTT call to another handset which is on an outside call or intercom call, or accessing the answering system.
Number already saved	The telephone number entered is already stored in the directory.
Out of range OR No fur at base	The handset cannot communicate with the telephone base. Check the telephone base power connection or move closer.
** Paging **	The system handset is being paged.
Phone	The handset is on a call.
Place in charger	The battery is very low. Place the handset in the telephone base or charger for recharging.
Rec mem full	The answering system memory is full.
Rec mem low	The answering system has less than three minutes of recording time left.
Ringer muted	The ringer is muted temporarily during an incoming call or intercom call.
Ringer off	The ringer is turned off.
Saved	Your selection has been saved.
Speaker	The handset speakerphone is in use.
Unable to call. Line in use	You try to predial a number while the telephone line is in use.
Unable to call. Try again.	You try to join a call when there are already four handsets on that call, or to make an outside call when another handset is transferring a call with the intercom feature.
Unable to save	You try to save a caller ID entry without a number into the directory.
XX Missed calls	There are XX calls that have not been reviewed in your caller ID log.
XX New messages	There are XX new messages in the answering system.


Appendix

Handset and telephone base indicators








 
Handset lights

	On when the handset speakerphone is in use.
CHARGE	On when the handset is charging in the telephone base or charger.

Telephone base lights

IN USE	On when the telephone line is in use. On when the answering system is answering a call. On when you are registering a handset. Flashes quickly when there is an incoming call. Flashes when another telephone sharing the same line is in use. Flashes when you are deregistering all handsets.
 /ANS ON/OFF	On when the answering system is turned on.

Handset icons

	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
	The speakerphone is in use.
	The handset ringer is off.
	There are new voicemail received from your telephone service provider.
ANS ON	The answering system is turned on.
	There are new answering system messages.
NEW	There are new caller ID log entries or new messages.
MUTE	The microphone is muted.
	The message number currently playing and total number of messages recorded.

Appendix

Headset indicators

Headset alert tones

One beep	Headset key tone.
One beep every 30 seconds	Muted headset microphone alert tone.
Two quick beeps	Error alert tone. The volume reaches its minimum or maximum setting.
Two rapid beeps every 20 seconds	Low battery warning.
Three rapid beeps	The headset is being powered on or off.
Three rapid beeps every 20 seconds	Out of range while the headset is on a call. A non-registered headset with a charged battery.
Ringer tone	Incoming call alert tone.

Headset lights

Red	On when the headset is charging in the telephone base. Flashes once every 10 seconds to indicate the battery is low. Flashes three times when the headset is being powered off.
Blue	On when the headset is fully charged in the telephone base. Flashes once every 10 seconds when the charged headset is in idle mode. Flashes twice every three seconds when the headset is in use. Flashes three times when the headset is being powered on. Flashes quickly in blue while being paged. Flashes four times every four seconds when there is an incoming call.
Red and blue	Flashes quickly and alternately when the headset is trying to register to a telephone base. Flashes slowly and alternately when the headset is not registered.
Off	The headset battery is depleted. The headset has been powered off.

Appendix

Expand your telephone system

The handset(s) and headset provided with your telephone system are already registered. Each handset is assigned a number that displays on the handset. Additional handsets registered to the telephone system are assigned in sequential order. For instance, if the telephone system already has **HANDSET 1** and **HANDSET 2**, the new registered handset is assigned **HANDSET 3**. After registration, you may rename the handsets (see **Rename handset** on page 22). This telephone system accommodates up to 12 handsets. You can register a maximum of two cordless headsets (**IS6100**) to the telephone base. The telephone base recognizes and counts a headset the same as a handset.

Add and register a handset


You can add new handsets (**LS6405**, purchased separately) to your telephone system. Each handset must be registered with the telephone base before use. When first purchased, each handset displays **Put HS on BASE to register**. You may need to charge the handset before registering it to the telephone base. For more details on battery charging, see page 4.

To register a handset:

1. Make sure the handset is out of the telephone base or handset charger and shows **Put HS on BASE to register**. Place the handset you wish to register in the telephone base.
2. The handset displays **Registering...Please wait** and the red **IN USE** light on the telephone base turns on. It takes about 90 seconds to complete the registration process. The handset displays **HANDSET X Registered** (**X** represents the registered handset number). The **IN USE** light turns off and the handset beeps when registration completes.

If registration fails, the system will automatically try to register again. If registration fails after the third try, the handset displays **Registration failed** then **Put HS on BASE to register**. This may take up to five minutes to occur.

To reset the handset, remove it from the telephone base. When the handset displays **Put HS on BASE to register**, try the registration process again.

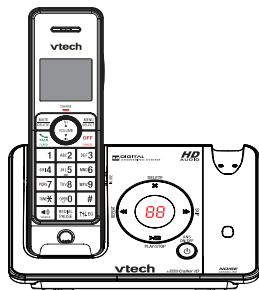

note




After registration, the date and time needs to be reset. For instructions, see **Set date and time** on page 19.


Appendix




Add and register a headset

The telephone system accommodates up to two cordless headsets. You can add a new headset (**IS6100**, purchased separately) to your telephone system. The headset must be registered with the telephone base before use. You may need to charge the headset before registering it to the telephone base. For more details on headset charging, see page 5.

To register a headset:

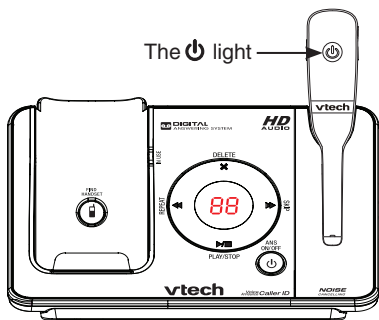1. Place the non-registered headset in the telephone base and allow it to charge for at least 15 minutes before beginning registration. Remove the headset from the telephone base. The  light on the headset flashes slowly and alternately in red and blue.
2. On the telephone base, press and hold /**FIND HANDSET** for about four seconds until the red **IN USE** light turns on.
3. Immediately place the headset in the telephone base. It takes about 60 seconds to complete the registration. The red **IN USE** light on the telephone base turns off. The  light on the headset turns red when it is registered but not fully charged, or turns blue if it is registered and fully charged.



If registration is successful, you hear a dial tone when you press  on the headset. If registration fails, you hear “*Not registered*” through the headset earpiece when you press  on the headset. The  light on the headset flashes slowly and alternately in red and blue. To reset the headset, remove it from the telephone base and then place it back into its charger. Try the registration process again.

note

The headset must be deregistered before registering it to another telephone system.

Appendix





Deregister handsets/headsets


If you want to replace a handset or headset, or reassign the designated handset number of a registered handset, you must deregister all handsets and headsets that are registered to the telephone base. Then register each handset and headset individually.

To make deregistration easier, read all of the instructions on this page before you begin.


Make sure that all handsets are out of the telephone base and handset chargers before you begin deregistration.

To deregister all handsets and headsets:

1. Press and hold /FIND HANDSET on the telephone base for about 10 seconds until the **IN USE** light on the telephone base turns on and starts flashing.
2. Press and release /FIND HANDSET again. You must press /FIND HANDSET while the **IN USE** light is still flashing. The **IN USE** light flashes for approximately seven seconds.
3. The deregistration process takes about 10 seconds to complete. All handsets show **Put HS on BASE to register** and all headset  lights flash slowly and alternately in red and blue.

If the deregistration process is successful, you hear “*Not registered*” through the headset earpiece when you press  on the headset. If deregistration fails, you may need to reset the telephone and try again.

To reset:

1. Pick up the registered handset. Press /FLASH and then press OFF/CANCEL. Place the handset in the telephone base.
2. Pick up the registered headset and press the **RESET** inset button with a paper clip or similar object.

-OR-

Unplug the power from the telephone base, then plug it back in.

note

You cannot deregister all handsets and headsets if any other system handset or headset is in use.

Appendix

Troubleshooting

If you have difficulty with your telephone or headset, please try the suggestions below. For customer service, visit our website at www.vtechphones.com, or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

My telephone does not work at all.

- Make sure the battery is installed and charged correctly (pages 3-4). For optimum daily performance, return the handset to the telephone base or charger after use.
- Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.
- Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.
- Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to synchronize.
- Charge the battery in the handset for up to 10 hours.
- If the battery is completely depleted, charge the handset for at least 30 minutes before using it (page 4).
- Remove and then install the battery again. If that still does not work, it may be necessary to purchase a new battery.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or telephone service. Contact your telephone service provider.

The display shows No line. I cannot get a dial tone..

- Try all the above suggestions.
- The telephone line cord may be defective. Install a new telephone line cord.
- Disconnect the telephone base from the telephone wall jack and connect a different telephone. If there is no dial tone on this telephone either, the problem is in your wiring or telephone service. Contact your telephone service provider.

I cannot dial out from my cordless handset.

- Try all the above suggestions.
- Make sure there is a dial tone before dialing. It is normal if the handset takes a second or two to synchronize with the telephone before producing a dial tone. Wait an extra second before dialing.
- If other telephones in your home are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider.
- Eliminate any background noise. Mute the cordless handset before dialing, or dial from another room in your home with less background noise.

Appendix

Troubleshooting

Low battery shows on screen.

- Place the handset in the telephone base or charger for recharging.
- Remove and then install the battery again and use it until fully depleted. Then recharge the handset in the telephone base or charger for up to 10 hours.
- If the above measures do not correct the problem, replace the battery.

The battery does not charge in the handset or the handset battery does not accept charge.

- Make sure the handset is placed in the telephone base or charger correctly. The **CHARGE** light on the handset should be on.
- Remove and then install the battery again, then charge for up to 10 hours.
- If the handset is in the telephone base or charger but the **CHARGE** light on the handset is not on, refer to **The CHARGE light is off** section below.
- If the battery is completely depleted, charge the handset for at least 30 minutes before using it (page 4).
- Purchase a new battery. Refer to **Battery installation** (page 3) and **Battery charging** (page 4).

The CHARGE light is off.

- Clean the charging contacts on the handset and telephone base each month with a pencil eraser or a dry non-abrasive fabric.
- Make sure the power adapter and telephone line cord are plugged in correctly and securely.
- Unplug the power adapter. Wait for 15 seconds before plugging it back in. Allow up to one minute for the handset and telephone base to reset.

The telephone does not ring when there is an incoming call.

- Make sure the handset ringer volume is not set to the lowest level (page 18) and the telephone base ringer volume is not set to zero (page 18).
- Make sure the telephone line cord and power adapter are plugged in properly (page 2).
- The handset may be too far from the telephone base. Move it closer to the telephone base.
- There may be too many extension phones on the telephone line to allow all of them to ring simultaneously. Unplug some of them.
- If other telephones in your home are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- Test a working telephone at the telephone wall jack. If another telephone has the same problem, the problem is in the telephone wall jack. Contact your telephone service provider.
- The telephone line cord may be defective. Install a new telephone line cord.
- Remove and then install the battery again and place the handset in the telephone base or charger.
- Wait for the handset to synchronize with the telephone base. Allow up to one minute for this to take place.

Appendix

Troubleshooting

My handset beeps and is not performing normally.

- Make sure the power cord is securely plugged into the telephone base. Plug the telephone base into a different working electrical outlet not controlled by a wall switch.
- Move the handset closer to the telephone base. It may be out of range.
- Reset the telephone base by unplugging the electrical power to the base. Wait for 15 seconds and plug it back in again. Allow up to one minute for the cordless handset and the telephone base to synchronize.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.

I hear noise on the cordless handset and the keys do not work.

- Make sure the telephone line cord is plugged in securely.

There is interference during a telephone conversation. My calls fade out when I am using the cordless handset/headset.

- The handset or headset may be out of range. Move it closer to the telephone base.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Contact your DSL service provider for more information about DSL filters.
- Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference. Try moving the appliance or telephone base to another outlet.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, relocate your telephone or modem farther apart from each other, or use a different surge protector.
- The location of your telephone base can impact the performance of your cordless phone or headset. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base improves overall performance.
- Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or telephone service. Contact your telephone service provider (charges may apply).
- If other telephones in your home are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider.

Appendix

Troubleshooting

I hear other calls when using the cordless handset/headset.

- Disconnect the telephone base from the telephone wall jack. Plug in a different telephone. If you still hear other calls, the problem is probably in the wiring or telephone service. Call your telephone service provider.

The other party cannot hear my voice during a call.

- Make sure the mute feature is not turned on during a call (page 26).


Registration failed appears on the handset.

- Only one handset can be registered at a time. If you have multiple handsets to register, please follow the instructions on page 68 for the first handset. Once a handset has been successfully registered, repeat the steps for each handset that needs to be registered.
- If you have already registered the maximum numbers of handsets and/or headsets, you need to follow the deregistration instructions before registering a handset. Refer to **Expand your telephone system** on page 68 and **Deregister handsets/headsets** on page 70.
- Follow the steps in **Common cure for electronic equipment** (page 80), then try again to register a handset.

My headset does not work at all.

- Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.
- Charge the headset in the telephone base for up to three hours.
- Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless headset and telephone base to synchronize.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- If the headset battery is completely depleted, it may take up to 15 minutes to charge the headset before the headset has enough charge to use for a short time.
- The headset battery may be defective. Contact our customer service for assistance.

I cannot dial out from my cordless headset.

- You must use a telephone on the same line to dial out. Once you have dialed the number, you can press  on the headset to take the call. After the headset is activated, you can hang up the handset from which you dialed from.
- If other telephones in your home are having the same problem, the problem is in your wiring or telephone service. Contact your telephone service provider (charges may apply).



Appendix

Troubleshooting

The blue or red light keeps flashing on the headset key.

- Different flashing patterns of the red and/or blue lights indicate different conditions of headset. See **Headset indicators** on page 67.

The headset does not charge in the telephone base.

- Make sure the telephone base power adapter is securely plugged into an electrical outlet (page 2). For optimum daily performance, return the headset to the telephone base after use.
- Make sure the cordless headset is placed in the telephone base correctly. The headset  light should be on.
- Unplug the power adapter and then plug it back, then charge for up to three hours.
- If the cordless headset is in the telephone base and the headset light is not on, refer to **The  light on the headset is off while charging** below.
- If the battery is completely depleted, it may take up to 15 minutes to charge the headset before it has enough charge to be used for a short time. For optimum daily performance, return the cordless headset to the telephone base when not in use.
- The headset battery may be defective. Contact our customer service for assistance.

The light on the headset is off while charging.

- Make sure the power adapter is correctly and securely plugged in the electrical outlet.
- Make sure the headset is sitting properly in the telephone base to charge.
- Clean the charging contacts on the headset and telephone base each month with a pencil eraser or a dry non-abrasive fabric.
- Unplug the power adapter. Wait for 15 seconds before plugging it back in.

My cordless headset is not performing normally.

- Make sure the power cord is correctly and securely plugged into the telephone base. Plug the telephone base into a different working electrical outlet not controlled by a wall switch.
- Move the cordless headset closer to the telephone base. It may be out of range.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- If you have tried the above suggestions and the headset is still not performing normally, press the **RESET** inset button with a paper clip or similar object once to restart the headset.

Appendix

Troubleshooting

I cannot hear any ring tone from the cordless headset when there is an incoming call.

- The headset does not have an external ringer. The ring tone can only be heard through the headset earpiece.
- Make sure the headset ringer volume is not set to the lowest level (page 18).
- If you have pressed **MUTE/FLASH** on the cordless headset when it is ringing, it mutes the ring tone of the headset. The ring tone resumes on the next call.
- The headset may be too far from the telephone base. Move it closer to the telephone base.
- You may have too many extension phones on the telephone line to allow all of them to ring simultaneously. Unplug some of them.
- The layout of your home or office may be limiting the operating range. Try moving the telephone base to another location, preferably on a higher location.
- If other telephones in your home are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- Test a working telephone at the telephone wall jack. If another telephone has the same problem, there may be problem with the telephone wall jack. Contact your telephone service provider.
- The telephone line cord may be defective. Install a new telephone line cord.

I cannot register a cordless headset.

- Only one headset can be registered at a time. If you have multiple handsets and headsets to register, please follow the instructions on pages 68 and 69.
- If you have already registered the maximum numbers of handsets and/or headsets, you need to follow the deregistration instructions before registering a headset. Refer to **Expand your telephone system** on page 68 and **Deregister handsets/headsets** on page 70.
- Follow the steps in **Common cure for electronic equipment** (page 80), then try again to register a headset.

Appendix

Troubleshooting

My caller ID features are not working properly.

- Caller ID is a subscription service. You must subscribe to this service from your telephone service provider for this feature to work on your telephone.
- The caller may not be calling from an area which supports caller ID.
- Both your and your caller's telephone service providers must use equipment compatible with the caller ID service.
- The caller ID information shows after the first or second ring.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Contact your DSL service provider for more information about DSL filters.

The telephone does not receive caller ID or the telephone does not show caller ID during call waiting.

- Make sure you subscribe to caller ID with call waiting features provided by your telephone service provider.
- The caller may not be calling from an area which supports caller ID.
- Both your and your caller's telephone service providers must use equipment compatible with caller ID service.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Contact your DSL service provider for more information about DSL filters.

Caller ID entries do not match the numbers I need to dial.

- Caller ID service delivers 10 digits (the area code plus the seven-digit number). If you need to dial something other 10 digits, see **View dialing options** on page 49 for instructions on changing the number.
- If you dial seven digits for local calls, you may want to use the home area code feature (page 23).


Appendix

Troubleshooting

Out of range OR No pwr at base shows in the handset screen.

- The handset may be out of range. Move it closer to the telephone base.
- Make sure the power cord is securely plugged into the telephone base. Use a working electrical outlet not controlled by a wall switch.
- Reset your telephone by unplugging the power adapter from the telephone base. Disconnect the battery from the cordless handset. Wait for 15 seconds, then plug in the power adapter and install the battery again. Place the handset in the telephone base and allow up to one minute for the handset and telephone base to synchronize.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.


New voicemail and show on the display and I don't know why.

- Your telephone has voicemail indication that is separate from the built-in answering system. If **New voicemail** and  appear on the display, then your telephone has received a signal from your telephone service provider that you have a voicemail message waiting for you to retrieve from your telephone service provider. Contact your telephone service provider for more information on how to access your voicemail.

I cannot retrieve voicemail messages.

- Your telephone has both a built-in answering system and voicemail indication. They are independent features and each alerts you to new messages differently (page 57). If you subscribe to voicemail service from your telephone service provider (charges may apply), contact your telephone service provider for more information on how to access your voicemail.

The answering system does not answer after the correct number of rings.

- Make sure the answering system is on. When the answering system is on, the /ANS ON/OFF light on the telephone base should be lit and **ANS ON** should show on the handset.
- If toll saver is selected, the number of rings changes to two when there are new messages waiting (page 55).
- If the memory is full or if the answering system is off, the answering system answers after 10 rings.
- In some cases, the answering system is affected by the ringing system used by your telephone service provider.
- If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail answers (see page 55). To determine how many rings activate your voicemail, contact your telephone service provider.
- If there is a fax machine connected to the same telephone line, try disconnecting the fax machine. If that solves the problem, consult your fax machine documentation for information on compatibility with answering systems.

Appendix

Troubleshooting

The outgoing announcement is not clear.

- When recording the announcement, make sure you speak in a normal tone of voice towards the microphone of the handset.
- Make sure there is no background noise when recording.

The answering system does not record messages.

- Make sure the answering system is on (see page 54).
- When the answering machine memory is full, it does not record new messages until some old messages are deleted.
- If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail answers (see page 55). To determine how many rings activate your voicemail, contact your telephone service provider.
- If there is a fax machine connected to the same telephone line, try disconnecting the fax machine. If that solves the problem, consult your fax machine documentation for information on compatibility with answering systems.

The messages on the answering system are very difficult to hear.

- Press ▲/VOL on the telephone base or ▲/VOLUME on the handset to increase the speaker volume.

The messages on the answering system are incomplete.

- The recording time of each message depends on the message recording time you set (page 56).
- If a caller leaves a very long message, part of it may be lost when the answering system disconnects the call after the preset message recording time.
- If the memory on the answering system becomes full during a message, the answering system stops recording and disconnects the call.
- If the caller's voice is very soft, the answering system may stop recording and disconnect the call.

Appendix

Troubleshooting

The answering system does not respond to remote commands.

- Make sure your remote access code is correct (page 55).
- Make sure you are calling from a touch-tone telephone. When dialing a number, there should be tones. If there are clicks, then it is not a touch-tone telephone and cannot activate the answering system.
- The answering system may not detect the remote access code when your announcement is playing. Wait until the announcement is over before entering the code.
- There may be interference on the telephone line you are using. Use the dialing keys firmly when dialing.

I subscribe to a nontraditional telephone service that uses my computer to establish connections, and my telephone doesn't work.

- Make sure your computer is powered on.
- Make sure your Internet connection is working properly.
- Make sure that the software is installed and running for your nontraditional telephone service.
- Make sure to plug your USB telephone adapter into a dedicated USB port on your computer. Do not plug into a multiple port USB hub (USB splitter) that is not powered.
- In a few rare instances, the USB port on your computer may not have enough power. In these instances, try using a USB hub with its own external power supply.
- If you are using a firewall, it may prevent access to your nontraditional telephone service. Contact your service provider for more information.

Common cure for electronic equipment.

- If the telephone is not responding normally, put the cordless handset in the telephone base. If it does not fix the problem, try the following (in the order listed):
 1. Disconnect the power to the telephone base.
 2. Disconnect the battery on the cordless handset.
 3. Wait a few minutes before connecting power to the telephone base.
 4. Remove and then install the battery again and place the cordless handset in the telephone base or charger.
 5. Wait for the cordless handset to synchronize with the telephone base. Allow up to one minute for this to take place.

Appendix

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
5. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
6. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
9. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
11. Do not overload wall outlets and extension cords.
12. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
15. Only put the handset of your telephone next to your ear when it is in normal talk mode.
16. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

SAVE THESE INSTRUCTIONS

Appendix

Important safety instructions

Battery

- **CAUTION:** Use Only Supplied Battery.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

About cordless telephones

- **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- **Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- **Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- **Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- **Nickel-metal hydride and lithium-ion rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

Appendix

The RBRC® seal



The RBRC® seal on the nickel-metal hydride battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call **1 (800) 8 BATTERY™** for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation.



The RBRC® seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call **1 (800) 8 BATTERY™** for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation.

Appendix

FCC, ACTA and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset and headset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian requirement:
CAN ICES-3 (B)/NMB-3(B).

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your telephone service provider upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the installation instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, contact your telephone service provider.

Appendix

FCC, ACTA and IC regulations

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited warranty.

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

 



This product meets the applicable Industry Canada technical specifications.

Appendix

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays **Out of range OR No pwr at base**.

If there is a call while the handset or headset is out of range, it may not ring, or if it does ring, the call may not connect well when you press  FLASH on the handset or  on the headset. Move closer to the telephone base, then press  FLASH on the handset or  on the headset to answer the call.

If the handset or headset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

Maintenance

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or mild soap. Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORD FROM THE WALL**. Then remove the telephone by the unplugged cords.


Appendix

California Energy Commission battery charging testing instructions

This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended for California Energy Commission (CEC) compliance testing only. When the CEC battery charging testing mode is activated, all headset and handset functions, except headset battery charging, will be disabled.

To activate the CEC battery charging testing mode for the headset:

1. Before proceeding, make sure the headset is plugged with charged battery and the headset charger is connected to power.
2. Press **+VOLUME**, **⏻**, **-VOLUME**, **⏻**, **+VOLUME**, **-VOLUME** and **⏻**.

 When the headset successfully enters the CEC battery charging testing mode, the **⏻** light on the headset flashes slowly and alternately in red and blue. Press **⏻** and you hear “*Not registered.*” Then put the headset in the headset charger for charging.


When the headset fails to enter this mode, repeat Step 1 to Step 2 above.

To deactivate the CEC battery charging testing mode for the headset:

1. Before proceeding, make sure the headset is plugged with charged battery. Make sure the telephone base and headset charger are connected to power.
2. Register the headset back to the telephone base. See page 69 for headset registration instructions.

To activate the CEC battery charging testing mode for the handset:

1. Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries.
2. While you press and hold **⏻/FIND HANDSET**, plug the telephone base power adapter back to the power outlet.
3. After about 20 seconds, when the **IN USE** light starts flashing, release **⏻/FIND HANDSET** and then press it again within 2 seconds.

 When the phone successfully enters the CEC battery charging testing mode, the **IN USE** light turns off and all handsets display **Put HS on BASE to register**.

When the phone fails to enter this mode, repeat Step 1 through Step 3 above.

Note: The telephone base will be powered up as normal if you fail to press **⏻/FIND HANDSET** within 2 seconds in Step 3.

To deactivate the CEC battery charging testing mode for the handset:

1. Unplug the telephone base adapter from the power outlet, then plug it back in. Then the telephone base is powered up as normal.
2. Register your handsets back to the telephone base. See page 68 for handset registration instructions.

Appendix

For C-UL compliance only

Mesures de sécurité importantes

Afin de réduire les risques d'incendie, de blessures corporelles ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone :

1. Lisez et comprenez bien toutes les instructions.
2. Observez toutes les instructions et mises en garde inscrites sur l'appareil.
3. Débranchez ce téléphone de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol. N'utilisez qu'un chiffon doux et légèrement humecté.
4. N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
5. Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé.
6. Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas d'aération adéquate.
7. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.
8. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire.
9. N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points de tension dangereux ou court-circuiter des pièces, ce qui constituerait un risque d'incendie ou d'électrocution. N'échappez pas de liquides dans l'appareil.
10. Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux.
11. Ne surchargez pas les prises de courant et les rallonges.
12. Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants:
 - Lorsque le cordon d'alimentation est endommagé ou écorché.
 - Si du liquide a été échappé dans l'appareil.
 - Si l'appareil a été exposé à une source d'humidité telle que la pluie ou l'eau.
 - Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de l'appareil.
 - Si le produit a été échappé et que le socle et/ou le combiné a été endommagé.
 - Si le produit affiche une nette diminution de sa performance.
13. Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.

Appendix

14. N'utilisez pas le téléphone pour rapporter une fuite de gaz à proximité de la fuite. En certaines circonstances, une flammèche pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est déposé sur le socle. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant des concentrations de gaz inflammables, à moins que la ventilation soit adéquate. Une flammèche dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre: des endroits où l'on utilise de l'oxygène médical sans ventilation adéquate; des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.); une fuite de gaz naturel, etc
15. Ne placez que le combiné de votre téléphone près de votre oreille lorsqu'en mode de conversation.
16. Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci est branché dans une prise au plafond ou sous une table/ armoire.

CONSERVEZ CES INSTRUCTIONS

Pile

- MISE EN GARDE : N'utilisez que la pile incluse.
- Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus auprès des autorités locales.
- N'ouvrez pas et ne nutilez pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est toxique si avalé.
- Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux conducteurs. .
- Rechargez la pile incluse ou identifiée pour fonctionner avec cet appareil, selon les instructions et limites spécifiées dans ce guide d'utilisation.

Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (s'applique uniquement aux téléphones numériques sans fil) :

L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins :

Avis aux détenteurs de stimulateurs cardiaques

- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.
- Ils doivent utiliser le téléphone sans fil en l'appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil à proximité de ceux-ci.

Appendix

For C-UL compliance only

À propos des téléphones sans fil

- **Confidentialité** : Les mêmes caractéristiques qui constituent des avantages pour les téléphones sans fil affichent également des restrictions. Les appels téléphoniques sont transmis entre le combiné sans fil et le socle par le biais d'ondes radio ; il y a donc la possibilité que vos conversations téléphoniques sans fil soient interceptées par des équipements de réception radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez pas percevoir les communications téléphoniques sans fil comme étant aussi confidentielles que celles des téléphones à cordons.
- **Alimentation électrique** : Le socle de ce téléphone sans fil doit être branché à une prise électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne pourront pas être effectués du combiné sans fil si le socle est débranché ou mis hors tension ou si le courant est coupé.
- **Possibilité d'interférences aux téléviseurs** : Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux magnétoscopes. Pour réduire ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil près ou sur un téléviseur ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possiblement les interférences.
- **Piles rechargeables** : Manipulez les piles avec soin afin de ne pas les court-circuiter avec des bagues, bracelets ou clés. Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité adéquate entre la pile et le chargeur.
- **Les bloc-piles rechargeables à l'hydrure métallique de nickel** : Jetez ces blocs-piles de manière écologique et sécuritaire. Ne les incinerez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées.

Appendix

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase (“Consumer” or “you”) that the Product and all accessories provided in the sales package (“Product”) are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period (“Materially Defective Product”)?

During the limited warranty period, VTech’s authorized service representative will repair or replace at VTech’s option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech’s option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

What is not covered by this limited warranty?

This limited warranty does not cover:

1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
4. Product to the extent that the problem is caused by use with non-VTech accessories; or
5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
7. Product returned without a valid proof of purchase (see item 2 on the next page); or
8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

Appendix

Limited warranty

How do you get warranty service?

To obtain warranty service, please visit our website at www.vtechphones.com, or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com, or call 1 (800) 26-77377.

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service?

1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
3. Provide your name, complete and correct mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

Appendix

Technical specifications

Frequency Control	Crystal controlled PLL synthesizer
Transmit frequency	Handset: 1921.536-1928.448 MHz Telephone base: 1921.536-1928.448 MHz Headset: 1921.536-1928.448 MHz
Channels	5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Handset: 2.4V Ni-MH battery Telephone base output #1: 6V DC @ 450mA Telephone base output #2: 6V DC @ 300mA Charger: 6V AC @ 300mA
Memory	Handset directory: 50 memory locations; up to 30 digits and 15 characters Handset caller ID log: 50 memory locations; up to 24 digits and 15 characters

Index

A

- About cordless telephones 83
- Add a directory entry 42
- Add a handset 68
- Alphabetical search 43
- Announced transfer 34
- Announcement 52
- Answer a call 25
- Answer an incoming call during an intercom call 33
- Answer an incoming call during a PTT call 40
- Answer a PTT call 39
- Answering system 52
- Answer on/off 54
- Assign a directory entry to a speed dial location 45

B

- Battery 5, 82
- Battery charging 4
- Battery installation 3
- Blind transfer 35

C

- Call intercept 58
- Call screening 54, 58
- Call waiting 28
- Caller ID 47
- Caller ID log 48
- Chain dialing 30
- Charging 4
- CID time synchronization 23
- Clear voicemail indicator 21
- Clock 19

D

- Date and time 19
- Delete a directory entry 44
- Delete a speed dial entry 46
- Delete messages 59, 60, 61
- Delete the announcement 53

- Delete the caller ID log entries 51
- Deregistration 70
- Dial a caller ID log entry 50
- Dial a directory entry 43
- Dial a speed dial entry 45
- Dialing options 49
- Dial mode 24
- Directory 41

E

- Earbud installation 6
- Ear hook installation 7–9
- Edit a directory entry 44
- End a call 25
- Equalizer 28
- Expand your telephone system 68

F

- FCC, ACTA and IC regulations 84–85
- Find handset/headset 27
- Flash 28

H

- Handset display screen messages 64–65
- Handset icons 66
- Handset layout 12–14
- Handset lights 66
- Handset listening volume 25
- Head band installation 10–11
- Headset charging 5
- Headset layout 16
- Headset listening volume 25
- Headset ringer volume 18
- Home area code 23

I

- Icons 66
- Important safety instructions 81–82, 82
- Installation (battery) 3
- Installation (telephone base) 2
- Intercom 32

Index

J

Join a call 31

K

Key tone 22

L

LCD language 20

Lights 66, 67

Limited warranty 90–91

M

Maintenance 86

Make a call 25

Make an outgoing call during a PTT call 40

Memo 62

Memory match 48

Message alert tone 56

Message capacity 58

Message playback 59

Message recording time 56

Message window displays 62

Missed call indicator 49

Multiple handset use 31

Mute 26

N

New message indication 58

Number of rings 55

P

Parts checklist 1

Play the announcement 53

Precautions for users of implanted cardiac
pacemakers 82

Predial a call 25

PTT on or off 36

PTT to a single handset 37

PTT to multiple handsets 38

Push-to-talk (PTT) 36

R

Reassign a speed dial number 46

Record an announcement 52

Recording time 56

Redial 28–29

Registration 68

Remote access 63

Remote access code 55

Rename a handset 22

Review the caller ID log 49

Ringer tone 19

Ringer volume 18

S

Safety instructions 81–82, 82

Save a caller ID log entry to the
directory 50

Search the directory 43

Speakerphone 25

T

Technical specifications 92

Telephone base layout 15

Telephone base lights 66

Temporary ringer silencing 26

Temporary tone dialing 27

Time 19

V

Voicemail 21, 57

Volume 18, 25, 59, 60

W

Warranty 90–91

Website 24



Designed to fit your home.
And your life.

VTech Communications, Inc.

A member of THE VTECH GROUP OF COMPANIES.

VTech is a registered trademark of VTech Holdings Limited.

Specifications are subject to change without notice.

© 2014 VTech Communications, Inc.

All right reserved. 05/14. LS6475-X_CIB_V2.0

Document order number: 91-007077-020-100

