Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news.

LS6181 LS6181-13 LS6181-15 LS6181-16 LS6181-17

DECT 6.0 cordless telephone with BLUETOOTH® wireless technology

Bluetooth



vtech Abridged user's manual Congratulations

on purchasing your new VTech product. Before using this telephone, please read Important

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

Please refer to the online user's manual for a full set of installation and operation instructions at




Telephones identified with this logo have reduced noise and nterference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.




The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and nelp protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

Parts checklist

Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is

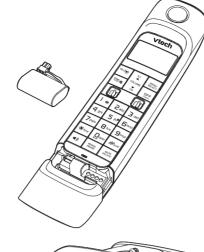

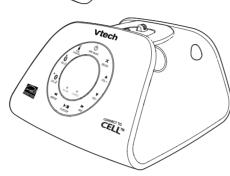





Install the battery

Install the battery as shown below.




· Use only the supplied battery. If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

Connect the telephone base

Charge the battery

 To purchase a replacement battery, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

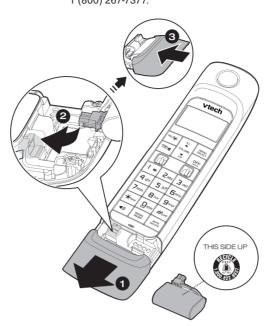

Connect and charge the battery



- · Use only the adaptor provided. Charge the supplied battery only in accordance with the instructions and limitations specified in this manual.
- Even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see Bluetooth), and use the cell line alone without plugging in a telephone line cord.
- If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSI filter (not included) between the telephone line cord and telephone wall jack Contact your DSL service provider for more

nough charge about 30 o be used for a Low battery and 1 flashes The screen The battery is To keep the harged. attery charged HANDSET X

place it in the elephone base or charger whe

Charge without

Before use

Check for a dial tone by pressing HOME . If you hear a dial tone, the installation is successful

The battery has

If you do not hear a dial tone:

- · Make sure the installation procedures described above are properly done
- your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information.

Communications Commission (FCC). Even so, this over only a certain distance - which can vary with the locations of the telephone base and handset the weather, and the layout of your home or office. When the handset is out of range, the handset

it may not ring, or if it does ring, the call may not connect well when you press HOME A or CELL (P). Move closer to the telephone base, then press the cell () to answer the call If the handset moves out of range during a

telephone conversation, there may be interference. To improve reception, move closer to the telephone

2 - Telephone base speakerphone

5 - Message windov

• Decrease the listening volume.

• Decrease the telephone base ringer volume.

· Skip to the next message.

Play messages

Stop plaving messages

11 - **≪**/REPEAT

Repeat a message.


• Press twice to play the previous message.

13 - **③**/CELL2 • Pair or replace cell phone to slot 2.

14 – **Ŋ**/CELL1

• Pair or replace cell phone to slot 1.

• Page all system handsets.

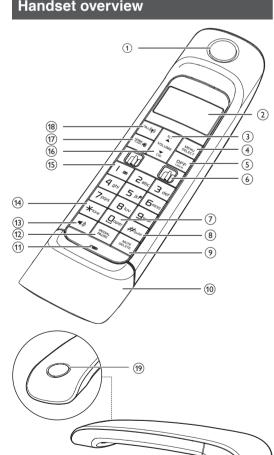

1 – Handset earpiece

2 - LCD display

3 – ₩/▲/VOLUME

Beview the directory when the phone is not in use.

- Scroll up while in a menu, or in the directory, caller ID log or redial list.
- Move the cursor to the right when entering numbers • Increase the listening volume during a call or
- message playback. 4 - MENU/SELECT

Show the menu.

- While in a menu, press to select an item or save an
- Hang up a call.
- Return to the previous menu or idle mode without
- 5 OFF/CANCEL
- making changes • Delete digits while predialing.

· Silence the handset ringer temporarily while the phone is ringing • Erase the missed call indicator while the handset is

6 - Charging pole 7 - 0/oper

Enter space character during text editing.

8 – **#**quiel • Show other dialing options when reviewing a caller ID log entry.

Set and turn on the quiet mode, or turn it off. 9 - MUTE/DELETE

- Mute the microphone during a call. • Silence the handset ringer temporarily while the
- phone is ringing • Delete the displayed entry while reviewing the directory, caller ID log or redial list.
- Delete digits while predialing. 10 - Battery compartment cover

11 - Microphone

12 - REDIAL/PAUSE

· Review the redial list Insert a dialing pause.

- Make a home call using the handset speakerphone.
- Answer a call using the handset speakerphone. · Switch between the speakerphone and the

- Switch to tone dialing temporarily during a call. • Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the
- Set or dial your voicemail number.

16 - CID/▼/VOLUME

- Review the caller ID log when the phone is not in · Scroll down while in a menu, or in the directory,
- caller ID log or redial list. • Move the cursor to the left when entering numbers
- Decrease the listening volume during a call or message playback.
- 17 HOME • Make or answer a home call.
- · Make or answer a cell call. · Answer an incoming cell call when you hear a call

• Answer an incoming home call when you hear a

19 - Handset speakerphone

call waiting alert.

Display icons overview

3			
	Ω	The battery icon flashes when the battery is low and needs charging.	
		The battery icon animates when the battery is charging.	
		The battery icon becomes solid when the battery is fully charged.	
	ECO	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.	
	∑ ≥	There are new voicemail received from your telephone service provider.	
	~	On when the home line is in use or there is an incoming home call. Flashes when there is an incoming home waiting call.	
	₿ ¹₂	There are Bluetooth devices connected on the cell devices list.	
	(9)	On when the cell line is in use or there is an incoming cell call. Flashes when there is an incoming cell waiting call.	
	NEW	There are new caller ID log entries.	
	ANS ON	The answering system is turned on.	
	Ø	The handset ringer is off.	
	MSG #	The message number currently playing and total number of new/old messages	

Bluetooth

To use a Bluetooth enabled cell phone with your LS6181, pair and connect your Bluetooth cell phone(s) with the telephone base. All LS6181 andsets can make or answer calls on the cell line





Bluetooth wireless technology operates within a short range (a maximum of approximately 30 feet). When you pair a Bluetooth cell phone to the telephone base, make sure your Bluetooth cell phone is close to the telephone base to maintain sufficient signal strength.

For optimal performance, keep your cell phone within 15 feet of the telephone base while using

Pair and connect your Bluetooth enabled

- 1. Choose a slot to pair the cell phone. Press and hold **3/CELL1** (or **3/CELL2**) on the telephone base for about four seconds until you hear two beeps. The **3/CELL1** light (or **3/CELL2** light)
- 2. Turn on the Bluetooth feature of your cell phone. Once your cell phone finds your VTech phone (VTech LS6181), press the appropriate key on your cell phone to continue the pairing process. · Your cell phone may prompt you to enter the
- PIN of the telephone base. The default PIN of the telephone base is **0000**. All cell phones that are connected to the telephone base are disconnected temporar

until the pairing process is completed. When the cell phone is connected to the telepho base, you hear two beeps. The **3/CELL1** light (or S/CELL2 light) on the telephone base turns on, and the status icon (or) displays on the

The pairing process may take up to one minu If the pairing process fails, repeat steps 1 and

Download contacts from your Bluetooth

- 1. Press MENU on the handset when the phone
- 2. Scroll to **Bluetooth** then press **SELECT**. 3. Scroll to Download dir then press SELECT. 4. Scroll to select the desired cell phone, then
 - the directory download. Certain cell phones do not support SIM card download. If this is the case, transfe the contacts from your SIM card to your cell phone memory first. Then download from your cell phone memory. For more information on how to transfer contacts fro

your SIM card to your cell phone memory.

 For Android and Blackberry cell phones, you may also download your cell phone directory to your LS6181 via the VTech Contact Share download your cell phone the VTech Contact Share application. Go to www.vtechphones.com/apps/contact_share

for application download.

see the user's manual of your cell phone.

Using the handset menu

- 1. Press MENU when the phone is not in use. 2. Press ▼ or ▲ until the screen displays the desired feature menu
- 3. Press SELECT.
- To return to the previous menu, press CANCEL. To return to idle mode, press and hold

Telephone settings

Default settings are indicated by asterisks (*).

cell phones that are connected to the phone base are disconnected temporarily the pairing process is completed.	LCD language	Set the handset display language.	English* Français
cell phone is connected to the telephone hear two beeps. The 3/CELL1 light LL2 light) on the telephone base turns he status icon 3 1 (or 3 2) displays on the	Voicemail #	Set the voicemail number for speed dialing.	Voicemail #
The pairing process may take up to one minute. It is the pairing process fails, repeat steps 1 and 2.	CIr voicemail	Turn off the voicemail indicators (see the note below).	Reset VM Icon?
ad contacts from your Bluetooth ne MENU on the handset when the phone is use. to Bluetooth then press SELECT.	Key tone	Set whether the handset beeps whenever a key is pressed.	Key tone:On* Key tone:Off
to Download dir then press SELECT. to select the desired cell phone, then SELECT. For certain cell phones, you may need to press a key on your cell phone to confirm the directory download.	Home area code	Set the home area code so that the caller ID log stores only seven digits for local telephone numbers.	Home area code
Certain cell phones do not support SIM card download. If this is the case, transfer the contacts from your SIM card to your cell phone memory first. Then download from your cell phone memory. For more information on how to transfer contacts from	Dial mode	Set the telephone to be touch-tone or pulse dialing.	Touch-tone* Pulse

Use the CIr voicemail feature when the telephone indicates there is new voicemail but there is none. For example, when you have accessed your voicemail messages while away from home. The CIr voicemail feature only voicemail messages. As long as you have new voicemail messages, vour telephone service provider continues to send the signal that turns

you may wish to set. Refer to Telephone settings n the online Complete user's manual for complete instructions on setting all telephone features.

The following are some of the telephone features

Once you have installed the battery, the handset

of continuous charging.

The battery has

no or very little

handset cannot

charge. The

be used.

Charge without

interruption

(at least 30

he screen

s blank, or

displays Put in

charger and

flashes.

LCD display indicates the battery status (see the

For best performance, keep the handset

Handset ringer volume You can adjust the handset ringer volume level, or

- turn the ringer off. 1. Press **MENU** when the handset is not in use
- 2. Scroll to Ringers and then press SELECT. 3. Scroll to choose Home volume or Cell volume
- Press ▼ or ▲ to sample each volume level, then press SELECT to save

When the ringer volume is set to Off, the handset still rings when you press /FIND HANDSET at the telephone base.

Telephone base ringer volume

then press **SELECT**.

Press **▲/VOL+** or **▼/VOL-** on the telephone base to adjust the ringer volume when the telephone base is not in use.

When you set the ringer volume to zero, the base ringer is off. The telephone base announces, "Base ringer is off.

You can choose from different ringer tones for each handset.

4. Press ▼ or ▲ to sample each ringer tone, then

- 1. Press MENU when the handset is not in use
- 2. Scroll to Ringers and then press SELECT. 3. Scroll to choose **Home ringtone** or **Cell** ringtone, then press SELECT.

press SELECT to save.

- If you turn off the ringer volume, you will not hear ringer tone samples.
- Auto answer When the auto answer feature turns on, the handset answers a call automatically whenever you pick it from the telephone base or a charger
- 1. Press MENU on the handset. 2. Use the dialing keys to enter 5463#.

handset returns to idle mode.

when there is an incoming call

3. Press SELECT to select Auto Answer. 4. Press ▼ or ▲ to choose Answer:Off or

5. Press **SELECT** to save your selection. The

Answer:On.

You can turn on the quiet mode for a period of time. During this period, all tones (except paging tone) are muted. When you turn on the quiet mode, the answering system turns on automatically.

2. Use the dialing keys (0-9) to enter the duration (hour), then press **SELECT** to save.

To turn off the quiet mode, press and hold #quiet on the handset when the phone is not

Set date and time If you subscribe to caller ID service, the day, month and time are set automatically with each incoming

- call. You can also set the date and time manually. 1. Press **MENU** on the handset when not in use. 2. Scroll to **Set date/time** and then press
- SELECT. 3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press SELECT.
- 4. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM.
- 5. Press **SELECT**.

Telephone operation

Make a home call Press HOME or ■ n, and

Make a cell call 1. Press CELL (P). Scroll to

select the desired cell

then dial the telephone

phone when necessary, then press **SELECT**. 2. Enter the telephone

4 ghi 5 jkl 7 pqrs 8 tuv 9 wxyz number and then press cell() to dial. *tone | Oper | #quiet While using the cell line, place your cell phone **(**) closer to the telephone

that there are no physical obstacles between

the telephone base and the cell phone, such as

I 🗷 2abc 3 def

REDIAL PAUSE

Answer a home/cell call

Press HOME
 (□), □) or any dialing key.

large furniture or thick walls.

hase and make sure

Pick up the handset from the telephone base when the auto answer feature is turned on.

End a home/cell call:

• Press OFF or put the handset back in the telephone base

During a call, press ♥ to switch between the

Volume

- but the other party cannot hear you. 1. During a call, press **MUTE**. The handset
- 2. Press MUTE again to resume the conversation. The handset displays Microphone on briefly.

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are already on a call

Press FLASH to put the current call on hold and take the new call

take the new call.

Call waiting on the cell line: Press ^{CELL((*))} to put the current call on hold and

between calls.

Temporary ringer silencing When the telephone is ringing, you can temporarily silence the telephone base/handset ringer without

To silence the handset ringer:

displays and Ringer muted displays briefly. To silence the telephone base ringer:

Press ▼/VOL- on the telephone base.

switch from pulse to touch-tone dialing temporarily

- 2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing

1 - Charging pole



Telephone base overview

It may be a wiring problem. If you have changed

3 - d/ANS ON/OFF

Press twice to delete all old messages

6 - ▲/VOL+

- Increase the listening volume. • Increase the telephone base ringer volume
- 7 CHARGE light

9 - ► /SKIP

10 - ▶/■/PLAY/STOP

12 - IN USE light

15 – ¶/FIND HANDSET

1. Press and hold #quiet when the handset is not Handset speakerphone

earpiece

• During a call, press **▲/VOLUME** or

▼/VOLUME.

handset speakerphone and the handset

The mute function allows you to hear the other party

Call waiting

Call waiting on the home line:

 Press FLASH at any time to switch back and forth between calls

Press ^{cell(¶)} at any time to switch back and forth

disconnecting the call. The next call rings normally at the preset volume

Press OFF or MUTE on the handset. A

Temporary tone dialing If you have pulse (rotary) service only, you can

1. During a call, press Tione on the handset.

mode after you end the call.

Operating range This cordless telephone operates with the maximum power allowed by the Federal handset and telephone base can communicate

displays Out of range or no pwr at base. If there is a call while the handset is out of range,


in the telephone base or charger when not The battery is fully charged after 11 hours

• Turn on or off the answering system. 4 - X/DELETE • Delete the playing message.

idle handsets

ring and display

** Paging **.

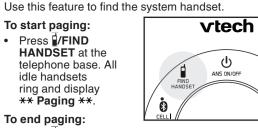

To end paging:

- Press **/FIND HANDSET** at the telephone base.
- Press HOME

 (♠), CELL(♠), OFF, ■) or any dialing key on the handset
- · Place the cordless handset in the telephone



Do not press and hold FIND HANDSET for more than four seconds. It may lead to handset deregistration.

Redial list

Fach handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry

To review and dial a number from the redial

- 1. Press **REDIAL** when the handset is not in use.
- 2. Press **▼**, **▲** or **REDIAL** repeatedly until the desired entry displays
- Press HOME
 [↑], CELL (
 [↑]) or
 [↑]) to dial.

To delete a redial entry: When the desired redial entry displays, press

DELETE. Join a call in progress

You can use two cordless handsets at a time on a home line call. You can buy additional expansion handsets (LS6002/LS6002-13/LS6002-15/ **LS6002-16/LS6002-17**) for this telephone base. You can register up to five handsets to the telephone base.

- When a handset is on a home line call, press HOME or ■ on another cordless handset to join the call • To exit the call, press **OFF** on the cordless
- handset or place it on the telephone base. The call continues until all handsets hang up.

Transfer a call

While on an outside call, you can transfer the call from one handset to another

- 1. During a call, press MENU.
- 2. Press ▼ or ▲ to scroll to Transfer, then press SELECT. When you have more than two handsets, use the dialing keys to enter a destination device number (1 to 5 for HANDSET 1 to HANDSET 5).
- 3. To answer the call on the destination handset. press $\overset{\mathsf{HOME}}{\longleftrightarrow}_{\mathsf{FLASH}}$, $\overset{\mathsf{cell}}{\longleftrightarrow}$, $\overset{\mathsf{e}}{\longleftrightarrow}$) or any dialing key.

Use the intercom feature for conversations between two cordless handsets

- 1. Press MENU on the handset when not in use.
- 2. Press ▼ or ▲ to scroll to Intercom, then press **SELECT**. When you have more than two handsets, use the dialing keys to enter a destination device number (1 to 5 for HANDSET 1 to HANDSET 5)
- 3. To answer the intercom call with the destination handset, press HOME ♠, ŒLL(♠), ◀)) or any dialing key.
- 4. To end the intercom call, press **OFF** or return the cordless handset to the telephone base.

Answer an incoming call during an intercom

If you receive an outside call during an intercom call, there is an alert tone.

Using the cordless handset:

- To answer a home call, press HOME . The intercom call ends automatically.
- To answer a cell call, press **OFF** to end the intercom call. The telephone continues to ring. Then press CELL (P).
- To end the intercom call without answering the outside call, press **OFF**. The intercom call ends and the telephone continues to ring

Directory

The phonebook directory can store up to 200 entries, which are shared by all handsets

To add a directory entry:

1. Enter the number (up to 30 digits) when the phone is not in use, then press **SELECT**. Then go to Step 3. -OR-

- When the phone is not in use, press **MENU** then scroll to Directory, and then press **SELECT** twice.
- 2. Use the dialing keys to enter the number (up to 30 digits). -OR-
- Copy a number from the redial list by pressing

cannot add and

connect my cell phone

to the telephone base.

REDIAL and then press **▼**, **▲** or **REDIAL** repeatedly to select a number. Press **SELECT** to copy the number.

- 3. Press **SELECT** to move on to enter the name. 4. Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.
- 5. Press SELECT to save While entering names and numbers, you can:
- · Press DELETE to backspace and erase a digit
- Press and hold DELETE to erase the entire
- Press ▼ or ▲ to move the cursor to the left or riaht. Press and hold PAUSE to insert a dialing pause
- (for entering numbers only). • Press **0** to add a space (for entering names

To review and dial a number from the directory: Entries are sorted alphabetically.

- 1. Press when the phone is not in use.
- 2. Scroll to browse through the directory, or use the
- dialing keys to start a name search 3. When the desired entry appears, press HOME A, cell(♠) or ♠)) to dial.

To edit a directory entry:

press SELECT.

1. When the desired entry displays, press SELECT.

2. Use the dialing keys to edit the number, then

3. Use the dialing keys to edit the name, then press SELECT.

When the desired entry displays, press

To delete a directory entry:

- DELETE. 2. When the handset displays Delete contact?,
- press **SELECT**. To delete all directory entries:
- 1. Press MENU when the phone is not in use.
- 2. Scroll to Directory and then press SELECT. 3. Scroll to **Del all conts** then press **SELECT** twice.

Speed dial

You can copy up to nine directory entries into the speed dial locations (0 and 2-9) so that you can dial these numbers via the home line more quickly

To assign a speed dial entry:

- 1. Press **MENU** when the phone is not in use. 2. Scroll to **Directory**, then press **SELECT**.
- 3. Scroll to **Speed dial**, then press **SELECT**.
- 4. Scroll to a desired speed dial location, then press SELECT. 5. Scroll to a desired directory entry, then press
- SELECT

To dial a speed dial entry:

Press and hold a dialing key (0 or 2-9) to dial the number stored in the corresponding

To delete a speed dial entry:

- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to **Directory**, then press **SELECT**. 3. Scroll to Speed dial, then press SELECT.
- 4. Scroll to a desired speed dial location, then press DELETE. The screen displays Clear SD **#X?** Press **SELECT**.

Caller ID

This product supports caller ID services provided by most telephone service providers. Depending on your service subscription, you may see the caller's name, number, date and time of calls that are sent by your telephone service provider after the first or second ring.

Caller ID log

The caller ID log stores up to 50 entries. If you answer a call before the caller ID information displays, it will not be saved in the caller ID log.

- The handset displays XX missed calls when you have incoming calls that have not been · If you want to erase the missed call indicator,
- press and hold CANCEL on the idle handset.

To review and dial a number in the caller ID log: 1. Press CID when the phone is not in use.

- 2. Scroll to browse through the caller ID log. When the desired entry appears:
- Press #quiet repeatedly to show different dialing options. • Press 1 repeatedly if you need to add or
- remove **1** in front of the telephone number. 3. Press HOME (↑) or (↑) to dial.

To save a caller ID log entry to the directory with the handset:

- 1. When the desired caller ID log entry displays, press SELECT. 2. Use the dialing keys to modify the number, if
- necessary. Then press **SELECT**. 3. Use the dialing keys to modify the name, if necessary. Then press **SELECT**.
- To delete a caller ID log entry with the handset: • When the desired caller ID log entry displays,

To delete all caller ID log entries with the

press **DELETE**.

The messages on the

answering system are

accidentally set my

LCD language to

ECO mode

English.

Spanish or French,

and I don't know how

to change it back to

incomplete.

1. Press MENU when the phone is not in use.

2. Scroll to Caller ID log and then press SELECT 3. Scroll to **Del all calls** then press **SELECT**

If a caller leaves a

very long message

part of it may be lost

when the answering

disconnects the call.

While the handset

is not in use, press

back to English.

This power conserving technology reduces power

consumption for optimal battery performance. The

ECO mode activates automatically whenever the

handset is synchronized with the telephone base.

Your cordless telephone contains sophisticated

electronic parts, so it must be treated with care.

Place the handset down gently. Save the original

packing materials to protect your telephone if you

Your telephone can be damaged if it gets wet. Do

it with wet hands. Do not install the telephone base

own safety, take caution when using electrical

General product care

Taking care of your telephone

near a sink, bathtub or shower.

appliances during storms.

Cleaning your telephone

Avoid rough treatment

ever need to ship it.

Electrical storms

Avoid water

MENU and then enter

★364# to change the

handset LCD language

twice.

About the built-in answering system and voicemail service

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fee may apply).

The main differences between them are as follows:

Category	answering system	telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.
Method to retrieve messages	When you received new messages, the handset displays XX new messages, and the message window on the telephone base flashes.	When you received new messages, the handset displays and New voicemail.
	To retrieve messages, usually there are two ways: • Press ►/■ on the telephone base; or • Access remotely with an access code.	To retrieve messages, you need an access number and/ or a passcode provided by your telephone service provider.

Set your built-in answering system

Default settings are indicated by asterisks (*).

Call screening	Set whether you hear the callers on the base while they are leaving messages to you.	Screening: On* Screening: Off
# of rings	Set the number of times the telephone rings before the answering system answers.	6; 5; 4; 3*; 2; Toll saver
Remote code	Set a two-digit security code to access the answering system remotely from any touch-tone telephone.	19*
Msg alert tone	Set whether the telephone beeps every 10 seconds to alert you of new messages.	Tone: Off* Tone: On
Recording time	Set the recording time for each incoming message.	3 minutes* 2 minutes 1 minute

You can set the answering system to answer an incoming call after two, three, four, five or six rings: or toll saver. If you choose toll saver, the answering system answers a call after two rings when you have new messages, or after four rings when you have no new messages 1. Press MENU on the handset when the phone is

- not in use.
- 2. Scroll to **Answering sys** and then press SELECT.
- 3. Scroll to Ans sys setup and then press SELECT 4. Scroll to # of rings and then press SELECT.
- 5. Press **▼** or **▲** to choose **6**, **5**, **4**, **3**, **2** or **Toll** saver and then press SELECT

Record your own announcement

You can use the preset announcement to answe calls, or replace it with your own recorded announcement. The announcement can be up to 90 seconds in length

- 1. Press **MENU** on the handset when the phone is
- 2. Scroll to Answering sys then press SELECT
- 3. The handset announces, "To play, press 2. To record, press 7." Then press 7 to record.
- 4. The handset announces. "Record after the tone. Press 5 when you are done." After the tone, speak towards the handset microphone.
- 5. Press 5 when done.

not in use

Use your built-in answering system

Turn the answering system on or off The answering system must be turned on to

- answer and record messages 1 Press MFNU when the handset is not in use
- 2. Scroll to **Answering sys** and then press SELECT. 3. Scroll to **Answer on/off** and then press
- SELECT. 4. Press ▼ or ▲ to choose Answer: On or
- Answer: Off and then press SELECT.

Message playback at the telephone base

When you received a message on your answering system, the message window on the telephone base flashes. Your handset displays XX new messages. To retrieve, press ▶/■ when the phone It can record up to 59 messages, depending

on the length of each message. Each message

can be up to three minutes in length. The total

recording time is approximately 14 minutes.

Options during playback:

- · Press VOL+ or VOL- to adjust the speaker
- Press ►/SKIP to skip to the next message Press **≪REPEAT** to repeat the playing
- message. Press **WREPEAT** twice to listen to the previous message
- Press X/DELETE to delete the playing message. The system advances to the next message
- Press ►/■/STOP to stop.

Call intercept

If you want to talk to the person whose message is being recorded, press HOME (♠) or ■)

Use the built-in answering system and voicemail service

You can use your answering system and voicemail service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact your telephone service provider.

If you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message

Set your answering system to answer calls at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, set your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

Retrieve voicemail from telephone service

Retrieve voicemail

When you received a voicemail, the handset displays M and New voicemail. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.


Expand your telephone system

Add and register a handset You can add new handsets (LS6002/LS6002-13/ LS6002-15/LS6002-16/LS6002-17, purchased seperately) to your telephone system. Your LS6181

Register each handset with the telephone base before use. After charged, each expansion handset alternately displays To register HS... and ...see

Charge the new handset without interruption for

telephone system supports a maximum of five

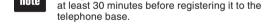

To register a handset: 1. Press and hold I/FIND HANDSET at the elephone base for about four seconds until the IN USE light turns on.



2. Press #quiet on the cordless handset. Then it shows Registering...

The cordless handset show **Registered** and you hear a beep when the registration process completes. The registration process takes about 60 seconds to complete.

Deregister handsets To replace a handset or reassign the designated handset number of a registered handset, you must

handset individually.

To deregister all handsets: Press and hold FIND HANDSET at the telephone base for about 10 seconds until the IN USE light flashes

deregister all handsets, and then register each

2. Immediately press **/FIND HANDSET** again. You hear a confirmation tone

All handsets alternately show To register HS... and ...see manual when the deregistration process completes. The deregistration process takes about 10 seconds to complete.

Frequently asked questions

Below are the questions most frequently asked about the cordless telephone with bluetooth wireless technology. If you cannot find the answer to your question, contact customer service by calling 1 (800) 595-9511.

> Bluetooth function of your cell phone is turned on, and is not Bluetooth device. To connect your cell phone, make sure on the device list.

your cell phone for more information Can the LS6181 help the poor cell phone home, the LS6181 reception in my house? reception, you can cell line. In order for this to work, the

visiting our website at www.vtechphones.com or

Make sure the connected to any other that your cell phone is connected and active

For some cell phones. you must authorize VTech LS6181 device n vour cell phone's Bluetooth feature. See the user's manual of If your cell phone has poor reception in your

cannot improve the reception. However, if there is a location in vour house with better leave your cell phone at that location while you use the LS6181

cell phone. My telephone does not

work at all.

telephone base must be within 30 feet of the Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after

Make sure you have cellular coverage.

The display shows **No** line. I cannot hear the dial tone

> If there is no dial tone on that other telephone either, then the telephone line cord may be defective Try installing a new telephone line cord. If changing the telephone line cord does not help, the wal iack (or the wiring to this wall jack) may be defective. Contact

Disconnect the

telephone line cord

from your telephone

and connect it to

another telephone

vour telephone service provider. You may be using a new cable or VolP service, the existing telephone jacks in vou home may no longer work. Contact your service provider for

solutions. The answering system Make sure the does not record answering system is on. When the answering system is on, ANS ON should display on the handset and the telephone

> When the answering machine memory is full, it does not record new messages until some old messages are deleted. If you subscribe to voicemail service,

change the numbe of rings so that your answering system answers before your voicemail service answers. To determin how many rings activate your voicemai service, contact your telephone service

system disconnects the call after the preset recording time. If the memory on the answering system becomes full during a message, the answering system stops recording and

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially **Defective Product")?**

or replace at VTech's option, without charge a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar to you in working condition. You should expect the repair or replacement to take approximately 30 days.

The limited warranty period for the Product extends

accident, shipping or other physical damage, Electrical storms can sometimes cause power improper installation, abnormal operation or surges harmful to electronic equipment. For your

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

Limited warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase

("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

During the limited warranty period, VTech's authorized service representative will repair design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product. at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products

How long is the limited warranty period?

for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is not use the handset outdoors in the rain, or handle

What is not covered by this limited warranty?

1. Product that has been subjected to misuse,

handling, neglect, inundation, fire, water or other liquid intrusion; 2. Product that has been damaged due to repair, alteration or modification by anyone other than an

This limited warranty does not cover:

3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; 4. Product to the extent that the problem is caused by use with non-VTech accessories;

authorized service representative of VTech:

serial number plates or electronic serial numbers have been removed, altered or rendered illegible: 6. Product purchased, used, serviced, or shipped

for repair from outside the United States of

5. Product whose warranty/quality stickers, product

America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes) 7. Product returned without a valid proof of purchase (see item 2 below); or 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of

systems outside the unit.

How do you get warranty service?

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www. vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review the

and features may save you a service call.

user's manual - a check of the Product's controls

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service? 1. Return the entire original package and

address, and telephone number.

malfunction or difficulty; and 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing

contents including the Product to the VTech

service location along with a description of the

Other limitations This warranty is the complete and exclusive agreement between you and VTech. It supersedes

all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may

not apply to you. Please retain your original sales receipt as proof of purchase.

Transmit frequency	DECT frequency: 1921.536-1928.448 MHz
	Bluetooth frequency: 2402.000-2480.000 MHz
Channels	DECT channel: 5 Bluetooth channel: 79
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Handset: 2.4V 400mAh, Ni-MH battery pack Telephone base: 6V DC @ 450mA
Memory	Directory: 200 memory locations; up to 30 digits and 15 characters Caller ID log: 50 memory locations;


Crystal controlled PLL synthesizer

up to 24 digits and 15 characters

Technical specifications

Frequency

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective

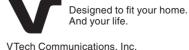

A member of THE VTECH GROUP OF COMPANIES. VTech is a registered trademark of VTech Holdings Limited. Specifications are subject to change without notice. © 2014 VTech Communications, Inc All rights reserved. 05/14. LS6181-X_ACIB_V4.0 Document order number: 91-007331-020-100