






Quick start guide

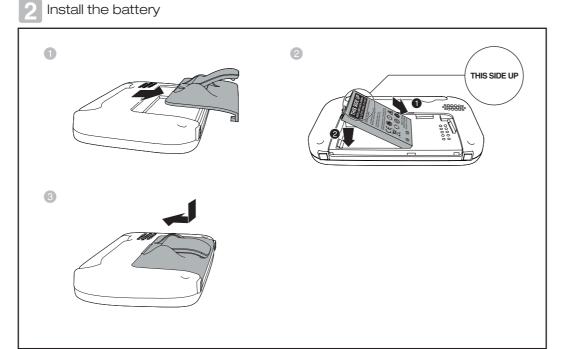


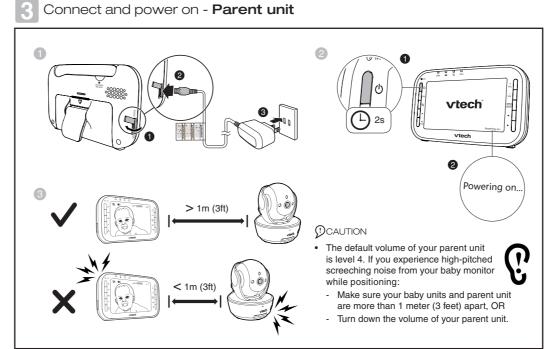


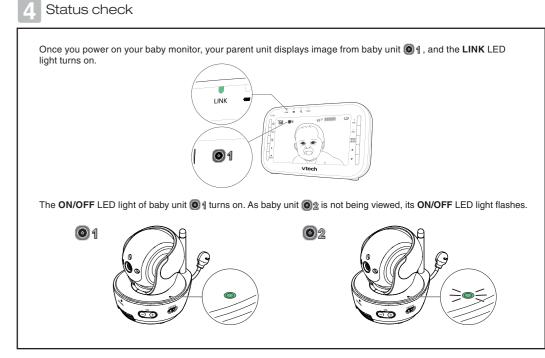


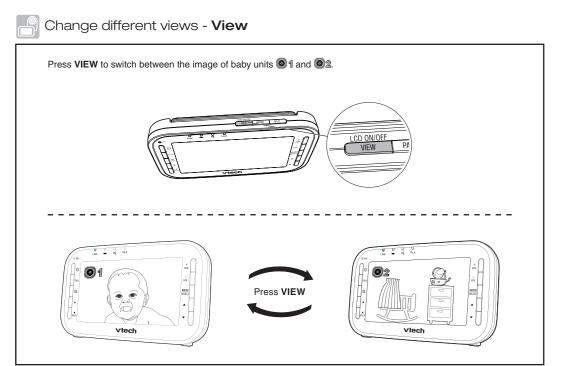


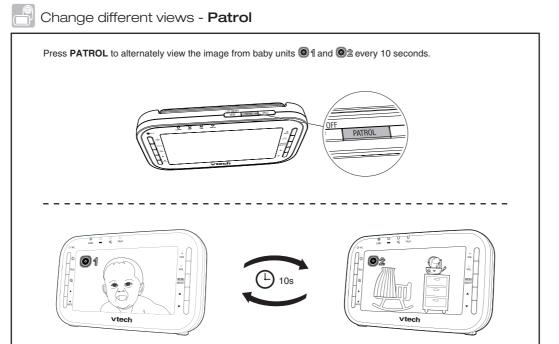


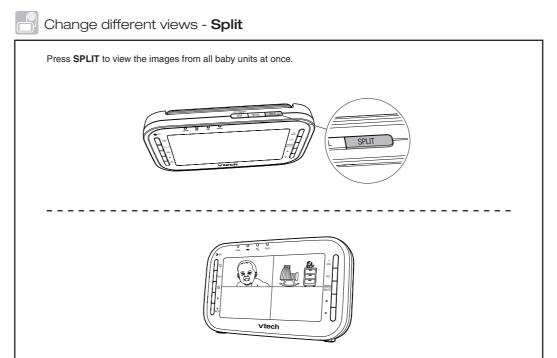

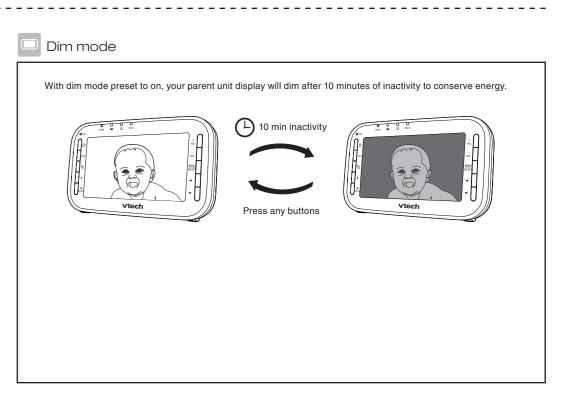

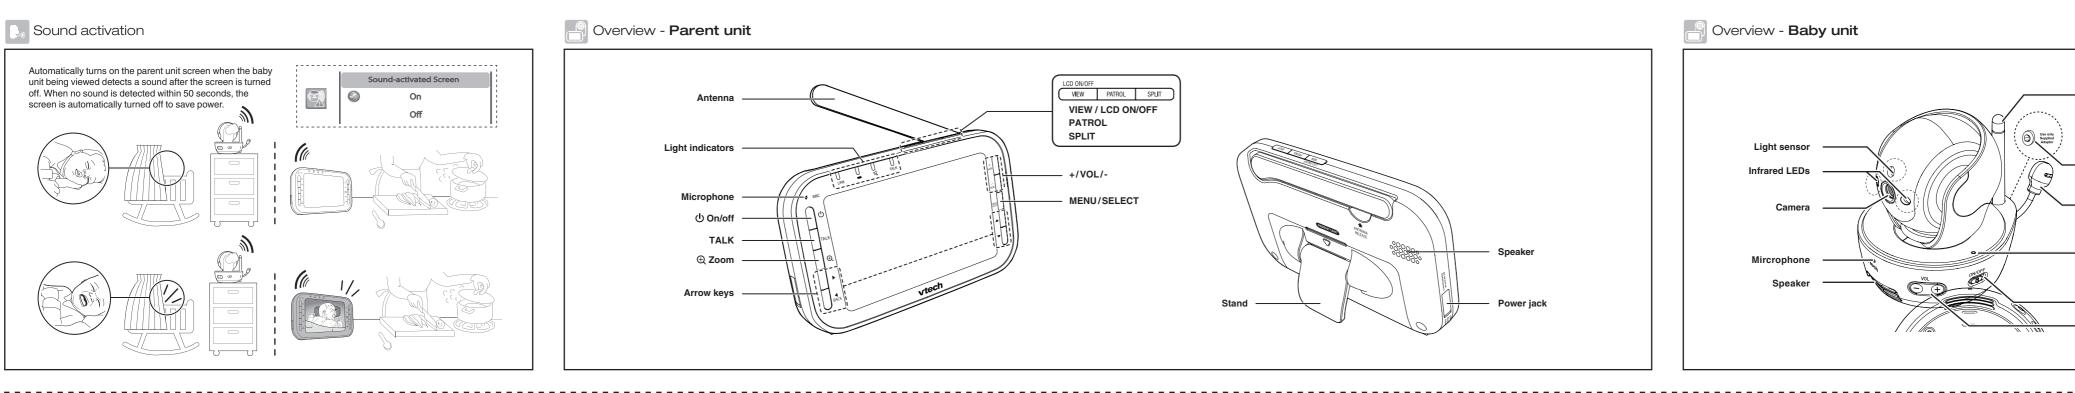

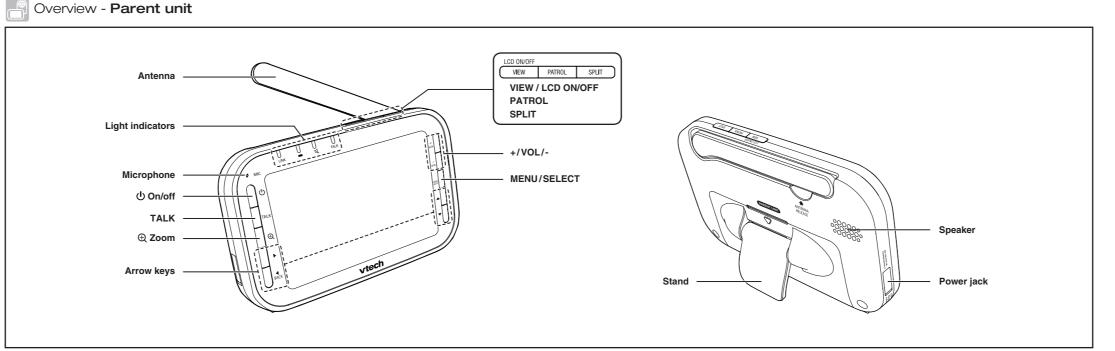


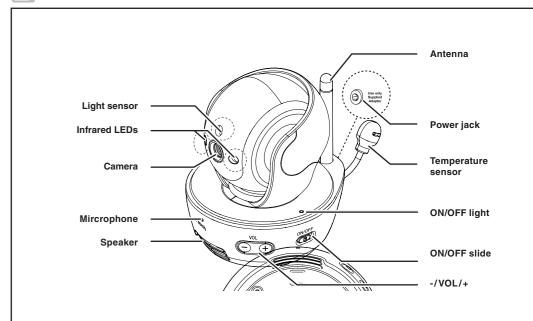



Adjust speaker volume Press +/VOL/- to adjust your parent unit speaker


volume. It determines the volume of sound transmitted from your baby units.

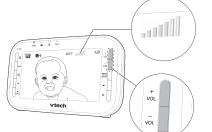

Press and hold \blacktriangle , \blacktriangledown , \blacktriangleleft or \blacktriangleright to move the camera.




Press \oplus to zoom in or out.

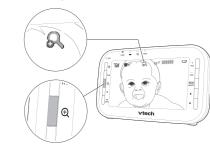



Pan, tilt, zoom Talk to your baby unit



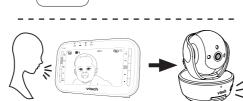

Press and hold TALK and speak to your parent unit. Your voice is transmitted to the baby unit.

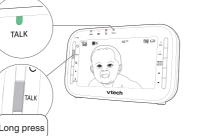

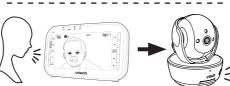

Turn off the screen

Press and hold LCD ON/OFF to switch off the screen. You can still hear sound from the selected baby unit.



Use the menu


Press MENU/SELECT to enter the menu, choose a menu item, or save a setting While in the menu:

- Press ▲ or ▼ to scroll up or down.
- Press ► to select an item.
- Press BACK to return to the main menu or idle screen



Turn off the parent unit

Press and hold \odot to power off your parent unit.

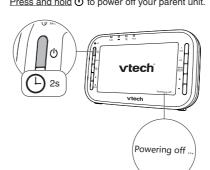

Adjust speaker volume

Press +/VOL/- to adjust your baby unit speaker volume. It determines the talkback volume transmitted from your parent unit.

Basic operation - Baby unit

Overview - Baby unit




Slide the **ON/OFF** switch to **OFF** to power off

Turn off the baby unit

your baby unit.



Night vision

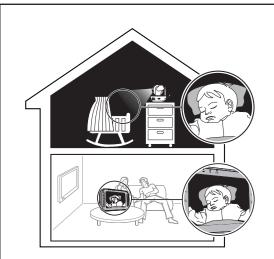


The baby unit has infrared LEDs that allow you to see your baby at night or in a dark room. When the baby unit detects low light levels, the infrared LEDs turn on automatically. The images from this baby unit is in black and white, and J appears on screen.

It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark

When the infrared LEDs are on, the image is in black and white. This is normal due to external light sources.

Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle, or place the baby unit at a higher level to preven

Mount the baby monitor (optional)

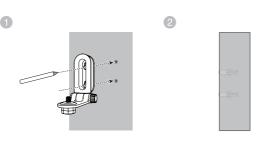

 Check for reception strength and go to step 3. amera angle before drilling the holes.

Place the wall mount bracket on a If you drill the holes into an object wall and then use a pencil to mark other than a stud, insert the wall the top and the bottom holes as anchors into the holes. Tap gently shown Remove the wall mount on the ends with a hammer until bracket and drill two holes in the the wall anchors are flush with wall (7/32 inch drill bit). the wall.




Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.




Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.



Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

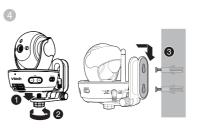

Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.

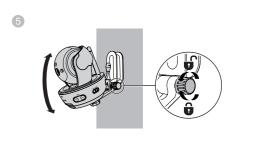

The default angle of the wall mount bracket is 90 degrees. You can maximize your baby unit's viewing angles by tilting the wall mount bracket.

Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.