



Press any buttons



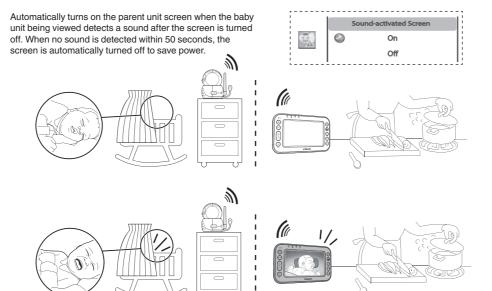



- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment.
- When the infrared LEDs are on, the image is in black and white. This is normal due to external light sources.
- **S**TIF
- Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle, or place the baby unit at a higher level to prevent glare and blurry displa

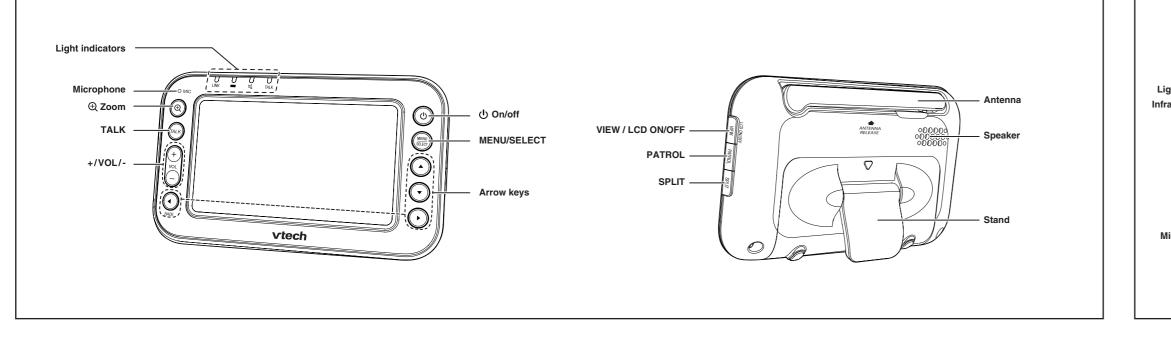

Basic operation - Parent unit

Adjust speaker volume

Turn off the screen

Press and hold LCD ON/OFF to turn off the screen.

You can still hear sound from the selected baby unit.

(b) 2s

Press +/VOL/- to adjust your parent unit speaker volume. It determines the volume of sound transmitted from your baby unit.



Pan, tilt, zoom

Use the menu

idle screen

11 O:

a menu item, or save a setting. While in the menu:

Press ▶ to select an item.

Press ▲ or ▼ to scroll up or down.

Low Battery Tone

No Link Alert

ound alert in split-viev

Press MENU/SELECT to enter the menu, choose

• Press **< BACK** to return to the main menu or

MENU SELECT

<u>Press and hold</u> \blacktriangle , \bigtriangledown , \triangleleft or \triangleright to move the camera.



Press 🕀 to zoom in or out.

Turn off the parent unit

 
vtech

Press and hold \underline{O} to power off your parent unit.

0


O

(D 2s




Talk to your baby unit

 $\underline{\mbox{Press and hold}}$ $\underline{\mbox{TALK}}$ and speak to your parent unit. Your voice is transmitted to the baby unit.

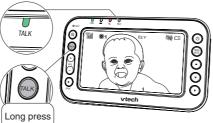



Mount the baby monitor (optional)

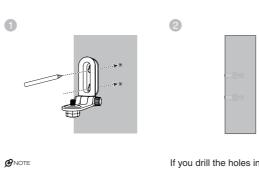

 Check for reception strength and mera angle before drilling the holes

 
Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).

If you drill the holes into a stud, go to step 3. -OR

If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.



 
















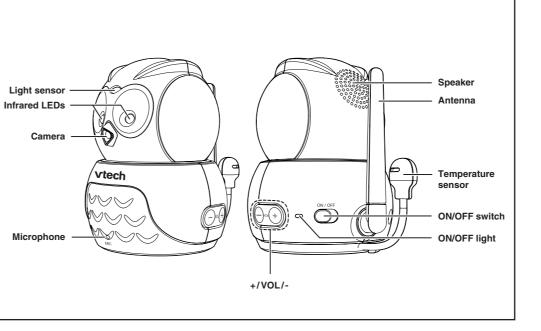

Basic operation - Baby unit


Adjust speaker volume

Press +/VOL/- to adjust your baby unit speaker volume. It determines the talkback volume transmitted from your parent unit.

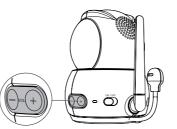


Turn off the baby unit

Slide the ON/OFF switch to the right to power off your baby unit.

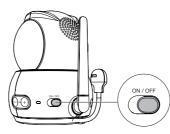

You can view from different baby units if you have more than one baby units in your system (VM314 purchased separately).

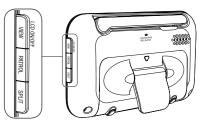

Press **VIEW** to switch between the images of the baby units.



Press **PATROL** to alternately view the image from the baby units every 10 seconds.



Press SPLIT to view the images from all baby units at once.

