

Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

BC8312

Storytelling Soother Wyatt the Whale



vtech®

User's manual


Congratulations

on purchasing your new VTech product. Before using this product, please read **Important safety instructions**.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.


What's in the box

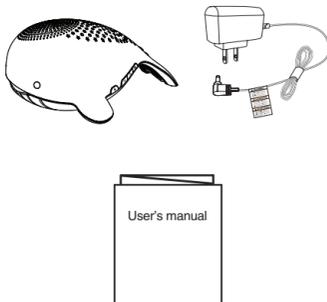

Connect the soother

NOTES

- Use only the power adapter supplied with this product.
- Make sure the electrical outlet is not controlled by a wall switch.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if they are plugged into a ceiling, under-the-table or cabinet outlet.
- Make sure the soother and the power adapter cord are out of reach of children.

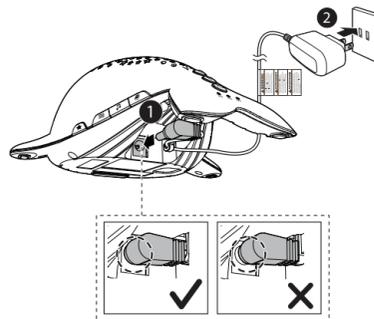


Position the soother


CAUTION

- Keep the soother out of the reach of your baby. Never place the soother inside the baby's crib or playpen.

Place the soother more than 1 meter (3 feet) away from your baby.

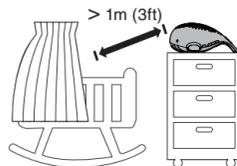

Overview

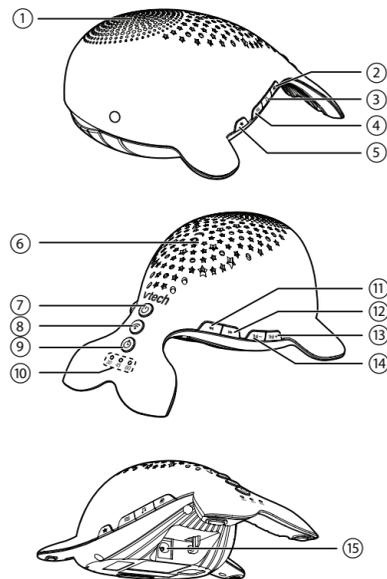

1	Speaker
2	Story • Press to play or stop the story.
3	Lullaby • Press to play or stop the lullaby.
4	Soothing sound • Press to play or stop the soothing sound.
5	Glow-on-ceiling night light on/off • Press to turn on or off the glow-on-ceiling night light.
6	Glow-on-ceiling night light

7	Power on/off • Press to power on or off the soother.
8	Wi-Fi • Press to turn on or off the soother's Wi-Fi network (for using with the Wyatt the Whale Storytelling Soother app).
9	Auto-off timer • Press repeatedly to turn on and select an auto-off timer while playing story, lullaby or soothing sound. It will automatically stop the tracks after playing for 30/45/60 minutes.
10	Auto-off timer LED lights • On when the respective duration is selected. • Off when the auto timer is turned off.
11	Previous track • While playing a story, lullaby or soothing sound, press to play the previous track.
12	Next track • While playing a story, lullaby or soothing sound, press to play the next track.
13	Vol - • Press to decrease the speaker volume.
14	Vol + • Press to increase the speaker volume.
15	Power jack

Use the soother

Power on or off the soother

- Press **Power on/off** to power on the soother.
- Press **Power on/off** to power off the soother.

NOTE

- Make sure the soother is on before using other features.

Play the story

- Press **Story** to start playing stories.
- Press **Next track** to skip to the next story.
- Press **Previous track** to play the previous story.
- While a story is playing, press **Stop** to stop the story.

NOTES

- The soother will play the stories continuously unless you manually stop the stories or turn on the auto-off timer feature.
- When a story ends, the soother automatically skips to the next story. After the soother plays the last story in the story list, it restarts playing from the first story again.

Play the lullaby

- Press **Lullaby** to start playing lullabies.
- Press **Next track** to skip to the next lullaby.
- Press **Previous track** to play the previous lullaby.
- While a lullaby is playing, press **Stop** to stop the lullaby.

NOTES

- The soother will play the lullabies continuously unless you manually stop the lullabies or turn on the auto-off timer feature.
- When a lullaby ends, the soother automatically skips to the next lullaby. After the soother plays the last lullaby in the lullaby list, it restarts playing from the first lullaby again.

Play the soothing sound

- Press **Soothing sound** to start playing soothing sounds.
- Press **Next track** to play the next soothing sound.
- Press **Previous track** to play the previous soothing sound.
- While a soothing sound is playing, press **Stop** to stop the soothing sound.

NOTES

- The soother will play the soothing sounds continuously unless you manually stop the soothing sounds or turn on the auto-off timer feature.
- The soother will repeat the same soothing sound again and again unless you skip to the other soothing sounds.

Adjust the speaker volume

- Press **Vol-** or **Vol+** at any time.

NOTE

- The soother beeps to notify you when the speaker volume is already at the highest or lowest setting while adjusting.

Set the auto-off timer

While the soother is playing story, lullaby or soothing sound, the auto-off timer feature helps you automatically stop the story, lullaby or soothing sound after playing for 30/45/60 minutes.

- While a story, lullaby or soothing sound is playing, press **Auto-off timer** repeatedly to set the auto-off timer to **30**, **45** or **60** minutes. The respective auto-off timer LED light of the selected duration will turn on. The soother starts counting down 30/45/60 minutes.

After 30/45/60 minutes, the soother will automatically stop any story, lullaby or soothing sound. The auto-off timer feature and the auto-off timer LED lights will turn off.

NOTES

- You can only turn on the auto-off timer feature when the soother is playing story, lullaby or soothing sound.
- The auto-off timer feature will not power off the soother or turn off the glow-on-ceiling night light after the countdown.
- You can press **Auto-off timer** again turn off the timer feature during the countdown.
- If you manually stop the story, lullaby or soothing sound while the auto-off timer is counting down, the auto-off timer will turn off.

Turn on or off the glow-on-ceiling night light

- While the soother is on, press **Glow-on-ceiling night light** to turn on the glow-on-ceiling night light.
- Press **Glow-on-ceiling night light** repeatedly to change the color of the glow-on-ceiling night light, or to turn it off.

NOTE

- The glow-on-ceiling nightlight will turn off automatically after 60 minutes.

Turn on or off the soother's Wi-Fi network (for app usage)

You can turn on the soother's Wi-Fi network for using the soother with the **Wyatt the Whale Storytelling Soother** mobile app.

- Press **Wi-Fi** to turn on the Wi-Fi network. The **Wi-Fi** light turns on.
- Press **Wi-Fi** again to turn off the Wi-Fi network. The **Wi-Fi** light turns off.

NOTES

- Turning on the soother's Wi-Fi network will stop all story, lullaby and soothing sound from playing. Make sure you turn off the soother's Wi-Fi network before playing any sounds.
- The soother's Wi-Fi network will be automatically off after 30 minutes if there is no data transfer.

For more information about the app, see **About Wyatt the Whale Storytelling Soother app**.

About Wyatt the Whale Storytelling Soother app

To enhance your experience on using the soother, you can use your BC8312 storytelling soother with the free, compatible mobile app.

Main features of the app:



- **My Library** stores extra free stories, lullabies and soothing sounds exclusive to the app. You can update your soother using the app and play these additional tracks on your soother.
- **Record Stories** allows you to record your own stories and messages. You can play these recordings on your soother.

NOTE

- Make sure your mobile device meets the minimum requirement for the mobile app:
 - Android® 4.3 or later; and
 - iOS 8.1 or later.

Install the app on your mobile device

1. Scan the QR codes below, or search "Wyatt the Whale" in the Google Play® store or App store.



Android



iOS

2. Download and install the "Wyatt the Whale Storytelling Soother" app.

Connect your mobile device to the soother

To access all features of the app, you need to connect your mobile device to the soother's Wi-Fi network first.

- If it is the first time you launch the app, the app prompts you to follow the instructions shown on screen to connect your mobile device to the soother's Wi-Fi network.
- If you have launched the app before:
 1. On the app home page, tap **Settings**.
 2. Select **Connect to soother**.
 3. Follow the instructions shown on screen to connect your mobile device to the soother's Wi-Fi network.

NOTES

- The soother's Wi-Fi network is displayed as **Wyatt Whale Soother_XXXX** on the Wi-Fi list (XXXX are four random characters). The default Wi-Fi password is **SStoryteller** (case-sensitive).
- Up to three mobile devices can be connected to the soother's Wi-Fi network. Only one of the mobile devices can use the **My Library** feature at a time.

Access the app manual

For all instructions and troubleshooting on using the app, access the app manual and frequently asked questions in the app.

1. On the app home page, tap **Settings**.
2. Select **App Manual** or **FAQ** to find the desired information.

General product care

To keep this soother working well and looking good, follow these guidelines:

- Avoid putting the soother near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- Avoid dropping the soother or treating it roughly.
- DO NOT expose the soother to direct sunlight or moisture.
- DO NOT use the soother in the rain, or handle it with wet hands.
- Clean with a soft cloth.
- DO NOT immerse the soother in water and do not clean it under the tap.
- DO NOT use cleaning spray or liquid cleaners.
- Make sure the soother is dry before you connect it to the any power sources.

Frequently asked questions

Below are the questions most frequently asked about the soother. If you cannot find the answer to your question, visit our [website at **www.vtechphones.com**](#), or contact **1 (800) 595-9511** for customer service. In Canada, visit our website at [www.vtechcanada.com](#) or call **1 (800) 267-7377**.

The soother does not play sounds.	The soother is not turned on. <p>Make sure the power adapter is securely plugged into the soother and electrical outlet. Press ⏻ to power on the soother.</p> <p>You may have turned on the soother’s Wi-Fi network. Make sure the soother’s Wi-Fi network is off before you play any sounds. The 📶 light should be off.</p>
The glow-on-ceiling night light does not turn on.	The soother is not turned on. <p>Make sure the power adapter is securely plugged into the soother and electrical outlet. Press ⏻ to power on the soother.</p>
When I press ⏻ to turn on the auto-off timer, the soother beeps.	The auto-off timer feature is not turned on. <p>Make sure you press ⏻ when the soother is playing a story, lullaby or soothing sound.</p>

Important safety instructions

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Follow all warnings and instructions marked on the product.
- Adult setup is required.
- Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
- Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Power adapter: Input: 100-120V AC 200mA 60Hz; Output: 6V DC 600mA
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
- Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
- Do not overload wall outlets or use an extension cord.
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
- Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access

doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.

- Periodically examine all components for damage.
- Children should be supervised to ensure that they do not play with the product.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

Cautions

- Use and store the product at a temperature between 32°F and 104°F.
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
- Make sure the product and the adapter cord are always out of reach of the baby, at least 3 feet away from the baby or crib, to avoid a possible strangulation hazard.
- Never place the product inside the baby’s crib or playpen. Never cover the product with anything such as a towel or a blanket.
- Other electronic products may cause interference with the product. Try installing the product as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

Precautions for users of implanted cardiac pacemakers
Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR’s evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user’s manual, the product is safe to be used based on scientific evidence available today.

FCC and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The soother shall be installed and used such that parts of all persons’ body are maintained at a distance of approximately 8 in (20 cm) or more.

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

This product meets the applicable Industry Canada technical specifications.

RF radiation exposure statement

The soother complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The soother should be installed and operated with a minimum distance of 8 in (20 cm) between the soother and all persons’ body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada’s Health Code 6 for Exposure of Humans to RF Fields.

For cETL compliance only

Mesures de sécurité importantes

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d’incendie, d’électrocution et de blessures corporelles, dont ceux qui suivent :

- Observez toutes les instructions et mises en garde inscrites sur l’appareil.
- L’installation par un adulte est requise.
- N’utilisez pas cet appareil près de l’eau ni de toute autre source d’humidité, par exemple, près d’une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d’une piscine, dans un soussol humide ou une douche.
- N’utilisez que les adaptateurs inclus avec ce produit. L’utilisation d’un adaptateur dont la polarité ou la tension serait inadéquate risque d’endommager sérieusement le produit et mettre votre sécurité en péril. Adaptateur : Entrée : 100-120V CA 200mA 60Hz; Sortie : 6 V CC 600mA
- Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d’assurer une accessibilité sécuritaire à la prise de courant.
- Lorsqu’ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la verticale ou au plancher. Les brochés n’ont pas été conçues pour supporter le poids du bloc

Technical specifications

Frequency	2412 - 2462 MHz
Channels	11
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Power adapter: <p>Input: 100-120V AC 200mA 60Hz; Output: 6V DC 600mA</p>

Credits:

The *Background Noise* sound file was created by Caroline Ford, and is used under the Creative Commons license.

The *Stream Noise* sound file was created by Caroline Ford, and is used under the Creative Commons license.

The *Crickets At Night* sound file was created by Mike Koenig, and is used under the Creative Commons license.

The *20121230_vacuum_cleaner.working.01.wav* sound file was created by dobroide, and is used under the Creative Commons license.

The *Heartbeat 5sec Int* sound file was created by Benboncan, and is used under the Creative Commons license.

The *junction_night_traffic.wav* sound file was created by ivolipa, and is used under the Creative Commons license.

The *SHHHH SHHH Shush sound* sound file was created by JohnsonBrandEditing, and is used under the Creative Commons license.

The *Washing Machine* sound file was created by nebulosusflyn, and is used under the Creative Commons license.

The *Hairdryer.wav* sound file was created by ryanharding95, and is used under the Creative Commons license.

The *shower.mp3* sound file was created by geodylabs, and is used under the Creative Commons license.

The *Steady Rain.wav* sound file was created by pulswelle, and is used under the Creative Commons license.

The *In Car Driving.aif* sound file was created by RutgerMuller, and is used under the Creative Commons license.

The *fetal_doppler_stethoscope.wav* sound file was created by wjoojoo, and is used under the Creative Commons license.

The *HairDryer.wav* sound file was created by jakobhandersen, and is used under the Creative Commons license.

The *Fan.wav* sound file was created by Q.K., and is used under the Creative Commons license.

The *Waves.wav* sound file was created by juskidink, and is used under the Creative Commons license.

The *birds3.aif* sound file was created by man, and is used under the Creative Commons license.

The *BIRDS* sound file was created by Julien Nicolas, and is used under the Creative Commons license.

d’alimentation et le maintenir en place si celui-ci est branché dans une prise au plafond, sous une table ou dans un meuble.

- Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N’utilisez pas de nettoyeurs en aérosols. Utilisez un chiffon humide pour le nettoyer.
- Ne coupez pas les cordons d’alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel.
- Ne laissez aucun objet reposer ni appuyer sur le cordon d’alimentation. N’installez pas cet appareil dans un endroit où l’on risque d’écraser le cordon d’alimentation ou de le piétiner.
- Ne faites fonctionner cet appareil qu’avec le type d’alimentation indiqué sur l’étiquette. Si vous ne connaissez pas le type d’alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d’électricité.
- Ne surchargez pas les prises de courant murales ni les rallonges électriques.
- Ne placez pas cet appareil sur un chariot, meuble, trépied, support de montage ni table chancelants.
- Les trous et ouvertures du boîtier, situés à l’arrière de l’appareil ou sous celui-ci, servent à aérer l’appareil. Pour l’empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n’empêchez pas l’aération adéquate de l’appareil en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d’une source de chaleur ou d’un calorifère. De plus, ne placez pas l’appareil dans un endroit avant de vous assurer qu’il y ait une bonne circulation d’air.
- N’enfoncez jamais d’objets à travers les ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits qui peuvent dégénérer en incendies ou en risques d’électrocution. Ne renversez jamais de liquide dans ce produit.
- Afin de réduire les risques d’électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L’ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l’exception de l’accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d’autres dangers. Un remontage incorrect peut par la suite présenter des risques d’électrocution.
- Examinez les composantes afin de vérifier si celles-ci ne sont pas endommagées.
- Les enfants devraient être supervisés afin de vous assurer qu’ils ne jouent pas avec l’appareil.
- Le produit n’est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d’expérience et de connaissances, à moins qu’on leur ait donné suffisamment de supervision ou d’instructions relativement à l’utilisation de l’appareil par une personne responsable de leur sécurité.

CONSERVEZ CES INSTRUCTIONS

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase (“Consumer” or “you”) that the Product and all accessories provided in the sales package (“Product”) are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period (“Materially Defective Product”)?

During the limited warranty period, VTech’s authorized service representative will repair or replace at VTech’s option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will return defective parts, modules, or equipment. Repair or replacement of the Product, at VTech’s option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

Mises en garde

- Utilisez et entreposez le produit à une température entre 0° C (32°F) et 40° C (104° F).
- N’exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu’à la lumière directe du soleil. Ne l’installez pas près d’une source de chauffage.
- Assurez-vous que le produit et le cordon de l’adaptateur se trouvent toujours hors de portée de bébé, à au moins 1 mètre (3 pieds) de bébé ou du berceau, afin d’éviter les risques d’étranglement.
- Ne placez jamais le produit à l’intérieur du berceau ou du parc de bébé. Ne couvrez jamais le produit d'une serviette ou une couverture.
- D’autres appareils électroniques peuvent causer des interférences avec le produit. Tentez d’installer le produit le plus loin possible de ces dispositifs électroniques : routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs de la pièce, téléviseurs, ordinateurs personnels, appareils électroménagers et téléphones sans fil.

Stimulateurs cardiaques implantés dans l’organisme

Les simulateurs cardiaques (ne s’applique qu’aux dispositifs numériques sans fil) :

L’organisme ‘Wireless Technology Research, LLC (WTR)’, une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l’organisme. Appuyée par l’Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

Avis aux détenteurs de stimulateurs cardiaques

- Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.

L’étude effectuée par l’organisme WRS n’a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci.

Champs électromagnétiques (EMF)

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd’hui.

