

Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news.

- CS6919-25
- CS6919-15
- CS6919-16
- CS6919-17
- CS6919-18
- CS6919-2
- CS6919-24
- CS6919-26
- CS6919-27
- CS6919-29
- CS6919-3
- CS6919-4

DECT 6.0 cordless telephone



vtech

Abridged user's manual

Congratulations

on purchasing your new VTech product. Before using this product, please read **important safety instructions**.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

 
Please refer to the User's manual for a full set of installation and operation instructions at www.vtechphones.com.



Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.


What's in the box

Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

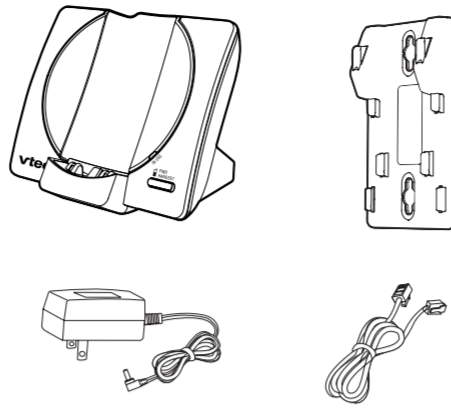


- 1 set for CS6919/CS6919-15/CS6919-16/CS6919-17/CS6919-19
- 2 sets for CS6919-2/CS6919-25/CS6919-26/CS6919-27/CS6919-29
- 3 sets for CS6919-3
- 4 sets for CS6919-4

 - 1 set for CS6919-2/CS6919-25/CS6919-26/CS6919-27/CS6919-29
- 2 sets for CS6919-3
- 3 sets for CS6919-4

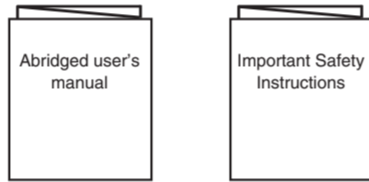

Handset overview

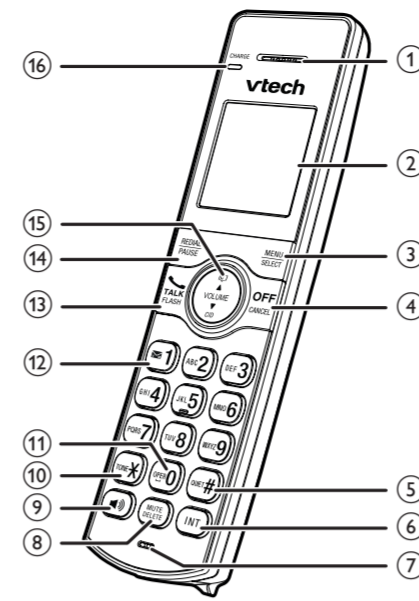 

- 1 – Handset earpiece
- 2 – LCD display
- 3 – MENU/SELECT
 - Show the menu.
 - While in a menu, press to select an item, or save an entry or setting.
- 4 – OFF/CANCEL
 - Hang up a call.
 - Silence the ringer temporarily while the handset is ringing.
 - Press and hold to erase the missed call indicator while the phone is not in use.
 - Press to return to the previous menu; or press and hold to return to idle mode, without making changes.
- 5 – QUIET#
 - Press repeatedly to show other dialing options when reviewing a caller ID log entry.
- 6 – INT
 - Press to start an intercom conversation or transfer a call (for multi-handset models only).
- 7 – Microphone
- 8 – MUTE/DELETE
 - Mute the microphone during a call.
 - Delete digits or characters while using the dialing keys.
 - Silence the ringer temporarily while the handset is ringing.

9 –

- Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset earpiece.

10 – TONE X

- While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

11 – OPER 0

- Press to add a space when entering names.

12 – 1

- Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the phonebook.
- Press and hold to set or dial your voicemail number.

13 – TALK/FLASH

- Make or answer a call.
- Answer an incoming call when you hear a call waiting alert.

14 – REDIAL/PAUSE

- Press repeatedly to review the redial list.
- Press and hold to insert a dialing pause while entering a number.

15 – ▲/VOLUME/

- Review the phonebook when the phone is not in use.
- Increase the listening volume during a call.
- Scroll up while in a menu, or in the phonebook, caller ID log, or redial list.
- Move the cursor to the right when entering numbers or names.

 
VOLUME/▼/CID

- Review the caller ID log when the phone is not in use.
- Decrease the listening volume during a call.
- Scroll down while in a menu, or in the phonebook, caller ID log, or redial list.
- Move the cursor to the left when entering numbers or names.

16 – CHARGE light

- On when the handset is charging.

Telephone base overview

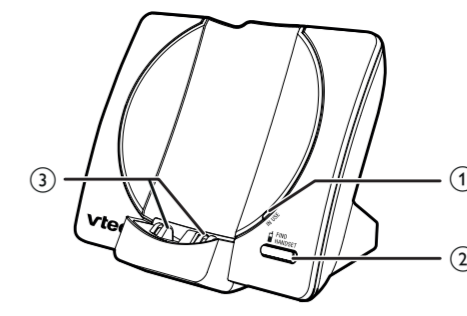

1 – IN USE light

 
- Flashes when there is an incoming call, or another telephone sharing the same line is in use.
- Flashes when handsets are being deregistered.
- On when the handset is in use or being registered.

2 – FIND HANDSET

- Press to page all system handsets.

3 – Charging pole

Charger overview

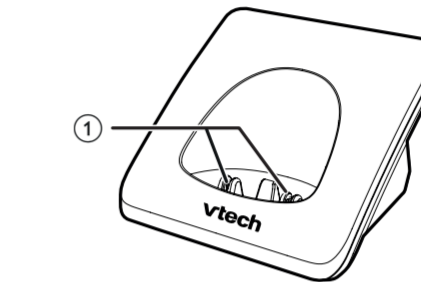

1 – Charging pole

Connect

You can choose to connect the telephone base for desktop usage or wall mounting.

NOTES

 
- Use only the adapters provided.
- Make sure the electrical outlets are not controlled by wall switches.
- The adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

TIP


- If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a **DSL filter** (not included) between the telephone line cord and telephone wall jack. Contact your DSL service provider for more information.



Connect the telephone base

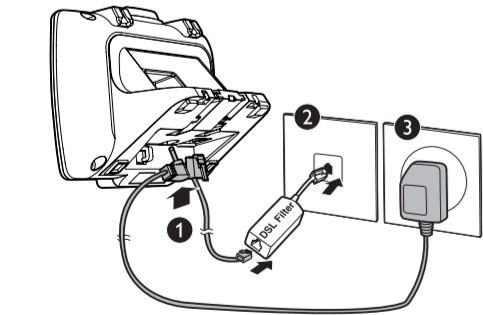


Connect the charger

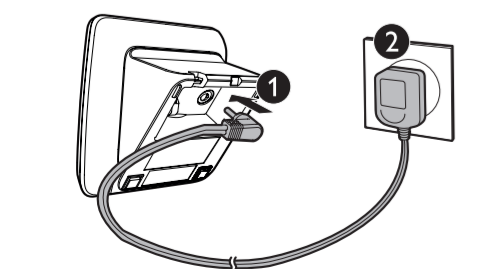 


Mount the telephone base

 
1. Connect the telephone line cord to the telephone base. Route it through the wall mount bracket, and then connect it to the wall jack.

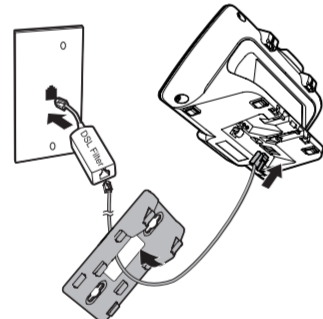

 
2. Align and place the wall mount bracket on the standard wall plate.

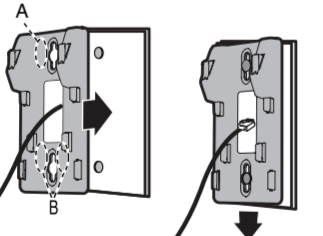

 3. Align and place the telephone base on the wall mount bracket. Slide it down until it clicks securely in place.

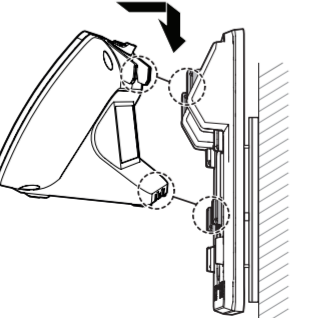

 4. Connect the power adapter.

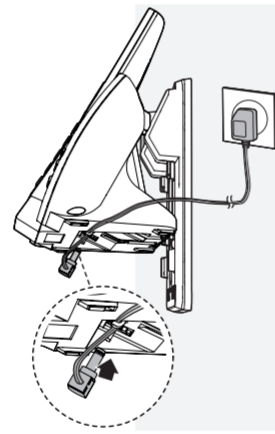



Install and charge the battery

Install the battery

Install the battery as shown below.



NOTES

  - Use only the battery provided.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.
- If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

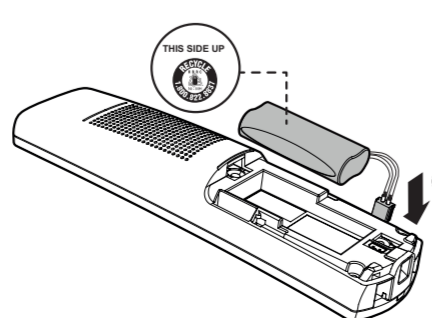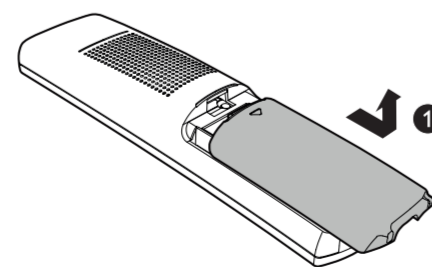

Charge the battery

  Place the handset in the telephone base or the charger to charge.

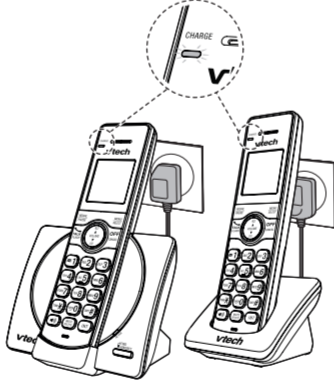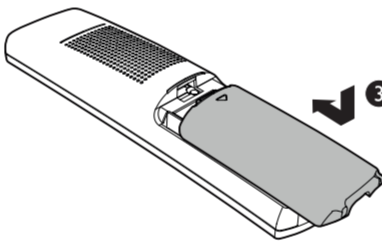

Once you have installed the battery, the handset LCD display indicates the battery status (see the table below).

NOTES

- For best performance, keep the handset in the telephone base or charger when not in use.
- The battery is fully charged after 12 hours of continuous charging.

| Battery indicators | Battery status | Action |
|--|--|---|
| The screen is blank, or shows Put in battery and flashes . | The battery has no charge or very little charge. The handset cannot be used. | Charge without interruption (at least 30 minutes). |
| The screen shows Low battery and flashes . | The battery has enough charge to be used for a short time. | Charge without interruption (at least 30 minutes). |
| The screen shows HANDSET X . | The battery is charged. | To keep the battery charged, place it in the telephone base or charger when not in use. |

Before use

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time.

Set date and time

1. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
2. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **▼** or **▲** to choose **AM** or **PM**.
3. Press **SELECT** to save.

Check for dial tone

Press **TALK**. If you hear a dial tone, the installation is successful.

If you do not hear a dial tone:

- Make sure the installation procedures described above are properly done.
- It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays **Out of range** or **no pwr at base**.

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press **TALK**. Move closer to the telephone base, and then press **TALK** to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

Using the handset menu

1. Press **MENU** when the phone is not in use.
2. Press **▼** or **▲** until the screen displays the desired feature menu.
3. Press **SELECT** to enter that menu.
- To return to the previous menu, press **CANCEL**.
- To return to idle mode, press and hold **CANCEL**.

Configure your telephone

Set language

The LCD language is preset to English. You can select English, French or Spanish to be used in all screen displays.

1. Press **MENU** when the handset is not in use.
2. Scroll to **Settings**, and then press **SELECT** twice.
3. Scroll to choose **English, Français** or **Español**, and then press **SELECT** to save.

Set date and time

1. Press **MENU** when the handset is not in use.
2. Scroll to **Set date/time**, and then press **SELECT**.
3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
4. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **▼** or **▲** to choose **AM** or **PM**.
5. Press **SELECT** to save.

 
Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily during a call.

1. During a call, press **TONE X**.
2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

Telephone operation

Handset control key panel:

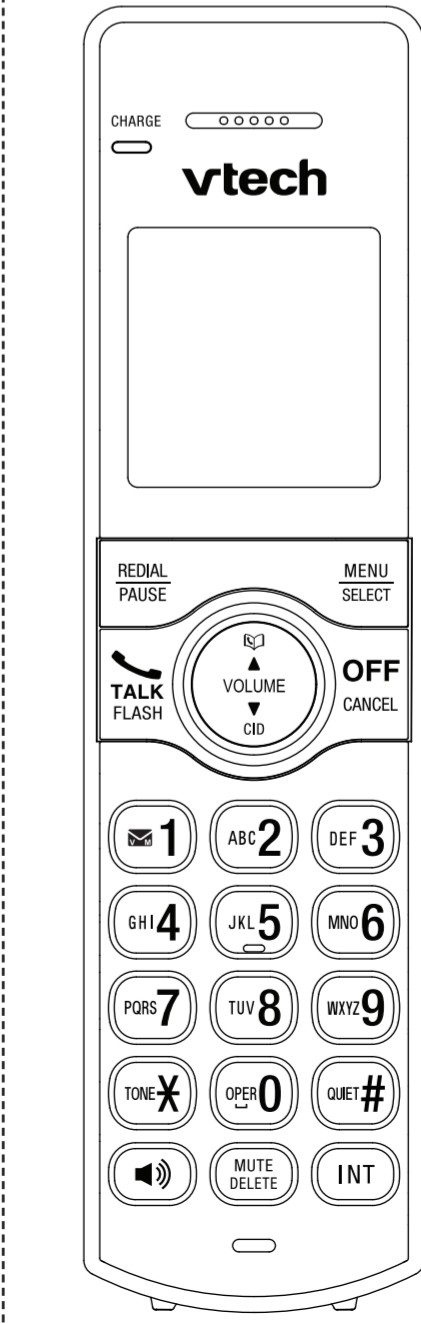

Display icons overview

| | |
|--|--|
| | The battery icon flashes when the battery is low and needs charging. |
| | The battery icon animates when the battery is charging. |
| | The handset ringer is turned off. |
| | There are new voicemail received from your telephone service provider. |
| | The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base. |
| | There are new caller ID log entries. |

Make a call

- Press **TALK** or **▲**, and then dial the telephone number.

Answer a call

- Press **TALK**, **▲**, or any dialing key.

End a call

- Press **OFF** on the handset, or put the handset into the telephone base or charger.

Speakerphone

- During a call, press **▲** on the handset to switch between speakerphone and handset earpiece.

Volume

- During a call, press **▼/VOLUME/▲** on the handset to adjust the listening volume.

NOTE

- The handset earpiece volume setting and speakerphone volume setting are independent.

Mute

The mute function allows you to hear the other party but the other party cannot hear you.

1. During a call, press **MUTE** on the handset. The screen displays **Muted**.
2. Press **MUTE** again to resume the conversation. The screen displays **Microphone on**.

Join a call in progress

You can use up to two system handsets at a time on an outside call.

- When a handset is already on a call, press **TALK** or **▲** on another handset to join the call.
- Press **OFF** or place the handset in the telephone base or charger to exit the call. The call continues until all handsets hang up.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

- Press **FLASH** to put the current call on hold and take the new call.
- Press **FLASH** to switch back and forth between calls.

