CS6928-2 CS6929 CS6929-15 CS6929-16 CS6929-17 CS6929-19

CS6929-2 CS6929-25 CS6929-26 CS6929-27 CS6929-29 CS6929-3

CS6929-4

DECT 6.0 cordless telephone



vtech

Abridged user's manual

Congratulations


on purchasing your new VTech product. Before using this product, please read Important safety instructions.


This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

Please refer to the User's manual for a full set of installation and operation instructions at www.vtechphones.com.



Telephones identified with this go have reduced noise and nterference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant .ogo is a trademark of the elecommunications Industry ssociation. Used under license.

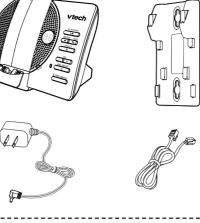

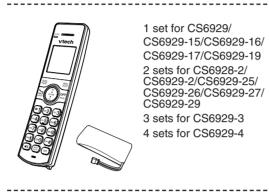

What's in the box

Your product package contains the following

items. Save your sales receipt and original

packaging in the event warranty service is

CS6929-15/CS6929-16/ CS6929-17/CS6929-19 2 sets for CS6928-2 CS6929-2/CS6929-25 CS6929-26/CS6929-27/ 3 sets for CS6929-3 4 sets for CS6929-4




1 set for CS6928-2/ CS6929-2/CS6929-25/ CS6929-27/CS6929-29 2 sets for CS6929-3 3 sets for CS6929-4





Handset overview

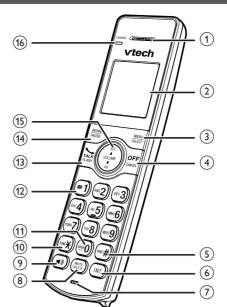

2 - LCD display

- Handset earpiece

While in a menu, press to select an item, or

Hang up a call.

 Silence the ringer temporarily while the handset is ringing.

ndicator while the phone is not in use.

 Press to return to the previous menu; or press and hold to return to idle mode, without

options when reviewing a caller ID log entry.

Press to start an intercom conversation or

7 - Microphone

8 - MUTE/DELETE

 Mute the microphone during a call. Delete digits or characters while using the

Silence the ringer temporarily while the handset is ringing.

Telephone base overview · Make or answer a call using the handset

During a call, press to switch between the

10 - TONE X

11 - OPER 0

12 – 🔀 1

temporarily.

14 - REDIAL/PAUSE

15 – **▲**/VOLUME/ℚ

in use

entering a numbe

ID log, or redial list

numbers or names.

caller ID log, or redial list

· On when the handset is charging.

numbers or names

16 - CHARGE light

VOLUME/▼/CID

speakerphone and the handset earpiece.

· While you have set the dial mode to pulse

Press to add a space when entering names

 Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or

Press and hold to set or dial your voicemail

· Press repeatedly to review the redial list.

• Press and hold to insert a dialing pause while

Review the phonebook when the phone is not

Increase the listening volume during a call.

Scroll up while in a menu, phonebook, caller

Move the cursor to the right when entering

. Review the caller ID log when the phone is not in


· Decrease the listening volume during a call.

• Scroll down while in a menu, phonebook,

Move the cursor to the left when entering

saving it to the phonebook

and on a call, press to switch to tone dialing

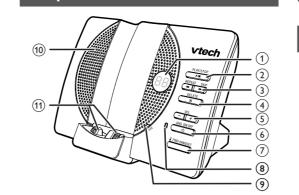

1 - Message window

 Shows the number of messages, and other 13 - TALK/FLASH information of the answering system or · Make or answer a call elephone base. Answer an incoming call when you hear a call

2 - ►/■PLAY/STOP

Press to play messages

· Press to stop playing a message. **≪**REPEAT

Press to repeat the playing message

SKIP Press to skip to the next message.

4 – XDELETE Press to delete the playing message.

· Press twice to play the previous message.

 When the phone is not in use, press twice to delete all old messages.

Press to adjust the volume during message

When the phone is not in use, press to adjust the telephone base ringer volume

6 – ФANS ON/OFF Press to turn the answering system on or off.

7 – #FIND HANDSET

 Press to page all system handsets. 8 - ANS ON/OFF light

• On when the answering system is turned on.

9 - IN USE light

 Flashes when there is an incoming call, or another telephone sharing the same line is in use

 Flashes when handsets are being deregistered. • On when the handset is in use or being

· On when the answering system is answering a

I1 – Charging pole

Charger overview

1 - Charging pole

Display icons overview

۵	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
ガ	The handset ringer is turned off.
∑ ≅	There are new voicemail received from your telephone service provider.
1/13	The message number currently playing and total number of new/old messages recorded.
ANS ON	The answering system is turned on.
ECO	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.
NEW	There are new caller ID log entries.

Connect

· Use only the adapters provided.

provider for more information.

Connect the telephone base

Connect the charger

by wall switches.

• Make sure the electrical outlets are not controlled

· The adapters are intended to be correctly oriented

are not designed to hold the plug in place if it is

plugged into a ceiling, under-the-table or cabinet

in a vertical or floor mount position. The prongs

If you subscribe to digital subscriber line (DSL)


line, make sure you install a **DSL filter** (not

included) between the telephone line cord and

telephone wall jack. Contact your DSL service


nigh-speed Internet service through your telephone

Connect the telephone line cord to the You can choose to connect the telephone base telephone base. Route it through the wall for desktop usage or wall mounting. mount bracket, and then connect it to the wall jack. **Ø**NOTES

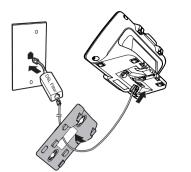


Mount the telephone base


2 Align and place the wall mount bracket on the standard wall plate.

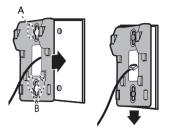

Align and place the telephone base on the wall mount bracket. Slide it down until it clicks securely in place.

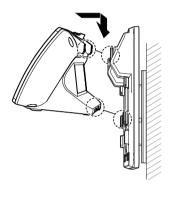

Connect the power adapter

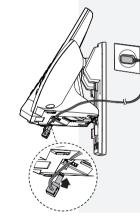



nstall the battery

Install the battery as shown below.

· Charge the battery provided with this product only in accordance with the instructions and limitations

· If the handset will not be used for a long time, disconnect and remove the battery to prevent

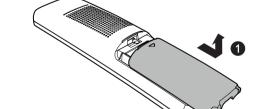

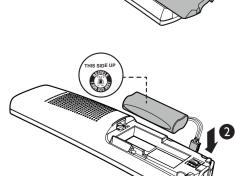



Check the battery level

battery needs to be charged. Go to **Charge** the battery section before you do any setting or operation.

Charge the battery

Place the handset in the telephone base or the

Once you have installed the battery, the

charger and () flashes. handset canno be used. The screen The battery has hows Low nough charge pattery and be used for lashes. short time.

Γhe screen

s blank. or


shows Put in

he screen

After you have installed the battery, check the

battery level on the handset screen

- If the battery icon is â ê or ê, then go to Before use section to set the date and time, and set the answering system through voice
- If the screen is blank, or \hat{l} flashes, then the

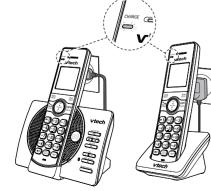

handset LCD display indicates the battery

After the setting for the date and time, the handset will display Voice guide to... and set up Ans sys? alternatively.

Set answering system through voice guide This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

1. Press **SELECT** to start the voice guide for the answering system setup. You hear the voice prompt "Hello! This voice guide will assist you with the basic setup of your answering system.

2. Setup your answering system by inputting the designated numbers as instructed in the voice guide.

Check for dial tone

Press TALK. If you hear a dial tone, the installation is successful

If you do not hear a dial tone: Make sure the installation procedures

described above are properly done. It may be a wiring problem. If you have

changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/ VolP service provider for more information.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays Out of range or no pwr at base.

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press TALK. Move closer to the telephone base, and then press to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

Press ▼ or ▲ until the screen displays the

· To return to the previous menu, press CANCEL

To return to idle mode, <u>press and hold</u> CANCEL.

Configure your telephone

select English, French or Spanish to be used in all screen displays

Scroll to Settings, and then press SELECT Scroll to choose **English**, **Français** or

Español, and then press SELECT to save.

Make sure you set the date and time including the vear correctly: otherwise the answering syste

SELECT.

1. Press **MENU** when the handset is not in 2. Scroll to **Set date/time**, and then press

3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.

(HH) and minute (MM). Then press ▼ or ▲

to choose AM or PM. 5. Press **SELECT** to save

Temporary tone dialing If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily During a call, press ™X.

Use the dialing keys to enter the relevant


number. The telephone sends touch-tone

signals. It automatically returns to pulse

dialing mode after you end the call.

elephone operation



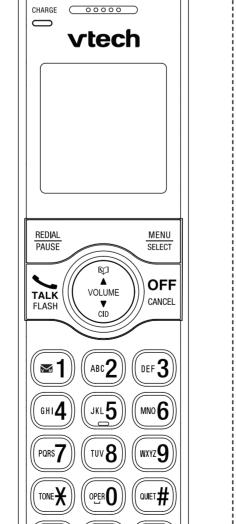

Answer a call

into the telephone base or charger.

• Press **OFF** on the handset, or put the handset

switch between speakerphone and handset

handset to adjust the listening volume.

2. Press MUTE again to resume the conversation. The screen displays Microphone on.

time on an outside call. • When a handset is already on a call, press

TALK or () on another handset to join the call. Press OFF or place the handset in the telephone base or charger to exit the call.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

- and take the new call. Press FLASH to switch back and forth
- between calls.

Find handset Use this feature to find all system handsets.

To start paging

 Press /FIND HANDSET on the telephone base. All idle handsets ring and display

'* Paging *

To end paging: • Press **/FIND HANDSET** again on the

Press TALK, ■, OFF, or any dialing key on the handset

-OR-Place the handset in the telephone base or

• Do not press and hold **I/FIND HANDSET** for more than four seconds. It may lead to handset

deregistration. Redial list

for the new entry. Review the redial list

Each handset stores the last 10 telephone

2. Press ▼, ▲, or REDIAL repeatedly until the desired entry displays.

Dial a redial list entry • When the desired entry displays, press TALK or

Delete a redial list entry • When the desired redial entry displays, press DELETE.

base or charger.

Use the intercom features for conversations between two handsets 1. Press **INT** on your handset when not in use.

3. To end the intercom call, press **OFF** or

place the handset back in the telephone

Use the dialing keys to enter a destination any dialing key on the destination handset.

intercom call If you receive an incoming call during an

Call transfer using intercom

number if necessary.

ends automatically

handset to another

handset.

Answer an incoming call during an

Scroll to Phonebook then press SELECT. intercom call, there is an alert tone. 3. Press **SELECT** again to choose To answer a call, press TALK. The intercom call

ends and the telephone continues to ring.

While on an outside call, you can use the

intercom feature to transfer the call from one

1. Press INT on your handset during a call

The current call is put on hold. Use the

2. To answer the intercom call, press TALK, ◀》, or

You can now have a private conservation

any dialing key on the destination handset.

three-way conversation. Press and hold

Add new entry. 4. Use the dialing keys to enter the number (up To end the intercom call without answering

Add a phonebook entry

to 30 digits). the outside call, press **OFF**. The intercom call Press SELECT to move to enter the name.

Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.

While entering numbers and names, you can:

1. Press **MENU** when the phone is not in use

Press SELECT to save.

 Press **DELETE** to erase a digit or character. Press and hold DELETE to erase the entire dialing keys to enter a destination handset

> Press ▼ or ▲ to move the cursor to the left or riaht.

Press and hold PAUSE to insert a dialing pause (for entering phone numbers only). Press 0 to add a space (for entering names

Press ™ to add ★ (ト appears) or QUIET# to add # (appears) (for entering phone

2. Scroll to browse through the phonebook, or

Review the phonebook entries Entries are sorted alphabetically. 1. Press \(\text{\tin}\text{\te}\tint{\texi}\text{\text{\text{\text{\text{\text{\text{\text{\text{\texi}\text{\text{\text{\text{\text{\text{\text{\text{\texi}\text{\text{\texit{\text{\texi}\text{\text{\text{\text{\texi}\text{\text{\texi}\text{\text{\text{\text{\text{\texi}\text{\text{\texit{\text{\t

numbers only).

use the dialing keys to start a name search. Edit a phonebook entry

2. Use the dialing keys to edit the number, and then press **SELECT**. 3. Use the dialing keys to edit the name, and


then press **SELECT** to save.

1. When the desired entry displays, press


Delete a phonebook entry

. When the desired entry displays, press

TALK or ■ to dial.

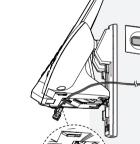

specified in this manual possible leakage.

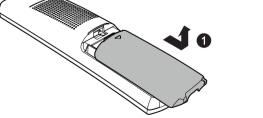

shows **HANDSET X**.

· Use only the battery provided.



status (see the following table).

answering system, refer to Configure your telephone and Set your built-in answering

answering system section.

and time, and voice guide

lefore use After you install your telephone or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time, and the answering system through voice

The battery

or very little

charge. The

The battery is

charged.

Press CANCEL or place the handset in the

• For best performance, keep the handset in the

telephone base or charger when not in use.

The battery is fully charged after 12 hours of

To manually set the date and time and the

To manually initiate the voice guide, refer

to Voice guide under Set your built-in

telephone base or charger will bypass the set date

has no charge

Charge without

Charge without

(at least 30

To keep the

place it in the

not in use.

telephone base

or charger when

minutes).

(at least 30

Set date and time **⊘**NOTE

press **SELECT**.

 Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp. 1. Use the dialing keys (0-9) to enter the

month (MM), date (DD) and year (YY). Then

2. Use the dialing keys (0-9) to enter the hour

(HH) and minute (MM). Then press ▼ or ▲

to choose AM or PM. 3. Press **SELECT** to save.

1 set for CS6929/

3 - MENU/SELECT Show the menu

4 - OFF/CANCEL

Press and hold to erase the missed call

Press repeatedly to show other dialing

transfer a call (for multi-handset models only).

dialing keys.

Using the handset menu Press **MENU** when the phone is not in use.

desired feature menu. Press **SELECT** to enter that menu.


The LCD language is preset to English. You can


1. Press **MENU** when the handset is not in

Set date and time

does not announce the correct day of the week for your recorded messages time stamp.

Use the dialing keys (0-9) to enter the hour

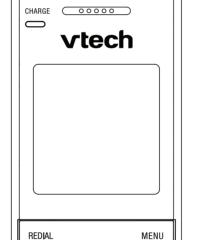

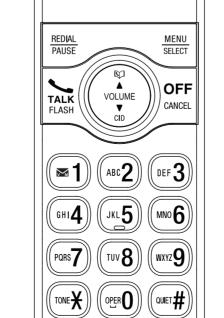

MUTE DELETE

INT

Make a call

Press TALK or ■), and then dial the telephone

During a call, press ▼/VOLUME/▲ on the

You can use up to two system handsets at a

Press FLASH to put the current call on hold

Press TALK, ■®, or any dialing key

Speakerphone

The handset earpiece volume setting and speakerphone volume setting are independent.

The mute function allows you to hear the other party but the other party cannot hear you. 1. During a call, press MUTE on the handset.

Join a call in progress

The call continues until all handsets hang up.

telephone base

charger.

numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room

1. Press **REDIAL** when the handset is not in

to dial.

handset number if necessary. 2. To answer the intercom call, press TALK, ◄), or

From this intercom call, you have the following options: You can let the destination handset join

you on the outside call in a

before transferring the call

INT on the originating handset. You can transfer the call Press OFF place your handset back in the telephone base or charger. Your handset displays **Line in use**. The destination handset is

then connected to the outside call.

You can press INT to switch between the

outside call (Outside call displays) and the intercom call (Intercom displays). · The destination handset can end the intercom call by pressing **OFF**, or by placing the handset back in the telephone base or charger. The outside


call continues with the original system


honebook


The phonebook can store up to 50 entries, which press **SELECT**. are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, Dial a phonebook entry and a name up to 15 characters. When the desired entry appears, press





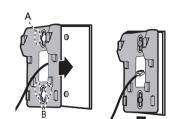

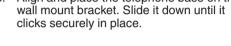

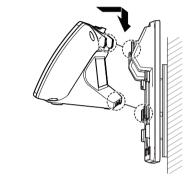



Caller ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log.

The caller ID log stores up to 30 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the telephone number has more that 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry

1. Press **CID** when the phone is not in use. 2. Scroll to browse through the caller ID log.

Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the handset displays XX missed calls.

Each time you review a caller ID log entry marked NEW, the number of missed calls decreases by one.

When you have reviewed all the missed calls, the missed call indicator no longer displays. If you do not want to review the missed calls one by one, press and hold CANCEL on the idle handset to erase the missed call indicator. All the entries are then considered old.

Dial a caller ID log entry

• When the desired entry appears, press or • to dial.

Save a caller ID log entry to the phonebook

- 1. When the desired caller ID log entry displays, press SELECT.
- 2. Press SELECT to choose To Phonebook
- 3. Use the dialing keys to modify the number, and then press SELECT 4. Use the dialing keys to modify the name,
- and then press **SELECT** to save.

Delete a caller ID log entry · When the desired caller ID log entry displays,

press **DELETE**

trieve voicemail from

Voicemail is a feature available from most

telephone service providers. It may be included

with your telephone service, or may be optional.

When you received a voicemail, the handset

displays and New voicemail. To retrieve.

voicemail settings and listen to messages.

After you have listened to all new voicemail

You can save your access number on each

you saved the voicemail number, you can

press and hold 🔀 🕇 to retrieve voicemail

3. Scroll to **Voicemail** # and then press

number (up to 30 digits).

delete vour voicemail messages

5. Press **SELECT** to save.

the indicators.

Set your voicemail number

vou typically dial an access number provided by

your telephone service provider, and then enter

a security code. Contact your telephone service

messages, the indicators on the handset turn off

handset for easy access to your voicemail. After

1. Press **MENU** when the handset is not in use

2. Scroll to **Settings** and then press **SELECT**.

4. Use the dialing keys to enter the voicemail

Turn off the new voicemail indicators

If you have retrieved your voicemail while away

voicemail indicators, use this feature to turn off

2. Scroll to Settings, and then press SELECT.

SELECT. You hear a confirmation tone.

3. Scroll to Clr voicemail, and then press

phone service

Fees may apply.

automatically.

Retrieve voicemail

Delete all caller ID log entries

- Press MENU when the phone is not in use. Scroll to Caller ID log and then press
- SELECT. Scroll to Delete all and then press SELECT

Call block

If you have subscribed to caller ID service, you can set the telephone to block unknown calls and certain undesired calls. The call block list can store up to 20 entries

Block unknown calls

1. Press **MENU** when the handset is not in use.

2. Scroll to Call block, and then press SELECT.

3. Scroll to choose Calls w/o num, and then press **SELECT**.

1. Press **MENU** when the handset is not in use.

4. Scroll to choose **Unblock** or **Block**, and then press **SELECT** to save.

Add a call block list entry

- 2. Scroll to Call block, and then press
- 3. Press SELECT to choose Block list.
- 4. Scroll to choose **Add new entry**, and then press **SELECT**.
- 5. Use the dialing keys to enter the number (up to 30 digits). 6. Press SELECT to move to enter the name.
- 7. Use the dialing keys to enter the name (up to
- 15 characters). Additional key presses show other characters of that particular key.
- 8. Press SELECT to save.

Review call block list

- 1. Press **MENU** when the handset is not in use. 2. Scroll to **Call block**, and then press
- SELECT.
- 3. Press **SELECT** to choose **Block list**. 4. Press SELECT to choose Review.

Edit a call block list entry

- 1. When the desired entry displays, press SELECT
- 2. Use the dialing keys to edit the number, and then press **SELECT**.
- 3. Use the dialing keys to edit the name, and then press **SELECT** to save.

Expand your telephone system

ou can add new handsets (CS6909), cordless

Save a caller ID log entry to call block list Handset ringer volume

the ringer off.

SELECT to save.

base is not in use.

Press MENU when the handset is not in use.

2. Scroll to **Ringers**, and then press **SELECT**.

Press SELECT to choose Ringer volume.

If the handset ringer volume is set to off, that

Telephone base ringer volume

announces, "Base ringer is off."

Temporary ringer silencing

normally at the preset volume.

adjust the ringer volume.

on the handset when idle.

Quiet mode

turns on automatically

4. Scroll to adjust the volume, and then press

handset is silenced for all incoming calls except

Press VOL+ or VOL- on the telephone base to

adjust the ringer volume when the telephone

When you set the ringer volume to zero.

When the telephone is ringing, you can

temporarily silence the ringer of the handset

Press OFF or MUTE on the handset. The

You can turn on the quiet mode for a period of

tone) and call screening are muted. When you

turn on the guiet mode, the answering system

1. Press and hold out # on the handset when

Use the dialing keys (0-9) to enter the

duration, and then press **SELECT** to save.

• To turn off the quiet mode, press and hold QUIET#

time. During this period, all tones (except paging

without disconnecting the call. The next call rings

handset displays A and Ringer muted briefly.

• Press VOL+ or VOL- on the telephone base to

the base ringer is off. The telephone base

headsets (IS6100) or speakerphones (MA3222 or AT&T TL80133) to your telephone system. All accessories are sold separately. Your telephone base supports a maximum of five devices. For more details, refer to the user's manual that

comes with your new device.

This power conserving technology reduces provider for instructions on how to configure the power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

Avoid rough treatment

ever need to ship it

Avoid water Your telephone can be damaged if it gets wet.

or handle it with wet hands. Do not install the **Electrical storms**

Electrical storms can sometimes cause power

from home, and the handset still displays the new own safety, take caution when using electrical appliances during storms.

 This feature turns off the indicators only, it does not should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use 1. Press MENU when the handset is not in use.

Frequently asked questions

manual

work at all.

alternately. The

handset does no

ECO mode

General product care

Taking care of your telephone Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Place the handset down gently. Save the original packing materials to protect your telephone if you

Do not use the handset outdoors in the rain, telephone base near a sink, bathtub or shower.

surges harmful to electronic equipment. For your

Cleaning your telephone Your telephone has a durable plastic casing that dampened cloth or cleaning solvents of any kind.

1. When the desired entry displays, press You can adjust the ringer volume level, or turn

2. Scroll to **To Call block**, and then press

and then press SELECT.

Delete a call block list entry

Mute rings of blocked calls

2. Press **7464**# on the handset.

Off, and then press SELECT.

You can turn the key tone on or off.

3. Use the dialing keys to modify the number,

4. Use the dialing keys to modify the name,

· When the desired call block list entry displays,

An incoming call will ring once and then the

You can mute the first ring of blocked calls.

system will check if the call should be blocked.

1. Press MENU when the handset is not in use.

3. Scroll to choose First ring:On or First ring:

1. Press **MENU** when the handset is not in use.

Scroll to Settings, and then press SELECT.

3. Scroll to choose **Key tone**, and then press

You can choose from different ringer tones for

1. Press MENU when the handset is not in use.

Scroll to Ringers, and then press SELECT.

4. Scroll to sample each ringer tone, and then

If you turn off the ringer volume, you will not hear

3. Scroll to choose **Ringer tone**, and then

Scroll to choose **On** or **Off**, and then press

and then press **SELECT** to save.

SELEC1

SELECT

press **DETELE**.

Sound settings

SELECT to save.

press **SELECT**.

ringer tone samples

press **SELECT** to save.

Key tone

ww.vtechphones.com or call 1 (800) 595-9511
or customer service. In Canada, go to
ww.vtechcanada.com or call 1 (800) 267-7377

My telephone does not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.	
The display shows No line . I cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord. If changing telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your	
	telephone service provider. You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact you service provider for solutions.	
The display shows To register HS andsee	The handset is deregistered from the telephone base. 1. Unplug the telephone base power adapter from the	

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, visit our website at

My telephone loes not work at all.	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.
The display thows No line . cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.
	If changing telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.
	You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your service provider for solutions.
he display	The handset is deregistered from

back in.

power outlet, and then plug it

Place the handset in the

telephone base to register i

The handset shows Registered

and you hear a beep when the

registration process completes.

This process takes about 90

seconds to complete.

The answering

system does

not announce

the correct day

messages time

The messages

system are

incomplete.

l accidentally

set my LCD

language to

French, and I

don't know how

to change it back

Spanish or

to English.

of the week

for recorded

The answering Make sure the answering system vstem does is on. When the answering system is on, ANS ON should display on ot record the handset and the telephone nessages.

When the answering machine nemory is full, it does not record new messages until some old messages are deleted. If you subscribe to voicemail service, change the number of only to the Consumer for Products purchased and rings so that your answering

system answers before your

telephone service provider.

If a caller leaves a very long

when the answering system

disconnects the call after the

If the memory on the answering

system becomes full during a

While the handset is not in use

¥364# to change the handset

LCD language back to English.

press **MENU** and then enter

nessage, the answering system

stops recording and disconnects

preset recording time.

on the answering | message, part of it may be lost

voicemail service answers. To

determine how many rings activate

your voicemail service, contact you

Make sure you have set the dat

and time. See Configure your

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

This limited warranty does not cover:

- 1. Product that has been subjected to misuse, improper installation, abnormal operation or liquid intrusion: or
- 2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or 3. Product to the extent that the problem experienced **Other limitations**
- or cable or antenna systems; or Product to the extent that the problem is caused

- is caused by signal conditions, network reliability,
- by use with non-VTech accessories: or

Limited warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends

About answering system and

For message recording, your telephone has a

built-in answering system, and it also supports

picemail service offered by your telephone

The main differences between them are:

Messages are

telephone base.

Your messages

automatically.

nanually.

will not be deleted

You have to delete

When you received

handset displays

XX new messages

and the message

nessages, usually

there are two ways:

Press ►/■ on the

telephone base:

Access remotely

window on the

flashes.

code.

To retrieve

telephone base

your messages

stored in the

service provider (subscription is required, and

Messages are

stored in a server

Your messages

eleted after a

period of time.

Contact your

elephone service

rovider for more

When you received

displays Mand

| New voicemail

Γo retrieve

essages, you

need an access

number and/or a

asscode provide

y your telephone

service provider.

the handset

may be

or system provided

by your telephone

icemail service

fee may apply).

Storage

o retrieve

used in the United States of America and Canada What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective

What is not covered by this limited warranty?

- accident, shipping or other physical damage, nandling, neglect, inundation, fire, water or other

with an access The answering system must be turned on to answer and record messages. To turn on or off with the telephone base:

the built-in answering system on or off. To turn on or off with the handset:

Press MENU when the phone is not in use.

Press U/ANS ON on the telephone base to turn

Turn the answering system on or off

Set your built-in answering system

up to 99 messages. Each message can be up

capacity for the announcement, messages and

memos is approximately 23 minutes. The actual

recording time depends on individual message

Your answering system allows you to set your

announcement, to save and delete messages,

activate call screening, to set number of rings

vtech

REPEAT SKIP

DELETE

(-1)

(b

FIND HANDSET

before pick up, and to access remotely.

Telephone base control key panel:

The answering system can record and store

to three minutes in length. The total storage

characteristics

- 2. Scroll to **Answering sys**, and then press
- 3. Scroll to **Answer on/off**, and then press
- 4. Scroll to **On** or **Off**, and then press **SELECT** to save. You hear a confirmation tone.

Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or

Product purchased, used, serviced, or shipped for

- repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or Product returned without a valid proof of purchase
- (see item 2 on the next page); or Charges for installation or set up, adjustment of customer controls, and installation or repair of ystems outside the unit.

How do you get warranty service? To obtain warranty service in the United States of America, please visit our website at

features may save you a service call

Canada, go to www.vtechcanada.com or dial 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and

www.vtechphones.com or call 1 (800) 595-9511. In

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further

repair activity. You must pay for the cost of repair and

return shipping costs for the repair of Products that are

What must you return with the Product to get

not covered by this limited warranty.

- 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and 2. Include a "valid proof of purchase" (sales receipt)
- identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address, and telephone number.

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no

Default announcement

The telephone is preset with a greeting that answers calls with "Hello, please leave a message after the tone." You can use this preset announcement, or replace it with your own.

Record your own announcement

The announcement can be up to 90 seconds in

- 4. Scroll to **Msg alert tone** then press **SELECT**.
- 3. Scroll to Ans sys setup then press SELECT.
- 1. Press **MENU** when the phone is not in use.
- Scroll to choose On or Off. 2. Scroll to **Answering sys** and then press
- SELECT twice.
- 6. Press **SELECT** to save and you hear a 3. The handset displays Play [2] Del [3]
- Rec [7], and it announces, "To play, press 2. To record, press 7." 4. Press **7** to record. The handset announces,
- This feature is an alternative way for you to do "Record after the tone. Press 5 when you the basic setup of the answering system. You are done." After the tone, speak towards the can follow the voice guide to record your own handset microphone. Then, press 5 when announcement, set the number of rings and the Press MENU when the phone is not in use.

Play the announcement

- 1. Press **MENU** when the phone is not in use. 2. Scroll to **Answering sys** and then press SELECT twice.
- 3. The handset displays Play [2] Del [3] Rec [7], and it announces, "To play, press 2. To record, press 7."
- Press 2 to play the announcement.

Delete the announcement

- Press MENU when the phone is not in use. 2. Scroll to **Answering sys** and then press SELECT twice.
- 3. The handset displays Play [2] Del [3] Rec [7], and it announces, "To play, press 2. To record, press 7."
- 4. Press **3** to delete your own recorded

Set number of rings

You can set the answering system to answer an incoming call after two, three, four, five or six rings: or toll saver. If you choose toll saver, the answering system answers a call after two rings when you have new messages, or after four rings when you have no new messages

- 1. Press **MENU** when the phone is not in use.
- Scroll to Answering sys then press SELECT. 3. Scroll to Ans sys setup then press SELECT.
- Scroll to # of rings then press SELECT.
- 5. Scroll to choose 2, 3, 4, 5, 6 or Toll saver. 6. Press **SELECT** to save and you hear a confirmation tone

other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or

Please retain your original sales receipt as proof of purchase.

exclusion may not apply to you.

consequential damages, so the above limitation or

Set message alert tone When the message alert tone is set to on.

and there is at least one new message, the telephone base beeps every 10 seconds. The message alert tone is preset to off.

2. Scroll to **Answering sys** and then press

Scroll to Voice guide, and then press

basic setup of your answering system.

Setup your answering system by inputting

SELECT. You hear the voice prompt "Hello!

This voice guide will assist you with the

designated numbers as instructed in the

Use your built-in answering systen

When there are new answering system

messages, The handset displays XX new

messages and the message window on the

To playback messages at the telephone base:

Press ►/■/PLAY when the phone is not in use.

Press VOL+ or VOL- to adjust the speaker

Press ►/SKIP to skip to the next message.

currently playing. Press **≪/REPEAT** twice to

message. The system advances to the next

• Press **«/REPEAT** to repeat the message

listen to the previous message

Press X/DELETE to delete the playing

message alert tone.

SELECT.

voice guide.

New message indication

telephone base flashes.

Options during playback:

Press ►/■/STOP to stop.

Message playback

message.

- Press ▼/VOLUME/▲ to adjust the message 1. Press **MENU** when the phone is not in use.
 - playback volume

and then press SELECT

Options during playback:

Delete all messages

messages

not in use

SELECT.

Remote access

To playback messages with a handset:

Press **MENU** when the phone is not in use

- 2. Scroll to **Answering sys** then press **SELECT**. Press 6 to skip to the next message

 - Press 4 to repeat the message. Press 4 twice
 - to listen to the previous message.

 - Press 3 to delete the playing message.

You cannot delete new messages until you

• Press X/DELETE twice when the phone is

1. Press **MENU** when the phone is not in use.

2. Scroll to **Answering sys**, and then press

SELECT. You hear a confirmation tone.

A two-digit security code is required to access

touch-tone telephone. The preset code is 19.

You can use this preset code, or set your own.

2. When the system plays your announcement,

Enter one of the following remote commands

Play all messages

(during playback).

(during playback).

Play new messages.

Description

Delete the current message

Delete all old messages.

3. Scroll to **Delete all old**, and then press

the answering system remotely from any

1. Dial your telephone number from any

enter the two-digit security code.

touch-tone telephone.

Command

2

3

33

review them. You cannot retrieve deleted

To delete all messages with a handset:

- Press OFF to stop the playback.

and handset earpiece.

You can only delete old (reviewed) messages. **00** to **99**. 1. Press **MENU** when the phone is not in use

- To delete all messages with the telephone
 - . Scroll to **Remote code**, and then press SELECT.
 - Use the dialing keys to enter a two-digit number.
 - 6. Press **SELECT** to save and you hear a confirmation tone.

You can use your answering system and voicemail service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact

s busy recording a message and you receive another call, the second caller can leave a voicemail message Set your answering system to answer calls at least two rings earlier than your voicemail

ervice is set to answer. For example, if your oicemail service answers after six rings, set your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting. Repeat the current message

echnical specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit freuency	Handset: 1921.536-1928.448 MHz Telephone base: 1921.536-1928.448 MHz
Channels	5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environment conditions at the time of use.
Power requirements	Handset: 2.4V Ni-MH battery Telephone base: 6V DC @ 400mA Charger: 6V DC @ 400mA
Memory	Phonebook: 50 memory locations; up to 30 digits and 15 characters Caller ID log:

30 memory locations; up to 24 digits

and 15 characters

5 Stop. Hear a list of remote commands. Skip to the next message (during playback). *7 Record a new announcement End the call. Turn the answering system on or off.

4. Hang up or press 8 to end the call.


Remote access code

You can set your own remote access code from

- Scroll to Answering sys then press SELECT.
- 3. Scroll to Ans sys setup then press SELECT.
- Scroll to a desired two-digit number.

Use the built-in answering system and voicemail service

your telephone service provider. If you are on a call, or if the answering system

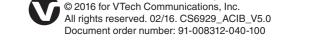

Specifications are subject to change without notice