







Quick start guide

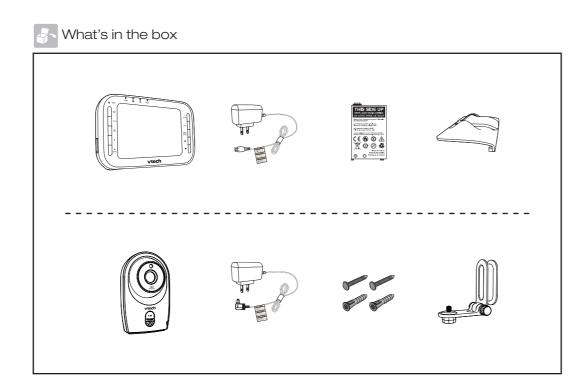


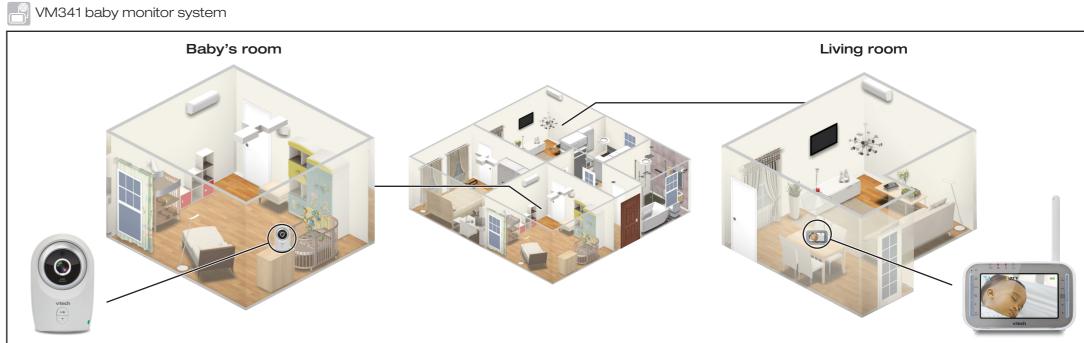


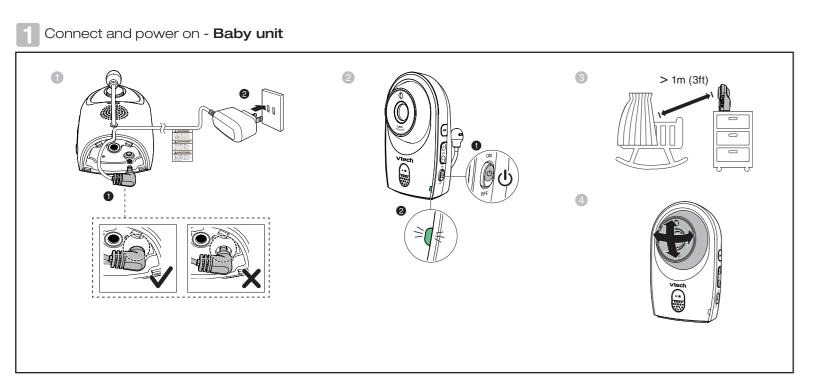





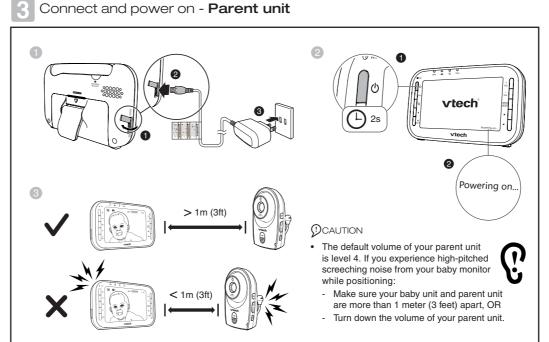


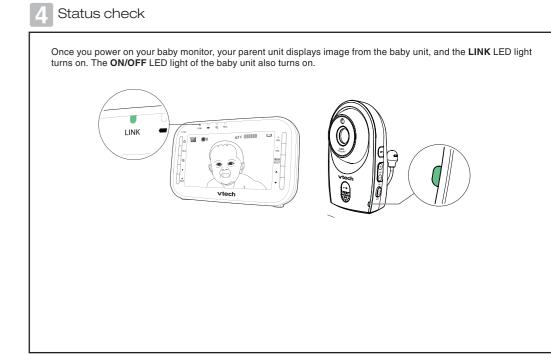


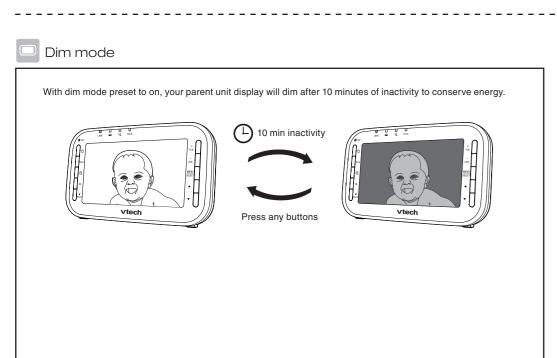

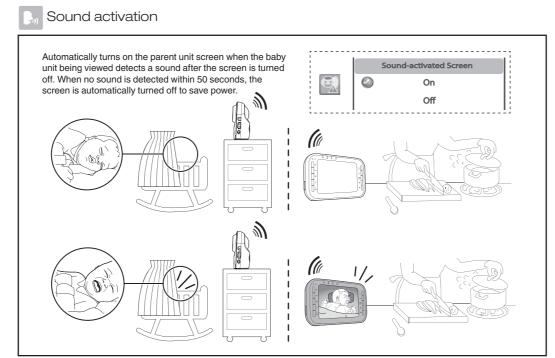

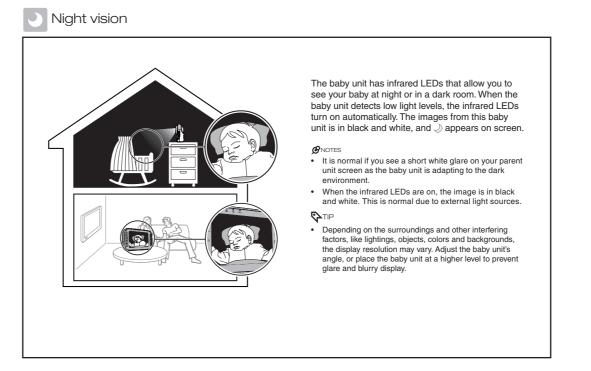

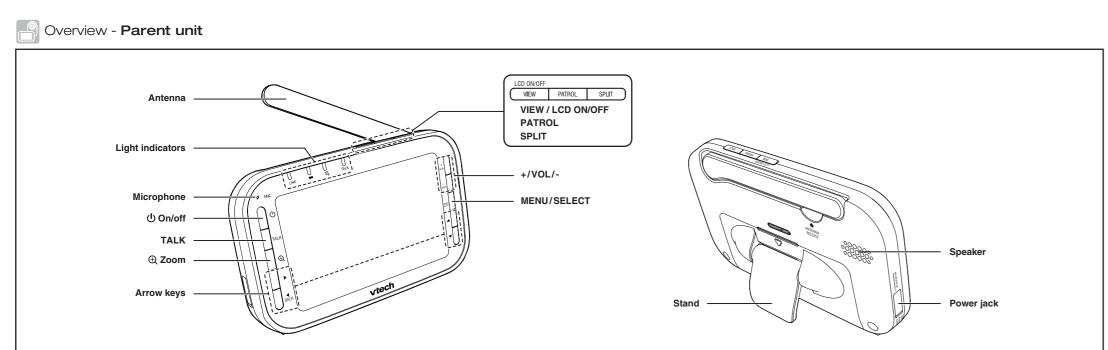

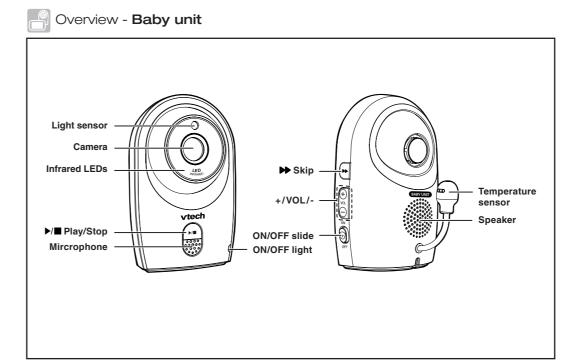

Change different views (require additional baby units - VM304)

You can view from different baby units if you have more than one baby units in your system (VM304 purchased separately).



Press $\boldsymbol{\text{VIEW}}$ to switch between the images of the baby units.







Press **PATROL** to alternately view the image from the baby units every 10 seconds.







Press SPLIT to view the images from all baby units at once.



Basic operation - Parent unit

Adjust speaker volume


Use the menu

While in the menu

a menu item, or save a setting.

 Press ▲ or ▼ to scroll up or down. Press ► to select an item.

Press +/VOL/- to adjust your parent unit speaker volume. It determines the volume of sound transmitted from your baby unit.

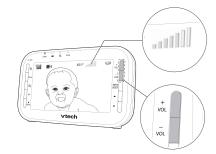



Press MENU/SELECT to enter the menu, choose

Press ◀ BACK to return to the main menu or

Zoom

Press ⊕ to zoom in or out.

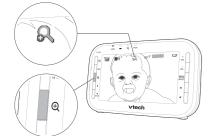

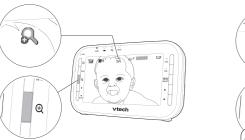

Talk to your baby unit

Press and hold TALK and speak to your parent unit. Your voice is transmitted to the baby unit.



Turn off the screen

Press and hold LCD ON/OFF to switch off the screen. You can still hear sound from the



If you drill the holes into a stud,

If you drill the holes into an object

other than a stud, insert the wall

anchors into the holes. Tap gently

on the ends with a hammer until

the wall anchors are flush with

go to step 3.

the wall.

Adjust speaker volume

Press +/VOL/- to adjust your baby unit speaker volume. It determines the lullaby volume and talkback volume transmitted from your parent unit.

Basic operation - Baby unit



Press ▶/■ to play lullaby on the baby unit. Press ➤ to skip to the other lullabies.







Turn off the baby unit

your baby unit.


Slide the ON/OFF switch to OFF to power off

Mount the baby monitor (optional)

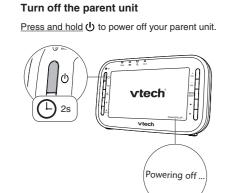

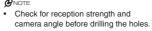

Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).

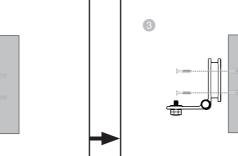


screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the

top hole.


Align the wall mount bracket and




Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.

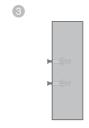

Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

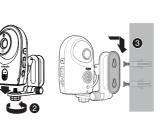

Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.

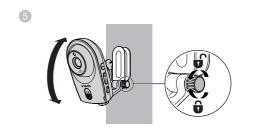

The default angle of the wall mount bracket is 90 degrees. You can maximize your baby unit's viewing angles by tilting the wall mount bracket.

Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.

