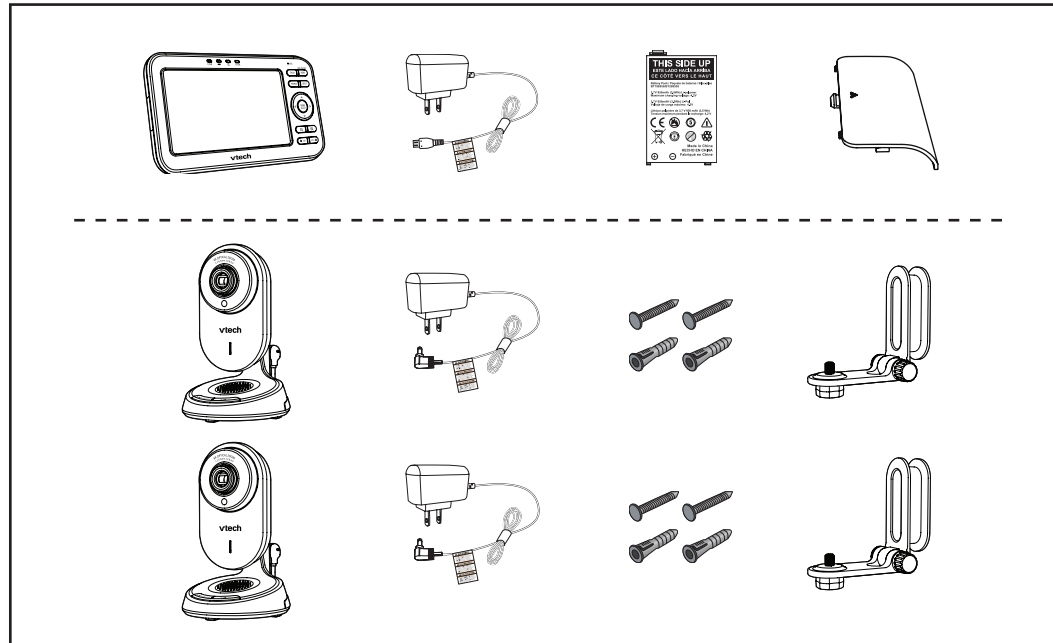VM5271-2

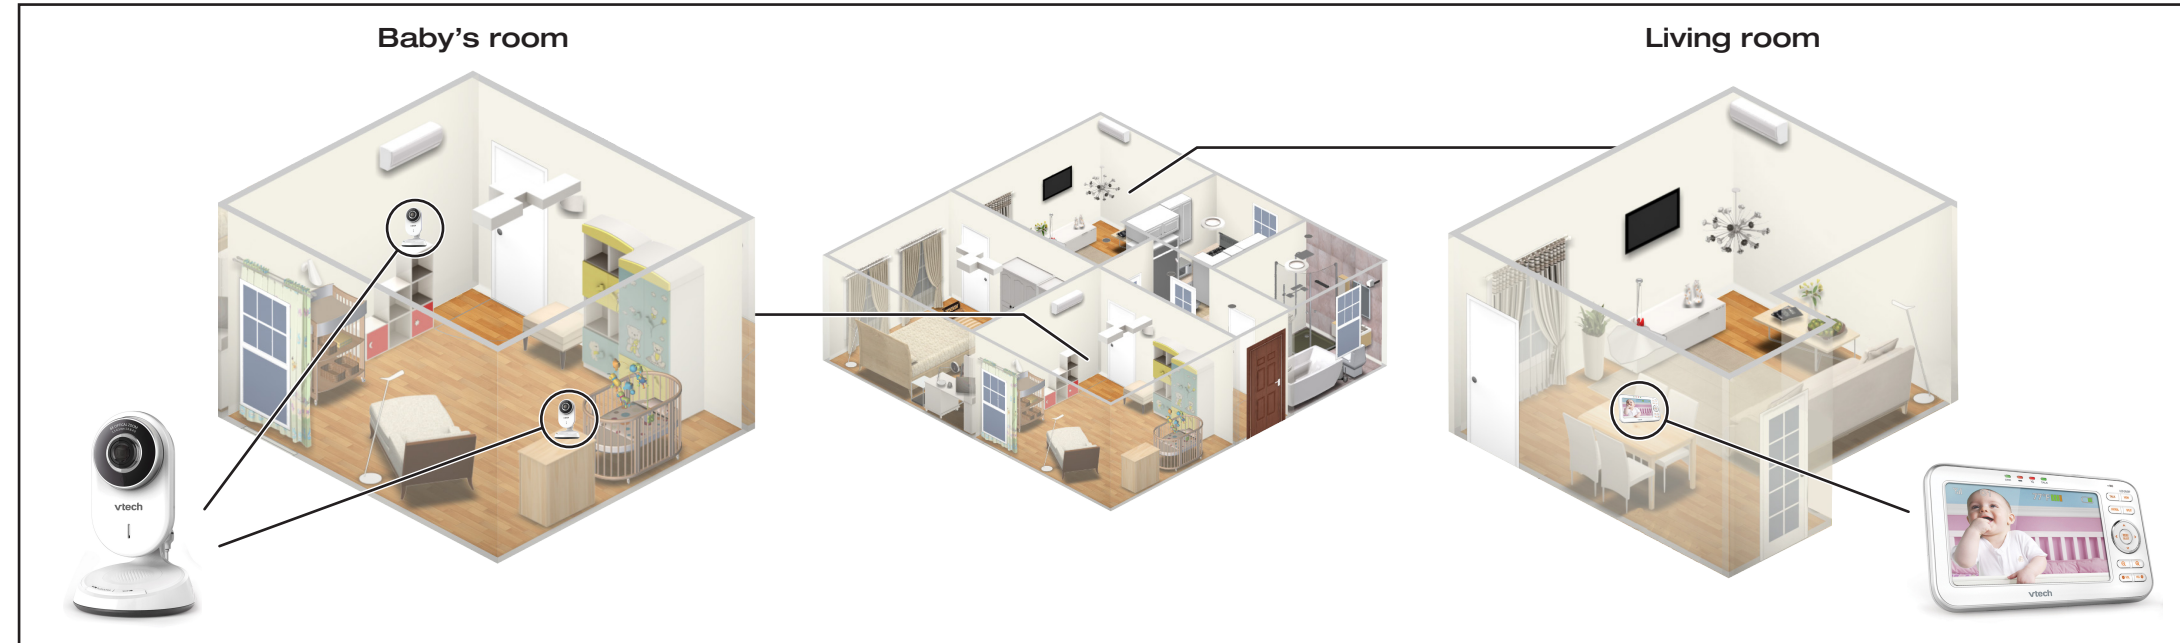# vtech®

Quick start guide

What's in the box

VM5271-2 baby monitor system

Baby's room

Living room

---

1 Connect and power on - Baby unit

CAUTION
- This baby monitoring system includes a special lens which is capable of optical zoom and requires delicate treatment. Please avoid disassembling, dropping, or any other rough handling.
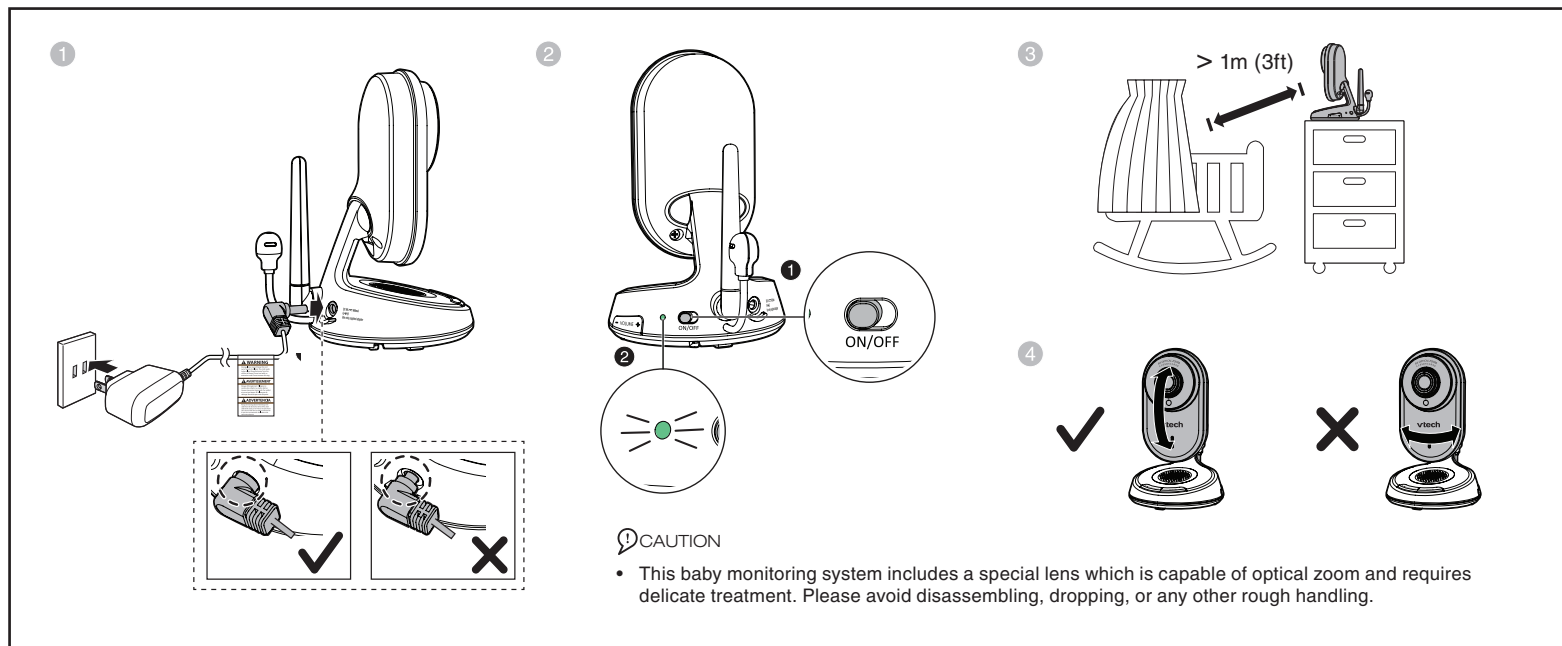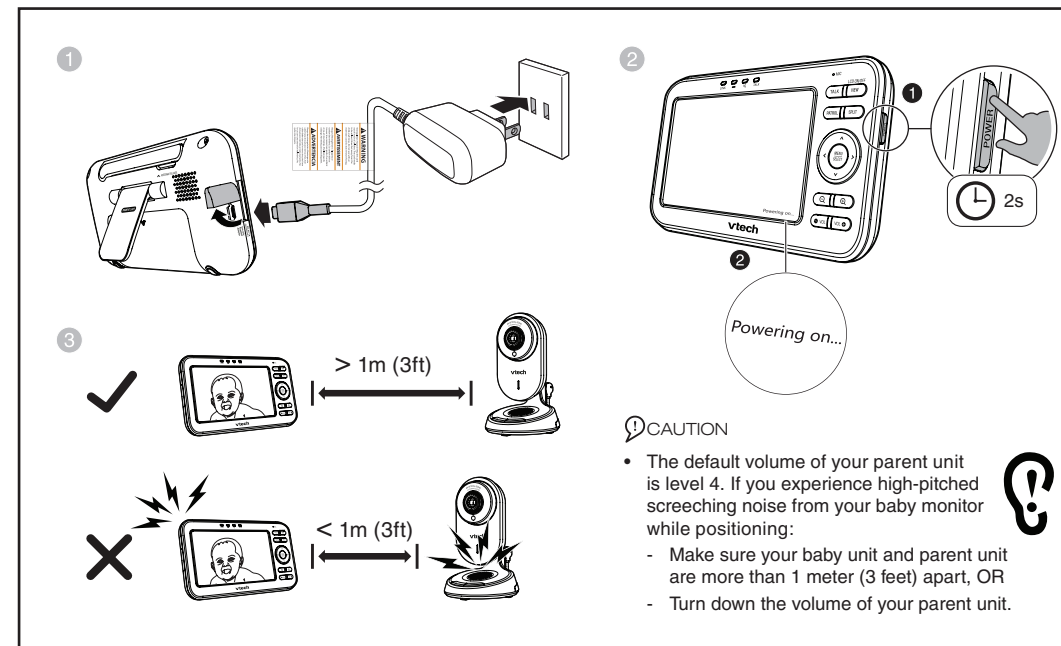
2 Install the battery

THIS SIDE UP
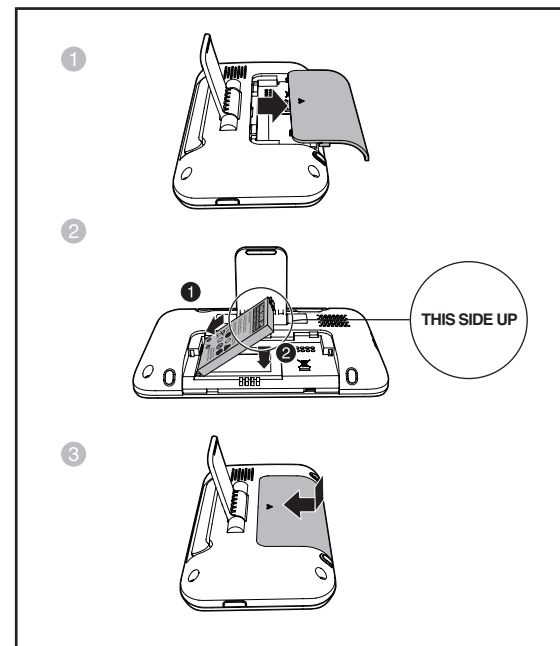
3 Connect and power on - Parent unit

Powering on...

2s

> 1m (3ft)

< 1m (3ft)

CAUTION
- The default volume of your parent unit is level 4. If you experience high-pitched screeching noise from your baby monitor while positioning:
  - Make sure your baby unit and parent unit are more than 1 meter (3 feet) apart, OR
  - Turn down the volume of your parent unit.

4 Status check

Once you power on your baby monitor, your parent unit displays image from baby unit ◎1 , and the **LINK** LED light turns on.

The **ON/OFF** LED light of baby unit ◎1 turns on. As baby unit ◎2 is not being viewed, its **ON/OFF** LED light flashes.

◎1

◎2

Change different views - View

Press **VIEW** to switch between the image of baby units ◎1 and ◎2.
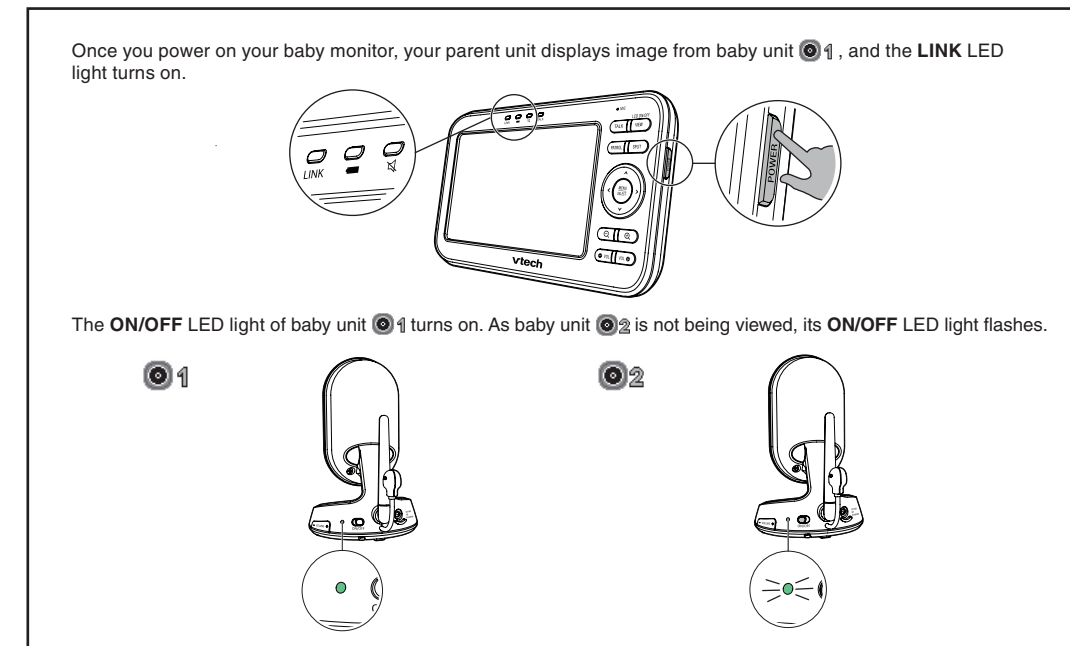
Press **VIEW**
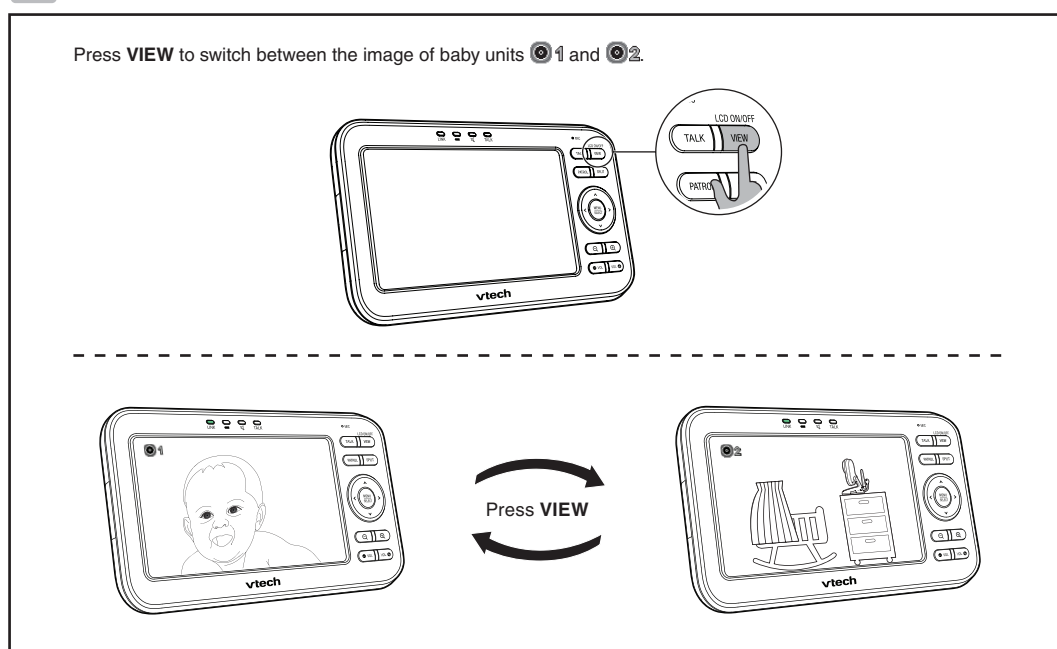
Change different views - Patrol

Press **PATROL** to alternately view the image from baby units ◎1 and ◎2 every 10 seconds.

10s

Change different views - Split

Press **SPLIT** to view the images from all baby units at once.

Dim mode

With dim mode preset to on, your parent unit display will dim after 10 minutes of inactivity to conserve energy.
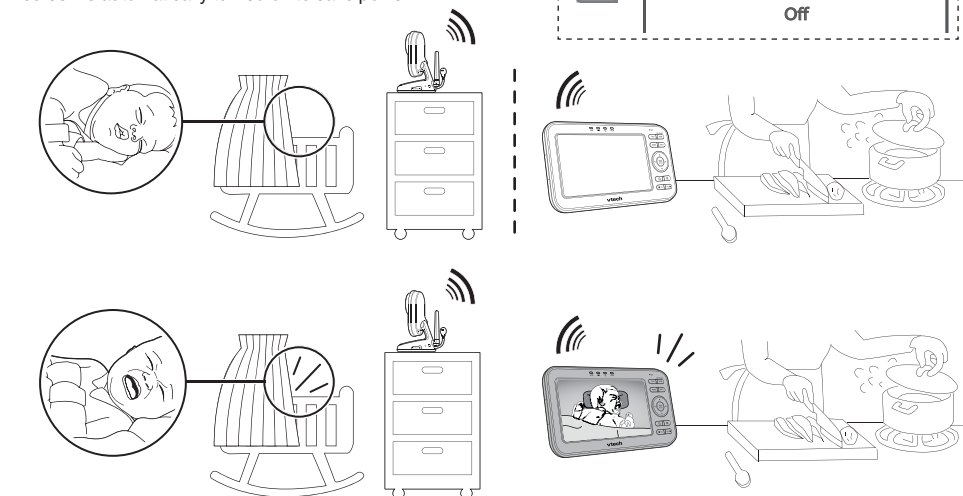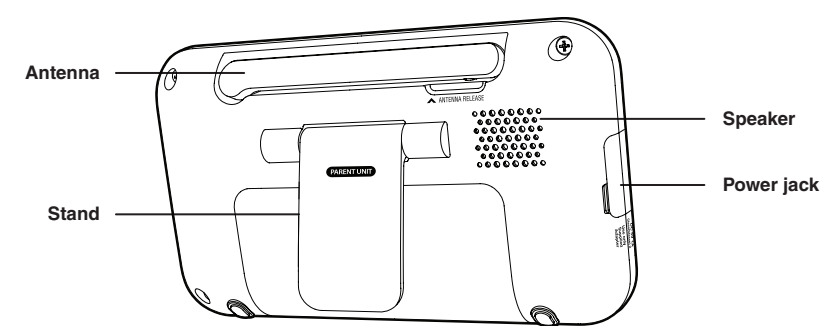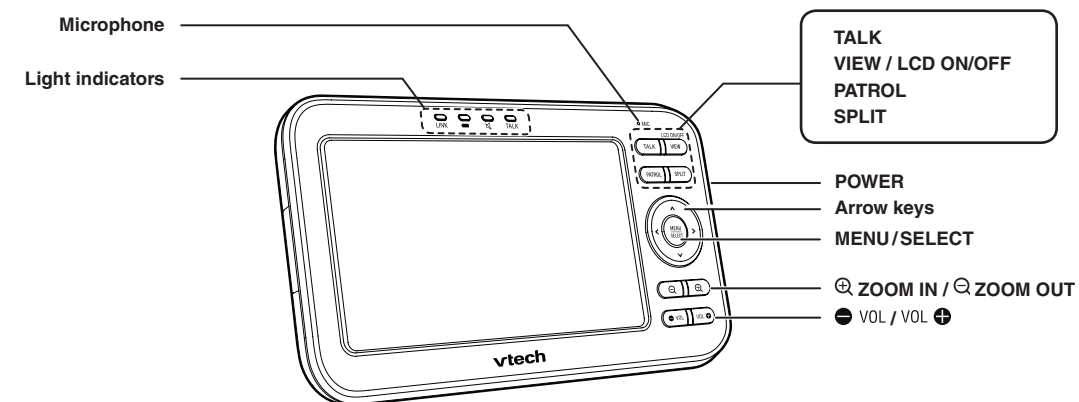

10 min inactivity

Press any buttons
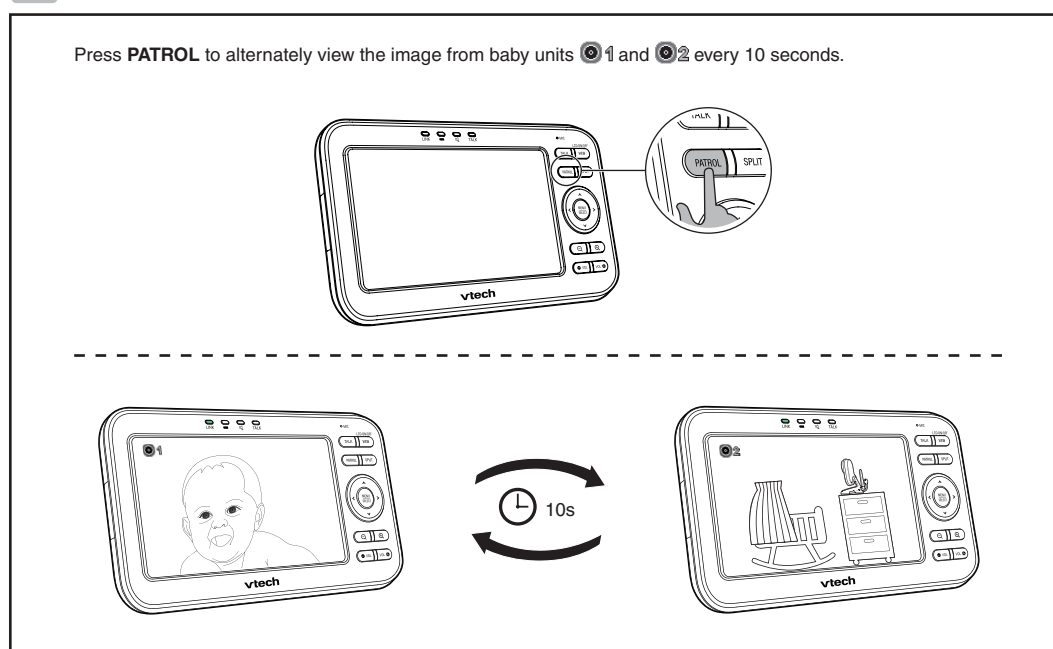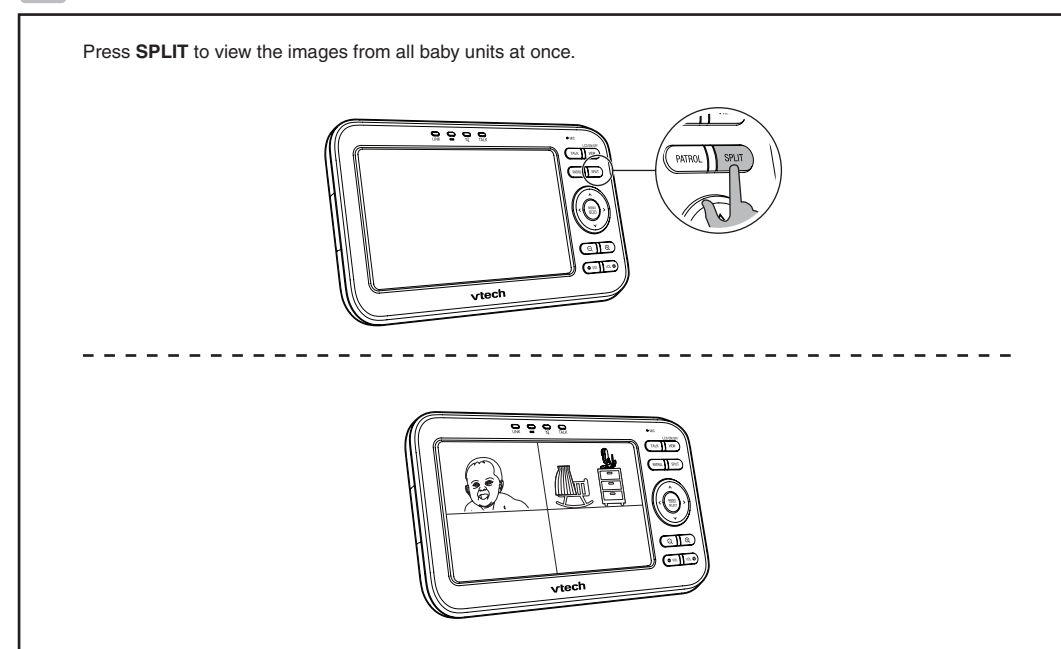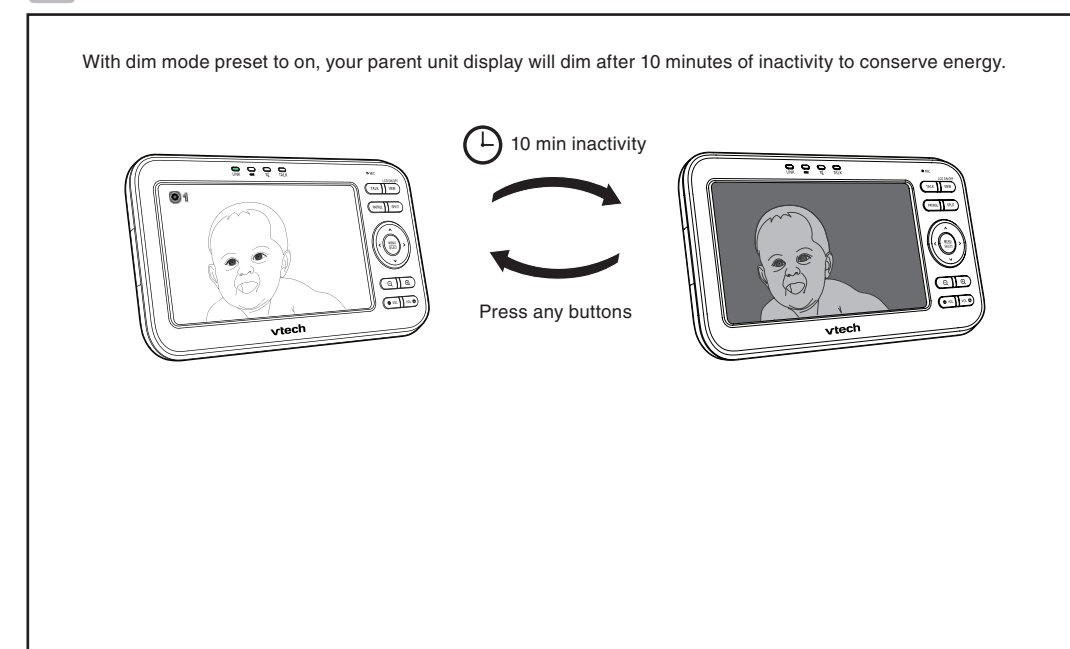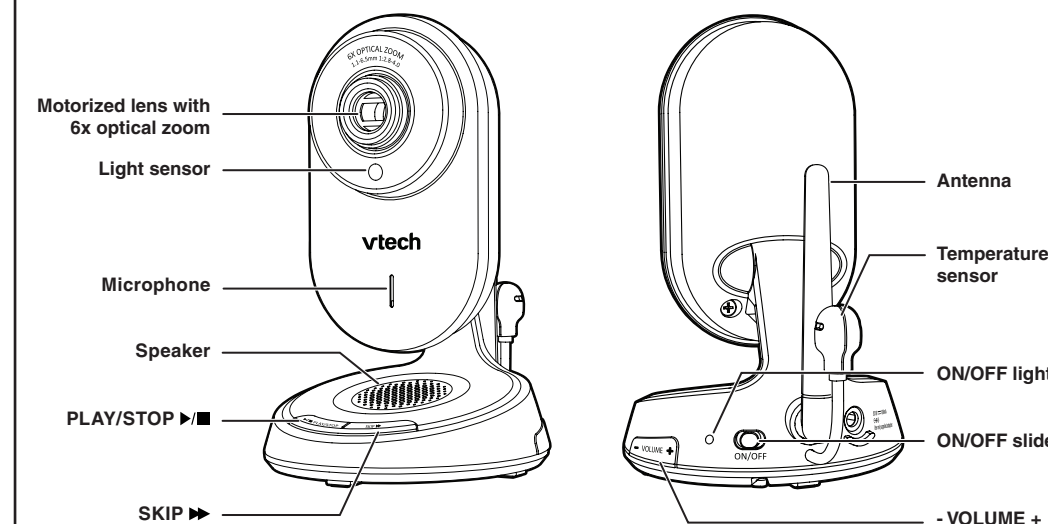
Sound activation

Automatically turns on the parent unit screen when the baby unit being viewed detects a sound after the screen is turned off. When no sound is detected within 50 seconds, the screen is automatically turned off to save power.

Sound-activated Screen
- On
- Off

Overview - **Parent unit**

- Microphone
- Light indicators
- **TALK**
- **VIEW / LCD ON/OFF**
- **PATROL**
- **SPLIT**
- **POWER**
- **Arrow keys**
- **MENU / SELECT**
- ZOOM IN / ZOOM OUT
- VOL / VOL

- Antenna
- Stand
- Speaker
- Power jack

Overview - **Baby unit**

- Motorized lens with 6x optical zoom
- Light sensor
- Microphone
- Speaker
- PLAY/STOP ▶/■
- SKIP ▶▶
- Antenna
- Temperature sensor
- ON/OFF light
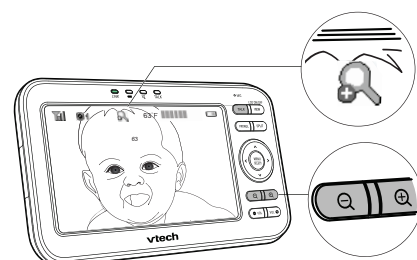- ON/OFF slide
- - VOLUME +

Basic operation - **Parent unit**

Adjust speaker volume
Press VOL / VOL to adjust your parent unit speaker volume. It determines the volume of sound transmitted from your baby units.
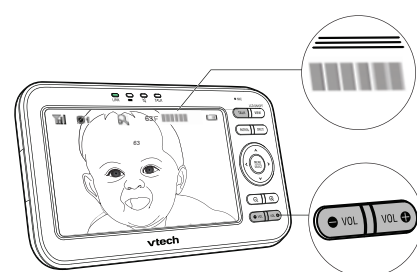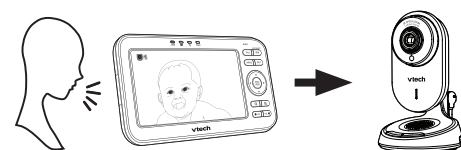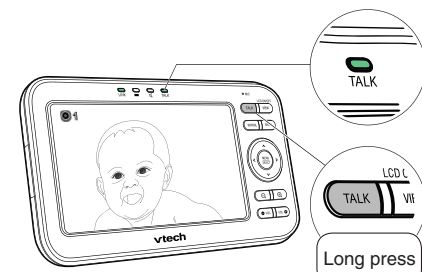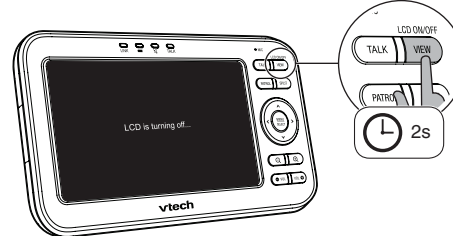
Zoom
Press to zoom in or to zoom out.

Talk to your baby unit
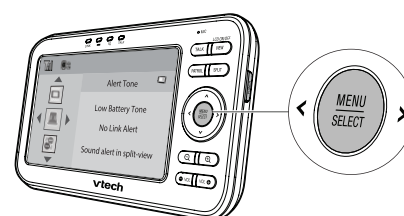Press and hold **TALK** and speak to your parent unit. Your voice is transmitted to the baby unit.

TALK

TALK V

Long press

Turn off the screen
Press and hold **LCD ON/OFF** to switch off the screen. You can still hear sound from the selected baby unit.

LCD is turning off...

2s

Use the menu
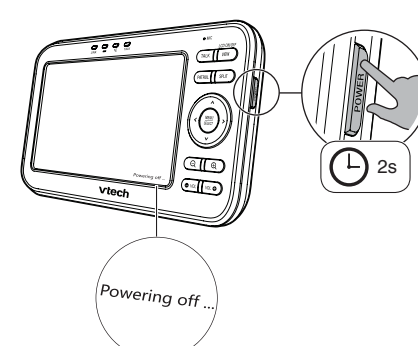Press **MENU/SELECT** to enter the menu, choose a menu item, or save a setting.

While in the menu:
- Press ∧ or ∨ to scroll up or down.
- Press ❯ to select an item.
- Press ❮ to return to the main menu or idle screen.
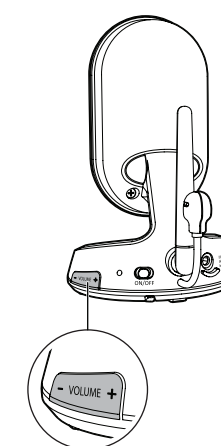
MENU SELECT

Turn off the parent unit
Press and hold **POWER** to power off your parent unit.

Powering off ...

2s

Basic operation - **Baby unit**
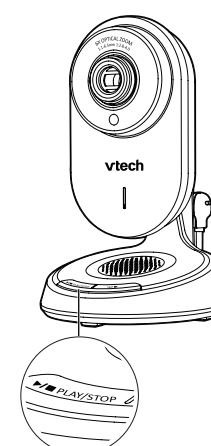
Adjust speaker volume
Press **- VOLUME +** to adjust your baby unit speaker volume. It determines the lullaby volume and talkback volume transmitted from your parent unit.
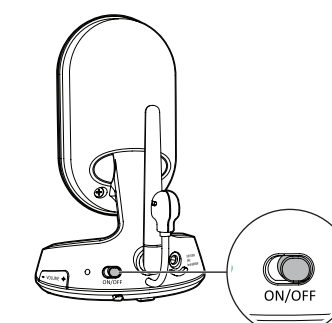
- VOLUME +

Lullaby
Press ▶/■ to play lullaby on the baby units.
- Press ▶▶ to skip to the other lullabies.
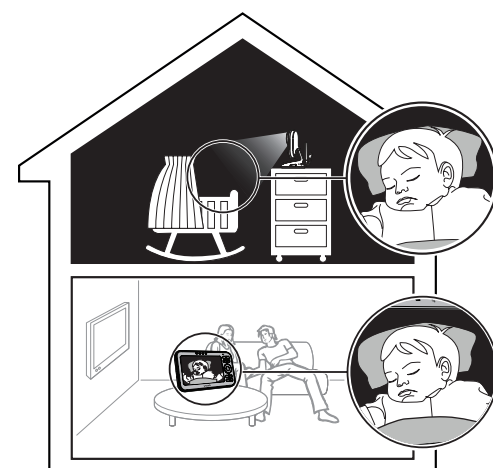- Press ▶/■ again to stop the lullaby.

PLAY/STOP

Turn off the baby unit
Slide the **ON/OFF** switch to **OFF** to power off your baby unit.

ON/OFF

Night vision

The baby unit has infrared LEDs that allow you to see your baby at night or in a dark room. When the baby unit detects low light levels, the infrared LEDs turn on automatically. The images from this baby unit is in black and white, and ☽ appears on screen.

NOTES
- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment.
- When the infrared LEDs are on, the image is in black and white. This is normal due to external light sources.

TIP
- Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle, or place the baby unit at a higher level to prevent glare and blurry display.

Mount the baby monitor (optional)

①

NOTE
- Check for reception strength and camera angle before drilling the holes.
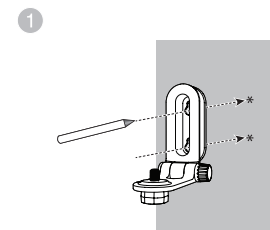
Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).

②
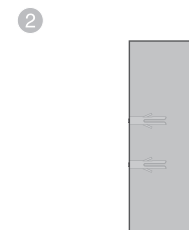
If you drill the holes into a stud, go to step 3.
-OR-
If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.
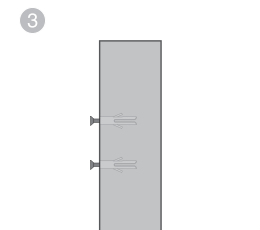
③
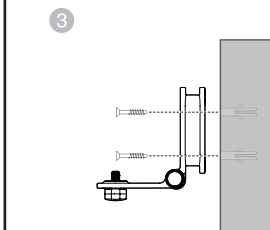
Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.
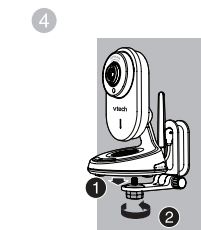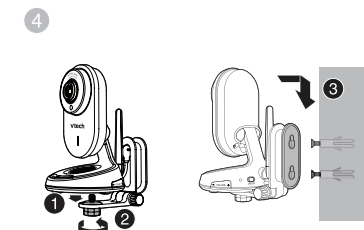
④

Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.
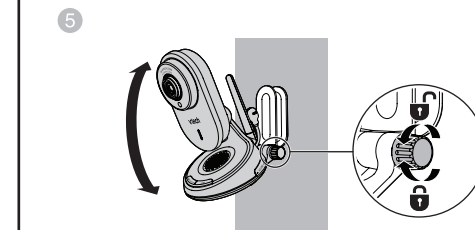
OR

③

Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

④

Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.

⑤

The default angle of the wall mount bracket is 90 degrees. You can maximize your baby unit's viewing angles by tilting the wall mount bracket.

Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.