





Mount the baby monitor

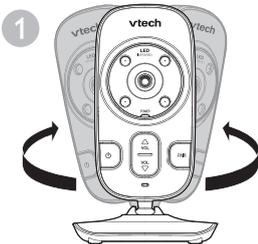


Pan or tilt to adjust the baby unit angle.

note Check for reception strength and camera angle before drilling the holes.

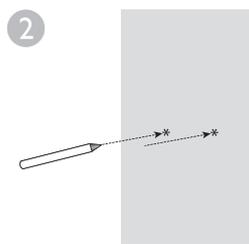


Use a pencil to mark two holes in parallel. Make sure they are the same distance apart as the wall mount at the bottom of the baby unit.

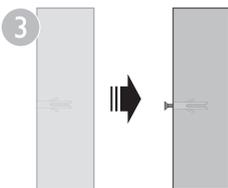

Drill two holes in the wall (7/32" drill bit). If you drill the holes into a stud, insert the screws into the holes.

Tighten the screws until only 1/4 inch of the screws are exposed.

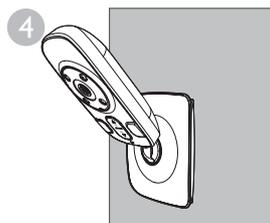

Align the holes on the wall mount with the screws on the wall.

Slide the wall mount down until it locks into place.

Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news.

VM312
VM312-2
VM302




vtech[®]
Installation guide



Specifications are subject to change without notice.
© 2014 VTech Communications, Inc.
All rights reserved. 05/14. VM312-X_IG_V1.0
Document order number: 96-009889-010-100



Parts checklist

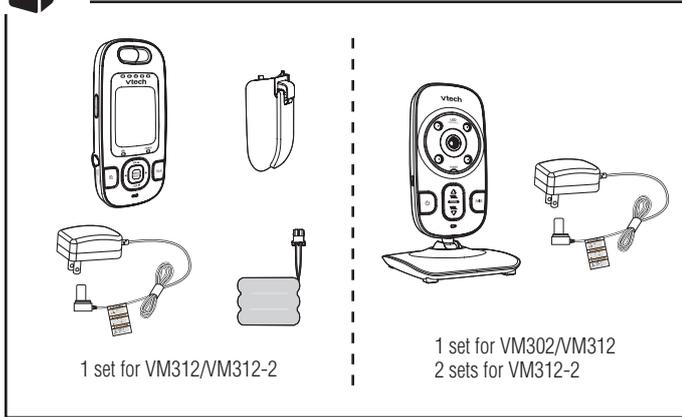

Required parts and tool



x 2



x 2



x 1

note *Parts and tool are not included, and are required to purchase separately.*



Place the baby monitor



Place the parent unit within the operating range of the baby unit. We recommend the parent unit is at least 3 feet away from the baby unit to avoid audio feedback. If you still experience audio feedback, move the parent unit and the baby unit farther apart.

note *For better image quality, do not place the baby unit too far away from your baby.*