### User's manual DM222/DM222-2

# Safe & Sound®

# **Digital Audio Monitor**







## Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.

### Register online to get an additional 3-month warranty!

Registration

### Visit www.vtechphones.com.




Register your product online for enhanced warranty support.



Learn about the latest VTech products.

### What's in the box

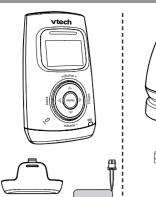






## Install the battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time

#### **Ø**NOTES

- · Use only the battery supplied with this product. • If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.
- · Without AC power charging, the battery gradually discharges, even when the parent unit is switched

## Install the battery as shown below.





 Make sure the supplied rechargeable battery with the label THIS SIDE UP facing up.





### Replace the battery


To replace the battery, unplug the battery connector from the socket, and then pull the battery out of the battery compartment. Follow the steps above to install the battery.

## Connect and charge the **battery**

#### **O**NOTES

- · Use only the parent unit power adapter or the baby unit power adapter supplied with this product.
- Make sure the electrical outlets are not controlled by wall switches
- The parent unit power adapter and baby unit power adapter are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- Make sure the parent unit, the baby unit and the power adapter cord are out of reach of children.

#### Connect the baby monitor

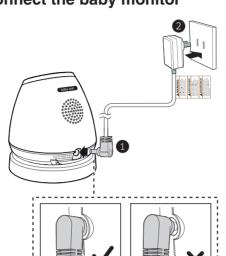

When the link between the

### Charge the parent unit battery

Once you have connected the parent unit and installed its battery, it powers on automatically. The battery icon indicates the battery status (see the following table).

### **O**NOTES

- The parent unit battery is fully charged after 11 hours of continuous charging.
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

Battery Battery Action

indicators status			
The battery icon is off.	No battery is installed. The parent unit can be used only when it is connected to AC power.	Install the parent unit battery. Charge without interruption (at least 30 minutes).	
LOW BATTERY and C flash on the screen. The flight flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).	
The battery icon becomes solid •••.	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.	

### Before use

#### **Ø**NOTE


This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such

You may test the baby monitor before initial use, and at regular times thereafter

Place the parent unit and the baby unit in he same room to test the product.


## Test your audio monitor

 Speak towards the microphone of the baby unit. You will hear the sound at the parent unit, and see the visual sound indicators light up.

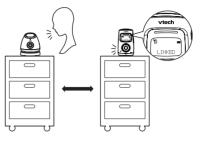


#### Positioning the baby monitor (CAUTION

- Keep the baby unit out of the reach of the baby. Never place or mount the baby unit inside the baby's crib or playpen.
- Do not expose the baby unit to extreme heat or direct sunlight.
- 1. Place the baby unit at least 1 meter / 3 feet away from your baby.

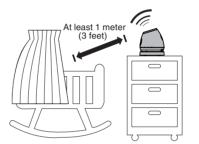

- · If you experience audio feedback on either the parent unit or baby unit, move the parent unit further away until there is no more audio feedback; or press volume - on the parent unit to lower the audio feedback sound.
- 2. Place the parent unit at least 1 meter / 3 feet away from the baby unit.



- · Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the
- 3. Press 😌 on the baby unit to turn on the projector. It projects some colorful images to the environment. Adjust the angle of the baby unit so that the images are clearly projected to the ceiling or a wall.




#### Operating range

The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions, and other interferences such as walls, doors, and other obstructions.

## Overview

#### Baby unit overview

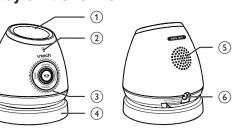

ı	_			
		When it is on, it projects some image patterns to the user environment.		
ı	'	Frojector		

#### 2 Microphone Control key panel

#### power on

Press to power on. Press and hold to power off.

Press to start or stop paging parent

### volume +

Press to increase the listening volume or lullaby volume.

## Press to decrease the listening


volume or lullaby volume.

4	M	agnetic base	
		and lullaby.	
	•	Press to turn on or off the projector	

	arra lallaby.
4	Magnetic base
5	Speaker
6	Power jack

### Parent unit overview

Microphone

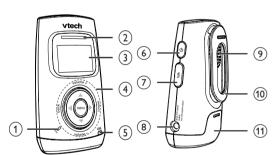

2	Visual sound indicator
	0 0 0 0
	The visual sound indicator has two functions. One is to show the sound level detected by the baby unit. The other one is to show the volume level during speaker volume setting.

#### Sound level detected by the baby unit One to three green lights indicate a moderate sound level

- detected by the baby unit. Additional red lights indicate a higher sound level detected by the baby unit (e.g. baby
- crying loudly). Speaker volume level
- One to three green lights indicate Level 1 to Level 3 of the speaker volume setting. Additional red

lights indicate **Level 4** to **Level 5** of

the speaker volume setting. LCD panel

- While in a menu, press to choose an item, or save a setting.
- the previous screen.
- Press to increase the speaker volume. While in a menu, press to scroll up.
- volume -Press to decrease the speaker

- Light on when the parent unit battery is being charged.
- Light flashes when the parent unit battery is low and needs charging.
- is fully charged, or when no battery is installed.

- Press to return to idle screen when
- unit; release to stop talking.
- idle screen.
- Speaker
- Battery compartment cover

- While in a menu, press to return to
- While in a menu, press to scroll down.

## ■ Battery level indicator

- Light off when the parent unit battery

### ம்(On/off)

- Press to power on.
- Press and hold to power off.
- the parent unit is in use.
- Press and hold to talk to the baby
- While in a menu, press to return to Power jack
- Belt clip

## Control key panel

- Press to enter the menu while idle.
- Press to return to idle screen.
- Displays when the projector of the baby unit is on.

Parent unit display icons

Connection status

idisplays when strong signal

baby unit and the parent unit.

baby unit and the parent unit.

T displays when the weak link

strength is detected between the

Ti displays when moderate signal

strength is detected between the

signal strength is detected between

T flashes when the link between the

baby unit and the parent unit is lost.

the baby unit and the parent unit.

## Sound alert

Displays when the sound alert of the parent unit is turned on. Flashes when there are sounds

detected from the baby unit and the

- parent unit is in mute. Vibration alert **b** Displays when the vibration alert of the parent unit is turned on. Flashes when there are loud
- $\checkmark$ 
  - Displays when the volume is turned

sounds detected from the baby unit.

#### **Battery status**

animates when the battery is charging. displays solid when the battery

is fully charged.

is no battery installed.

displays when battery is in low level and needs charging. No battery icon displays when there

#### Parent unit display screen messages

Same do E 12 "Standard"	parent unit and the baby unit is established.
LOW BATTERY	The parent unit uses only the rechargeable battery pack and it needs to be recharged.
NOT LINKED	When the link between the parent unit and the baby unit is lost continuously for over 10 seconds.
PAGING	All idle parent units are being paged by the baby unit.
SAVED	Your selection has been saved.
SEARCHING	The parent unit is out of range of the baby unit, or the baby unit is out of power.
TALK	The parent unit is talking to the baby unit.
TALKBACK	The other parent unit is talking to the baby unit.

## Press power on to turn on the baby unit. The power on lights up.



- Power on or off the parent unit • Press  $\odot$  to power on the parent unit. The
- screen turns on. Press and hold  $\Phi$  again to power off the



### **⊘**NOTE

The parent unit powers on automatically once it is connected to AC power or battery installed connected to AC power.

speaker volume is preset to **VOLUME 3**.

· Press volume + or volume - when the

unit at any time.

screen displays 🔩.

#### Adjust the sound sensitivity of the baby unit Using the baby monitor

## Power on or off the baby unit



The baby unit also powers on automatically once

#### Adjust the speaker volume for parent unit You can adjust the speaker volume from **VOLUME 1** to **VOLUME 5**, or turn it off. The

Adjust the speaker volume for baby unit

· Press volume + or volume - on the baby

parent unit is not in use. When the speaker volume is set to off, the

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound

Sensitivity | Description

High sensitivity level

louder sounds from your

baby. It remains quiet

when your baby makes

urns on for loud crying or

screeching sounds from

when your baby makes

your baby. It remains quiet

#### sensitivity is preset to **LEVEL 5**. Sound sensitivity table for reference

Level 5	ser	nsitivity	The parent unit speaker is constantly on, and you we hear all sounds (including background noises) from your baby's room.
Level 4			Medium high sensitivity level The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.
Level 3			Medium sensitivity leven. The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quit when your baby makes soft sounds.
Level 2			Medium low sensitivity level The parent unit speaker turns on for crying and

soft sounds. Low sensitivity level The parent unit speaker

Level 2

Level 7

1. Press **menu** when the parent unit is not in use.

Press select.

- 3. Press volume + or volume to choose the sensitivity level.
- Press select to confirm your selection.

sensitivity soft sounds.

### To enter the sensitivity menu of the parent unit,

Sound alert Sound alert feature works only when the parent unit is in mute.

the baby unit must be turned on

beeps when the baby unit detects sounds which light up four sound level indicators on the parent

If you turn on the sound alert, the parent unit

- When the sound alert of the parent unit is turned on, ( displays. The sound alert is preset to OFF.
- 1. Press **menu** when the parent unit is not in 2. Press volume + or volume - to choose
- 3. Press volume + or volume to choose ON 4. Press **select** to confirm your selection. The

screen displays SAVED and you hear a

**SOUND ALERT**, then press **select**.

#### confirmation tone. **Ø**NOTE

Vibration alert

 The sound alert setting on each parent unit is independent.

#### parent unit vibrates when the baby unit detects sounds which light up four sound level indicators on the parent unit.

When the vibration alert of the parent unit is turned

3. Press volume + or volume - to choose ON

You can turn on the vibration alert so that the

- on, a displays. The vibration alert is preset to 1. Press **menu** when the parent unit is not in
- 2. Press volume + or volume to choose VIBE ALERT, then press select.
- 4. Press **select** to confirm your selection. The screen displays **SAVED** and you hear a confirmation tone.

## **O**NOTES

- Each time you set the vibration alert to ON, the parent unit vibrates briefly after you press **select**. • We recommend you not to turn on the vibration alert and the lullaby at the same time, as the lullaby will trigger the vibration alert frequently
- The vibration alert setting on each parent unit is

## Language

You can select a language (English, French or Spanish) to be used in all screen displays. The language is preset to **English**.

- 1. Press **menu** when the parent unit is not in
- LANGUAGE, then press select. Press volume + or volume - to choose ENGLISH, FRANCAIS or ESPANOL.

2. Press **volume** + or **volume** - to choose

4. Press select to confirm your selection. The

#### screen displays SAVED and you hear a confirmation tone.

independent

Set default

• The language setting on each parent unit is

#### Restoring the default settings on one parent unit will also reset the shared settings for sensitivity of

Use this feature to restore to the default settings.

the other parent unit. 1. Press **menu** when the parent unit is not in

**DEFAULT**, then press **select**.

3. Press **volume** + or **volume** - to choose **YES** 4. When you choose **YES**, press **select** to

2. Press volume + or volume - to choose SET

confirm your selection. You hear a confirmation

tone and then the screen displays **LINKED**.

#### When you choose **NO**, press **select** to confirm your selection. The screen displays the previous

### Projector and lullaby

You can turn on the projector and lullaby on the baby unit. The baby unit projects colorful images to the environment, and plays the lullaby to comfort your baby.

When the projector is turned on, grain displays on the

- parent unit screen. The baby unit will play lullaby. Press once to turn on the projector and play lullaby. The interesting and colorful images is projected at the same time.
- Press again to stop playing the lullaby. The baby unit keeps projecting the colorful
- Press for a third time to turn off the projector. The interesting and colorful images fade out.

## **Ø**NOTES

- · The projector and lullaby will automatically turn off after 15 minutes
- We recommend you not to turn on the vibration alert and the Jullaby at the same time, as the lullaby will trigger the vibration alert frequently.
- If the baby unit receives talkback from the parent unit during lullaby playback, the lullaby will be paused. It resumes after the talkback finishes.

#### Talk to the baby unit

You can broadcast messages from a parent unit to the baby unit and the other parent unit. If you have two parent units, you can use both of them at the same time to talk to the baby unit

 Press and hold talk on the side of the parent unit. The screen displays TALK when the voice connection to the baby unit is made. Speak towards the **mic** on the parent unit. Your voice is broadcast to the baby unit and the other parent unit.

### **Ø**NOTES

- · If the speaker volume of the parent unit is set to VOLUME OFF, it will be reset to the default **VOLUME 3** when you press and hold **TALK**.
- When a parent unit is talking to the baby unit, it is also broadcast to the other parent unit. However, sounds from the baby unit cannot be transmitted to the parent units at the moment

#### Find/page the parent unit

Use this feature to find misplaced parent units. Press **page** on the baby unit. All idle parent

- units ring and display **PAGING**.
- 2. To end paging, press any key on the parent unit, or press **page** on the baby unit.

- Paging rings all parent units even if the speaker volume of parent unit is set to **VOLUME OFF**.
- The baby unit cannot page any parent unit that is turned off, out of range or talking to the baby unit.

### General product care

To keep this product working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors
- DO NOT expose it to direct sunlight or moisture. Avoid dropping the product or treating it roughly.
- Clean with a soft cloth.
- DO NOT immerse the parent unit and the baby
- unit in water and do not clean them under the tap. DO NOT use cleaning spray or liquid cleaners.
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

### Storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place

## Frequently asked questions

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com or call 1 (800) 595-9511 for customer service.

unit?

Why does the

baby monitor

high-pitched

Why does the

too quickly to

other sounds?

Why does

the parent

unit vibrate

the lullaby is

turned on?

frequently when

l parent unit react

produce a

noise?

(,		
Why does the baby monitor not respond normally?	Try the following (in the order listed) for common cure:  1. Disconnect the power to the baby unit and the parent units.  2. Remove the batteries in the parent units. Then, install the batteries again.  3. Wait a few minutes before connecting power back to the baby units and the parent unit.  4. Turn on the baby unit and the parent units.  5. Wait for the parent units to synchronize with the baby unit. Allow up to one minute for this to take place.	
Why doesn't the screen of the parent unit go on when I switch on the unit?	Perhaps the rechargeable battery of the parent unit is empty and the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket.	
Why doesn't the power on light of the baby unit go on when I switch on the	Perhaps the baby unit is not connected to the mains. Connect the baby unit to the mains.	

The units may be too close to

each other. Make sure the parent

unit and the baby unit are at least

1 meter/3 feet away from each

The baby unit also detects other

sounds than those of vour babv

lower level or adjust the speaker

The lullaby will trigger the vibration

alert frequently. Avoid using lullaby

and vibration alert at the same

Adjust the sensitivity level to a

volume on the parent unit.

## Important safety nstructions

Why don't I

hear a sound/

my baby cry?

Why does the

parent unit

Why can't I

establish a

connection?

Why is the

connection lost

every now and

then? Why are

there sound

interruptions?

beep?

Why can't I hear

The volume of the parent unit

volume + to increase the volume

You may have set a low sound

sensitivity level. See Adjust the

sound sensitivity of the baby

If the parent unit is in mute and

there is sound detected from the

The baby units may be out of

closer to the baby units (but not

range. Move the parent unit

If the parent unit is powered

by the provided battery, it may

not have enough charge for the

parent unit to perform normally

The baby units may be out of

closer to the baby units (but not

range. Move the parent unit

Other electronic products may

cause interference with your baby

nonitor. Try installing your baby

nonitor as far away from these

electronic devices as possible

unit for up to 11 hours.

less than 3 feet).

Charge the battery in the parent

the sound alert feature is on.

unit to change the setting.

may have set too low. Press

level

baby unit.

less than 3 feet)

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Follow all warnings and instructions marked on the product.
- Adult setup is required.
- 3. This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- 4. This product is not intended for use as a medical monitor.
- . Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower
- 6. **CAUTION**: Use only the batteries indicated in this manual. There may be a risk of explosion

if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT166342/ BT266342) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the information in The RBRC® seal.

- 7. Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Input 100-120V AC 150mA 60Hz; Output: 6V DC 600mA; Parent unit power adapter: Input 100-120V AC 150mA 60Hz; Output: 6V DC 400mA.
- 8. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet
- 9. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible
- 10.Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 11. Unplug the power cords before replacing batteries. 12.Do not cut off the power adapters to replace
- them with other plugs, as this causes a hazardous situation 13.Do not allow anything to rest on the power
- cords. Do not install this product where the cords may be walked on or crimped.
- 14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
- 15.Do not overload wall outlets or use an extension cord.
- 16.Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 17. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
- 18. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

19.To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used

- 20. You should test the sound reception every time you turn on the units or move one of the components
- 21.Periodically examine all components for damage.
- 22.Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery monitors. cordless phones, scanners, etc.
- 23. Children should be supervised to ensure that they do not play with the product.
- 24. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

#### SAVE THESE INSTRUCTIONS

#### Cautions

- 1. Use and store the product at a temperature between 32°F and 104°F
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
- 3. Batteries should not be exposed to excessive heat such as bright sunshine or fire
- 4. Make sure the baby unit(s) and the adapter cord(s) are always out of reach of the baby. at least 3 feet away from the baby or crib, to avoid a possible strangulation hazard. 5. Never place the baby unit(s) inside the
- baby's crib or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket
- 6. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones. intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

#### Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

#### **Pacemaker patients**

- Should keep wireless devices at least six inches from the pacemaker
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

#### Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

#### The RBRC® seal

The RBRC® seal on the nickel-metal battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used nickel-metal batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please cal 1 (800) 8 BATTERY® for information on Ni-MH battery

recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources. RBRC® and 1 (800) 8 BATTERY®



are registered trademarks of **Rechargeable Battery Recycling** Corporation.

## FCC and IC regulations

#### FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

- Increase the separation between the equipment
- and receiver. Connect the equipment into an outlet on a circuit
- different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV
- technician for help Changes or modifications to this equipment not

expressly approved by the party responsible for compliance could void the user's authority to operate

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face.

This Class B digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B)

#### **Industry Canada**

This device complies with Industry Canada licenceexempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation. The term "IC:" before the certification/registration

number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

## RF radiation exposure statement

The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

## California Energy Commission attery charging testing mode

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption Your baby monitor is set up to comply with the energyconserving standards right out of the box Follow the instructions to install and charge the

activated while charging Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is powered off and charging.

battery. The CEC battery charging testing mode is

## For cETL compliance only

#### Mesures de sécurité importantes

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie. d'électrocution et de blessures corporelles, dont ceux qui suivent:

1. Observez toutes les instructions et mises en garde

- inscrites sur l'appareil. 2. L'installation par un adulte est requise.
- 3. Ce produit a été concu pour être un dispositif d'appoint seulement. Il n'est pas le remplacement
- d'une supervision responsable et adéquate par un adulte et ne devrait pas être utilisé comme telle. 4. Ce produit n'est pas conçu pour être utilisé en tant que moniteur médical.
- 5. N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un soussol humide ou une douche.

6. MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour l'unité du parent. N'utilisez que le bloc-piles rechargeable inclus ou le bloc-piles de rechange (BT166342/BT266342). N'incinérez pas les piles. Celles-ci risqueraient d'exploser. Jetez les piles usées selon les renseignements suivant le sceau du RBRCMD

N'utilisez que les adaptateurs inclus avec ce

produit. L'utilisation d'un adaptateur dont la

- polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril. Adaptateur de l'unité du bébé: Entrée 100-120V CA 150 mA 60 Hz; Sortie: 6 V CC 600 mA. Adaptateur de l'unité du parent: Entrée 100-120V
- CA 150 mA 60 Hz; Sortie : 6 V CC 400 mA. Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuici est branché dans une prise au plafond, sous une table ou dans un
- Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant.
- 10. Débranchez ce produit de la prise de courant avant de procéder au nettovage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide pour le nettoyer.
- 11. Débranchez les cordons d'alimentation avant de remplacer le bloc-piles.
- 12. Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel. 13. Ne laissez aucun objet reposer ni appuyer sur le
- cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser le cordon d'alimentation ou de le piétiner 14. Ne faites fonctionner cet appareil qu'avec le type
- d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'électricité.

15. Ne surchargez pas les prises de courant murales

- ni les rallonges électriques. 16. Ne placez pas cet appareil sur un chariot, meuble trépied, support de montage ni table chancelants.
- 17. Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et

n'empêchez pas l'aération adéquate de l'appareil en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air. N'enfoncez jamais d'objets à travers les ouvertures

contact avec des points de tension dangereux ou

causer des courts-circuits qui peuvent dégénérer

en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit. 19. Afin de réduire les risques d'électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par

de cet appareil, car ils pourraient entrer en

- la suite présenter des risques d'électrocution. 20. Vous devriez tester la réception chaque fois que vous mettez l'appareil en fonction
- 21. Examinez les composantes afin de vérifier si celles-ci ne sont pas endommagées.
- 22. Soyez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les conversations peuvent être entendues par d'autres moniteurs de bébé, des téléphones sans fil, des scanneurs, etc.
- 23. Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil.
- 24. Le produit n'est pas concu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances. à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité

### CONSERVEZ CES INSTRUCTIONS

### Mises en garde

- 1. Utilisez et entreposez le produit à une température entre 0° C (32°F) et 40°C (104° F).
- 2. N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage
- 3. Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu.

4. Assurez-vous que le moniteur et le cordon de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3 pieds) de l'enfant ou du berceau, pour éviter tout risque de strangulation.

5. Ne jamais placer le moniteur à l'intérieur du

berceau ou du parc de bébé. Ne jamais couvrir le

moniteur ou l'unité (s) portative avec un article tel une serviette ou une couverture. 6. D'autres équipements électroniques peuvent produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones,

ordinateurs personnels, électroménagers et

Les simulateurs cardiaques (ne s'applique qu'aux

### téléphones sans fil. Stimulateurs cardiaques implantés dans

dispositifs numériques sans fil): L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante. a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des Etats-Unis, la firme

#### Avis aux détenteurs de stimulateurs cardiaques

- · Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci.

#### Champs électromagnétiques (EMF) Ce produit de VTech est conforme à toutes les normes

se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce quide, son utilisation sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.

## Limited warranty

## What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the

#### What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

United States of America and Canada.

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

## How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

#### What is not covered by this limited warranty? This limited warranty does not cover:

1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or Product that has been damaged due to repair,

authorized service representative of VTech; or

Product to the extent that the problem experienced

is caused by signal conditions, network reliability, or cable or antenna systems: or 4. Product to the extent that the problem is caused by use with non-VTech accessories; or

5. Product whose warranty/quality stickers, product

serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for

repair from outside the United States of America

or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or Product returned without a valid proof of purchase (see item 2 on the next page); or 8. Charges for installation or set up, adjustment of

customer controls, and installation or repair of

#### systems outside the unit. How do you get warranty service?

features may save you a service call

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377 **NOTE:** Before calling for service, please review the

user's manual - a check of the Product's controls and

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited

## warranty service?

- along with a description of the malfunction or difficulty; and 2. Include a "valid proof of purchase" (sales receipt)
- address, and telephone number.

### alteration or modification by anyone other than an

agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There

#### should not rely on any such modification State/Provincial Law Rights: This warranty gives you

specific legal rights, and you may also have other rights, which vary from state to state or province to province. Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/ provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above

#### Please retain your original sales receipt as proof of purchase.

limitation or exclusion may not apply to you.

# Technical specifications

control	
Transmit	Baby unit: 1921.536-1928.448 MHz
frequency	Parent unit: 1921.536-1928.448 MHz
Channels	5
LCD	35 (x) x 21.2 (y) mm B&W LCD
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirement	Parent unit: 2.4 V Ni-MH battery Baby unit power adapter: Input: 100-120V AC 150mA 60Hz Output: 6V DC 600mA Parent unit power adapter: Input: 100-120V AC 150mA 60Hz Output: 6V DC 400mA

## What must you return with the Product to get

- 1. Return the entire original package and contents including the Product to the VTech service location
- identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing

#### This warranty is the complete and exclusive

are no other express warranties. No one is authorized to make modifications to this limited warranty and you

Crystal controlled PLL synthesizer

All rights reserved. 10/15. DM222\_CIB\_V5.0

© 2015 VTech Communications, Inc. Document order number: 91-008575-050-100

Specifications are subject to change without notice.