Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

vtech

DM226 DM226-2

Safe & Sound Digital Audio Monitor








Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.

What's in the box

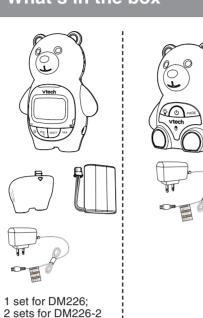

The parent unit runs on rechargeable battery or


Install the battery

AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time

PNOTES

- Use only the battery supplied with this product.
- · The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent unit to AC power
- · If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.


Install the battery as shown below

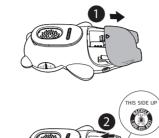



. Make sure the THIS SIDE UP is facing up while inserting the battery.





Replace the battery


To replace the battery, pull out the battery compartment cover, and then lift up the battery Follow the previous steps to install the battery.

Connect and charge the battery


PNOTES

- Use only the power adapters supplied with this product
- Make sure the electrical outlets are not controlled by wall switches.
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

Connect the baby monitor

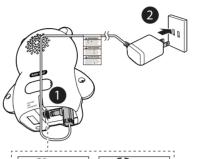



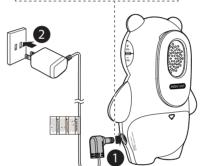

Before use

ØNOTE


• This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

Test your baby monitor

You may test the baby monitor before initial use, and at regular times thereafter.

() CAUTION

For hearing protection, make sure the parent unit is more than 2 meters (6.5 feet) away from the baby unit. If you hear any high-pitched noise, move the parent unit further until the noise stops. You can also press vol on the parent unit to lower or mute the noise.

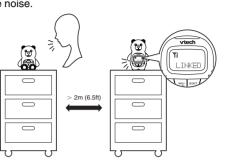

- 1. Make sure your baby unit and parent unit are
- 2. Speak towards the microphone of the baby unit. You will hear the sound at the parent unit, and see the visual sound indicators light up.



When the parent unit displays NOT LINKED and ¶ flashes, move the parent unit closer to the baby unit (observe the minimum distance of 2 meters/ 6.5 feet). You can also check if the baby monitor is connected to a live power socket and switched on.

CTIP

· Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the


Place the baby unit more than 1 meter (3 feet) away from your baby.

Positioning the baby monitor


baby's crib or playpen.

Keep the baby unit out of the reach of the baby.

Never place or mount the baby unit inside the

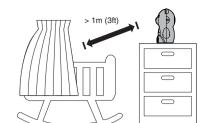

Place the parent unit more than 2 meters






you experience high-pitched screeching noise from your baby monitor while positioning: Make sure your baby unit and parent unit are more than 2 meters (6.5 feet) apart, OR

Turn down the volume of your parent unit.

The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range

Overview

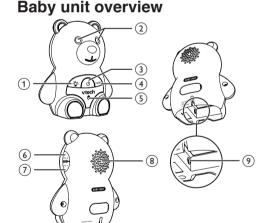

1	-ò-		
	Press to turn the night light on or off.		
2	Night light		
	On when night light is turned on manually.		
	Off when night light is turned off manually.		

∪் On/off Press to power on, the power light turns on. Press and hold to power off, the power

light turns off.

PAGE Press to start or stop paging parent unit.

Microphone

VOL+


Press to increase the speaker volume.

VOL-

 Press to decrease the speaker volume.

Speaker Power jack

Parent unit overview

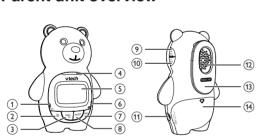

1	Microphone

| 也 On/off

- Press and hold to power on, the screen turns on
- screen turns off. While in a menu, press to return to idle screen.

Press and hold to power off, the

- Press to enter the menu while idle. While in a menu, press to return to the
- previous screen. Press to return to idle screen.

Visual sound indicator

The visual sound indicator has two functions. One is to show the sound level detected by the baby unit. The other one is to show the volume level during speaker volume setting.

Sound level detected by the baby unit

- One to three green lights indicate a moderate sound level detected by the baby unit.
- Additional red lights indicate a higher sound level detected by the baby unit (e.g. baby crying loudly).

Speaker volume level

- One to three green lights indicate **Level 1** to **Level 3** of the speaker volume setting.
- Additional red lights indicate Level 4 to Level 5 of the speaker volume setting.

LCD panel

idle screen

- **Ⅲ** Battery level indicator
- Light on when the battery is being charged.
- Light flashes when the battery is low and needs charging.
- Light off when no battery is installed, or abnormal battery is detected.
- **TALK**
- Press and hold to talk to the baby unit; release to stop talking. While in a menu, press to return to

SELECT While in a menu, press to choose an item, or save a setting.

9

VOL Press to increase the speaker volume. While in a menu, press to scroll up.

· Press to decrease the speaker

· While in a menu, press to scroll down.

11 Power jack 12 Speaker

13 | Belt clip

14 Battery compartment cover

Parent unit display icons

- Connection status Il displays when strong signal strength is detected between the
 - baby unit and the parent unit. I displays when moderate signal strength is detected between the baby unit and the parent unit.
 - T displays when the weak signal strength is detected between the
 - baby unit and the parent unit. T flashes when the link between the baby unit and the parent unit is lost.

Night light On when the night light is turned on.

(\bullet)

- Sound alert Displays when the sound alert of the
- parent unit is turned on. Flashes when there are loud sounds detected from the baby unit

- Displays when the vibration alert of the parent unit is turned on.
 - Flashes when there are loud sounds detected from the baby unit.

Vibration alert

Displays when the volume is turned

■■■ Battery status

⇒ animates when the battery is charging.

displays solid when the battery is

- fully charged. flashes when the battery is charged with AC adaptor, or
- charging is failed. flashes when the battery is in low level and needs charging.
- No battery icon displays when there is no battery installed, or abnormal battery is detected.

Parent unit display screen messages

		LINKED	The link between the parent unit and the baby unit is established.
		LOW BATTERY	The parent unit uses only the rechargeable battery pack and it needs to be recharged.
		NOT LINKED	The link between the parent unit and the baby unit is lost continuously for over 10 seconds.
		PAGING	All idle parent units are being paged by the baby unit.
		SAVED	Your selection has been saved.
	SEARCHING	The parent unit is out of range of the baby unit, or the baby unit is out of power.	
		TALK	The parent unit is talking to the baby unit.
1		TALKBACK	The other parent unit is talking to

the baby unit.

Using the baby monitor

Charge the parent unit battery

When you have connected the parent unit and

on automatically. The battery icon indicates the

installed its battery for the first time, it powers

• The parent unit battery is fully charged after 11

It takes longer to charge the battery when the

time, turn the parent unit off while charging.

The standby time varies depending on the

No battery is

installed but

AC power

Abnormal

battery is

detected.

The battery

has very little

charge and

may be used

for only a shor

The battery is

ully charged.

time.

operates using

actual use and the age of the battery.

parent unit is turned on. To shorten the charging

voice-activated (VOX) sensitivity level you set, your

Battery status | Action

Install the

battery.

minutes).

parent unit

Charge without interruption (at least 30

Charge without

interruption

(about 30

minutes).

To keep

charged,

in use.

the battery

connect it to AC

power when not

battery status (see the following table).

hours of continuous charging

Battery

indicators

The battery

icon is off.

The screen displays

BATTERY

and \square

The 🚥

flashes.

The battery


becomes

solid 🞟.

light


Power the baby unit on or off

• Press \odot to power on the baby unit. The power light turns on.

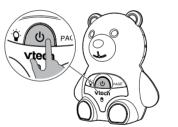

Power the parent unit on or off

- - unit. The screen turns off.

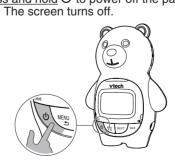

Adjust the speaker volume for baby unit Press VOL + or VOL - on the baby unit at

any time. Adjust the speaker volume for parent unit

Press + or vol when the parent unit is not in


When the speaker volume is set to off, the screen displays 🗣 .

You can choose to hear sounds from the baby

• Press and hold \bullet to power off the baby unit. The power light turns off.



- Press and hold b to power on the parent
- Press and hold Φ to power off the parent

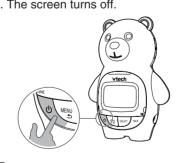

 The parent unit powers on automatically once it is connected to AC power or battery installed. The baby unit also powers on automatically once connected to AC power.

You can adjust the speaker volume from VOLUME 1 to VOLUME 5, or turn it off. The

speaker volume is preset to **VOLUME 3**.

Adjust the Voice-activated (VOX) sensitivity level of the baby unit

unit all the time, or to hear sounds that exceed The screen displays **SAVED** and you hear a confirmation tone. a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the VOX sensitivity level, the more sensitive the baby unit is in detecting the baby unit must be turned on. sounds for transmitting to the parent unit. The

VOX sensitivity level is preset to **HIGHEST**.

VOX sensitivity level table for reference

5	l		beeps when the baby unit detects sounds	
Display	Sensitivity	Description	which had triggered the red light of visual sound indicator on the parent unit.	
HIGHEST	High sensitivity	Highest VOX sensitivity level The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room.	When the sound alert of the parent unit is turned on, () displays. The sound alert is preset to OF 1. Press MENU when the parent unit is not in use. 2. Press VOL or VOL to choose SOUND ALERT,	
HIGH		High VOX sensitivity level The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.	then press SELECT. 3. Press vol. or vol. to choose ON or OFF. 4. Press SELECT to confirm your selection. The screen displays SAVED and you hear a confirmation tone.	
MEDIUM		Medium VOX sensitivity level The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The sound alert setting on each parent unit is independent. Vibration alert You can turn on the vibration alert so that the parent unit vibrates when the baby unit detects sounds which had triggered the red light of	
LOW		Low VOX sensitivity level The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	visual sound indicator on the parent unit. When the vibration alert of the parent unit is turned on, □ displays. The vibration alert is preset to OFF. 1. Press MENU when the parent unit is not in use. 2. Press vol or vol to choose VIBE ALERT, the	
	1 II	Lowest VOX sensitivity	press SELECT.	

LOWEST

sensitivity

1. Press **MENU** when the parent unit is not in

- 2. Press SELECT to select VOX LEVEL.

The parent unit speaker


turns on for loud crying or

screeching sounds from


your baby. It remains quiet

when your baby makes

- Each time you set the vibration alert to ON, the parent unit vibrates briefly after you press
- The vibration alert setting on each parent unit is

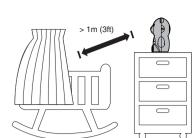

(6.5 feet) away from the baby unit.



The default volume of your parent unit is level 3. If

Operating range

may vary depending on the environmental conditions, and other interferences such as walls, doors, and other obstructions.

Press vol or vol to choose the VOX sensitivity Press **SELECT** to confirm your selection.

To enter the VOX Level menu of the parent unit,

Sound alert

If you turn on the sound alert, the parent unit beeps when the baby unit detects sounds which had triggered the red light of visual sound indicator on the parent unit.

- 2. Press vol or vol to choose **SOUND ALERT**, then press SELECT.
- 3. Press vol or vol to choose **ON** or **OFF**. Press SELECT to confirm your selection. The screen displays **SAVED** and you hear a

Press + or vol to choose VIBE ALERT, then press **SELECT**. 3. Press vol or vol to choose **ON** or **OFF**.

Press **SELECT** to confirm your selection. The screen displays **SAVED** and you hear a confirmation tone.

You can turn the nightlight on or off by pressing -Q- button on the baby unit. You can also use the parent unit to turn the nightlight on or off on the

Using the baby unit:

1. Press - to turn on the nightlight. 2. Press - again to turn off the nightlight.

Using the parent unit:

- 1. Press **MENU** when the parent unit is not in
- 2. Press vol or vol to choose **NIGHTLIGHT**, then press **SELECT**.
- 3. Press + or vol to choose **ON** or **OFF**.
- 4. Press **SELECT** to confirm your selection. The screen displays **SAVED** and you hear a confirmation tone.

PNOTES

- · When the nightlight is turned on, the parent unit displays 🕊.
- The nightlight on baby unit operates even when the parent unit battery is out of charge or has been turned off.
- · If the parent unit loses link, the nightlight icon on the parent unit LCD will disappear, regardless of the nightlight status

Language

You can select a language (English, French or **Spanish**) to be used in all screen displays. The language is preset to English. 1. Press **MENU** when the parent unit is not in

- 2. Press Tor vol to choose **LANGUAGE**, then
- press **SELECT**. 3. Press vol or vol to choose **ENGLISH**,
- FRANCAIS or ESPANOL.
- 4. Press **SELECT** to confirm your selection. The screen displays **SAVED** and you hear a confirmation tone.

PNOTE • The language setting on each parent unit is

the equipment.

operation.

Changes or modifications to this equipment not

expressly approved by the party responsible for

compliance could void the user's authority to operate

This device complies with Part 15 of the FCC rules.

this device may not cause harmful interference, and

(2) this device must accept any interference received,

including interference that may cause undesired

criteria for the amount of radio frequency energy

To ensure safety of users, the FCC has established

that can be safely absorbed by a user or bystander

according to the intended usage of the product. This

such that parts of all persons' body are maintained

at a distance of approximately 8 in (20 cm) or more.

For body-worn operation, this parent unit has been

tested and meets the FCC RF exposure guidelines.

This device complies with Industry Canada licence-

Operation is subject to the following two conditions: (1)

this device may not cause harmful interference, and

interference that may cause undesired operation.

The term "IC:" before the certification/registration

This product meets the applicable Innovation, Science

This Class B digital apparatus complies with Canadian

number only signifies that the Industry Canada

and Economic Development Canada technical

The baby unit complies with FCC RF radiation

environment. The baby unit should be installed and

between the baby unit and all persons' body. Use of

other accessories may not ensure compliance with

FCC RF exposure guidelines. This transmitter must

not be co-located or operating in conjunction with any

other antenna or transmitter. This equipment complies

also with Industry Canada RSS-102 with respect to

Canada's Health Code 6 for Exposure of Humans to

operated with a minimum distance of 8 in (20 cm)

exposure limits set forth for an uncontrolled

Use of other accessories may not ensure compliance

held at least 1 in (2.5 cm) from your face.

with FCC RF exposure guidelines.

technical specifications were met.

RF radiation exposure statement

CAN ICES-3(B)/NMB-3(B).

Industry Canada

requirement

RF Fields.

exempt RSS standard(s)

The transmitter and antenna of the parent unit shall be

product has been tested and found to comply with the

FCC criteria. The baby unit shall be installed and used

Operation is subject to the following two conditions: (1)

Use this feature to restore to the default settings. Restoring the default settings on one parent unit will also reset the shared settings for VOX sensitivity level of the other parent unit.

- 2. Press + or vol to choose **SET DEFAULT**, then press SELECT.
- 3. Press $\frac{+}{\text{VOL}}$ or $\frac{-}{\text{VOL}}$ to choose **YES** or **NO**.
- 4. When you choose YES, press SELECT to confirm your selection. The screen displays **SAVED** and you hear a confirmation tone. -OR-

When you choose **NO**, press **SELECT** to confirm your selection. The screen displays the previous menu.

Talk to the baby unit

You can broadcast messages from a parent unit to the baby unit and the other parent unit. If you have two parent units, you can use both of them at the same time to talk to the baby unit.

Press and hold TALK on the side of the parent unit. The screen displays **TALK** when the voice connection to the baby unit is made. Speak towards the **MIC** on the parent unit. Your voice is broadcast to the baby unit and the other parent unit.

- When a parent unit is talking to the baby unit, it is also broadcast to the other parent unit. However sounds from the baby unit cannot be transmitted to the parent units at the moment.
- If speaker volume of the parent unit has been turned off before the talk, it will change to default volume level after the talk finished

Find/page the parent unit

- Use this feature to find misplaced parent units. Press **PAGE** on the baby unit. All idle parent units ring and display PAGING.
- 2. To end paging, press any key on the parent unit, or press PAGE on the baby unit.

- Paging rings all parent units even if the speaker volume of parent unit is set to **VOLUME OFF**.
- The baby unit cannot page any parent unit that is turned off, out of range, or talking to the baby unit

California Energy Commission

attery charging testing mode

Commission (CEC) regulations for energy consumption.

Your baby monitor is set up to comply with the energy-

This baby monitor meets the California Energy

Follow the instructions to install and charge the

battery. The CEC battery charging testing mode is

Even if the parent unit is paired to baby unit, the CEC

battery charging testing mode is activated while it is

For c-UL compliance only

Lorsque vous utilisez votre appareil, vous devriez

toujours suivre certaines mesures de précaution

d'électrocution et de blessures corporelles, dont ceux

1. Observez toutes les instructions et mises en garde

d'appoint seulement. Il n'est pas le remplacement

d'une supervision responsable et adéquate par un

adulte et ne devrait pas être utilisé comme telle.

4. Ce produit n'est pas conçu pour être utilisé en tant

N'utilisez pas cet appareil près de l'eau ni de toute

autre source d'humidité, par exemple, près d'une

baignoire, cuve à lessive, évier de cuisine, dans

6 MISE EN GARDE: Il peut y avoir un risque

un sous-sol humide ni près d'une piscine, dans un

d'explosion si vous utilisez le mauvais type de piles

pour l'unité du parent. N'utilisez que le bloc-piles

rechargeable inclus ou le bloc-piles de rechange

(BT166342/BT266342). N'incinérez pas les piles.

Celles-ci risqueraient d'exploser. Jetez les piles

7. N'utilisez que les adaptateurs inclus avec ce

produit. L'utilisation d'un adaptateur dont la

polarité ou la tension serait inadéquate risque

d'endommager sérieusement le produit et mettre

Adaptateur de l'unité du bébé: Sortie : 6 V CC 400

usées selon les renseignements suivant le sceau

de base afin de réduire les risques d'incendie,

2. L'installation par un adulte est requise.

3. Ce produit a été conçu pour être un dispositif

conserving standards right out of the box

Mesures de sécurité importantes

activated while charging.

powered off and charging.

inscrites sur l'appareil

que moniteur médical.

du RBRCMD

votre sécurité en péril

soussol humide ou une douche.

qui suivent:

General product care

To keep this product working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.
- DO NOT immerse the parent unit and the baby
- unit in water and do not clean them under the tap. DO NOT use cleaning spray or liquid cleaners.
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

Storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place

Frequently asked questions

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com

or call 1 (800) 595-9511 for customer service.		
Why does the baby monitor not respond normally?	Try the following (in the order listed) for common cure: 1. Disconnect the power to the baby unit and the parent unit. 2. Remove the batteries in the parent unit. Then, install the batteries again. 3. Wait a few minutes before connecting power back to the baby unit and the parent unit. 4. Turn on the baby unit and the parent unit. 5. Wait for the parent unit to synchronize with the baby unit. Allow up to one minute for this to take place.	
Why doesn't the screen of the parent unit go on when I switch on the unit?	Perhaps the rechargeable battery of the parent unit is empty and the parent unit is not connected to the power. Insert the appliance plug into the parent unit and put the adapter in a wall socket.	

8. Lorsqu'ils sont branchés dans une prise de

11. Débranchez les cordons d'alimentation avant de

12. Ne coupez pas les cordons d'alimentation pour

remplacer les fiches, car ceci peut présenter un

13. Ne laissez aucun obiet reposer ni appuver sur le

14. Ne faites fonctionner cet appareil qu'avec le type

d'alimentation indiqué sur l'étiquette. Si vous

ne connaissez pas le type d'alimentation que

marchand ou votre compagnie locale d'électricité

15. Ne surchargez pas les prises de courant murales

16. Ne placez pas cet appareil sur un chariot, meuble.

de l'appareil ou sous celui-ci, servent à aérer

l'appareil. Pour l'empêcher de surchauffer, ne

bloquez sous aucun prétexte ces ouvertures et

n'empêchez pas l'aération adéquate de l'appareil

en le plaçant sur un lit, divan, tapis ou toute autre

surface similaire. De même, ne le positionnez pas

à proximité ni au-dessus d'une source de chaleur

dans un endroit avant de vous assurer qu'il y ait

18. N'enfoncez jamais d'objets à travers les ouvertures

contact avec des points de tension dangereux ou

causer des courts-circuits qui peuvent dégénérer

en incendies ou en risques d'électrocution. Ne

renversez jamais de liquide dans ce produit.

19. Afin de réduire les risques d'électrocution, ne

de cet appareil, car ils pourraient entrer en

ou d'un calorifère. De plus, ne placez pas l'appareil

trépied, support de montage ni table chancelants.

17. Les trous et ouvertures du boîtier, situés à l'arrière

cordon d'alimentation. N'installez pas cet appareil

dans un endroit où l'on risque d'écraser le cordon

pour le nettover

danger potentiel.

remplacer le bloc-piles

d'alimentation ou de le piétiner

ni les rallonges électriques.

une bonne circulation d'air.

POWER light connected to the power. Connect of the baby unit the baby unit to the power. go on when switch on the unit? Why does the The units may be too close to baby monitor each other. Make sure the parent produce a unit and the baby unit are more high-pitched than 2 meters (6.5 feet) away from noise? each other. Why does the The baby unit also detects other sounds than those of your baby parent unit read Adjust the VOX sensitivity level to a lower level or adjust the speaker other sounds? olume on the parent unit. The volume of the parent unit Why don't I hear may have set too low. Press + a sound/Why can't I hear my increase the volume level. baby cry? You may have set a low VOX sensitivity level. See Adjust the Voice-activated (VOX) level of the baby unit to change the setting. Why does the If the sound alert feature is on, there is sound detected from the parent unit beep? baby unit. The baby unit may be out of range. Move the parent unit closer to the baby unit (but not less than 6.5 feet). If the parent unit is powered by the provided battery, it may not have enough charge for the parent unit to perform normally Charge the battery in the parent unit for up to 11 hours. Why can't I The baby unit may be out of range. Move the parent unit establish a closer to the baby unit (but not connection? Why is the less than 6.5 feet). connection lost Other electronic products may every now and cause interference with your baby then? Why are monitor. Try installing your baby there sound

nonitor as far away from these

electronic devices as possible.

Why doesn't the Perhaps the baby unit is not

mportant safety instructions

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Follow all warnings and instructions marked on the product.
- Adult setup is required.
- 3. This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- 4. This product is not intended for use as a medical monitor.
- 5. Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower. 6. **CAUTION**: Use only the batteries indicated in
- this manual. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT166342/ BT266342) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the information in The RBRC® seal 7. Use only the adapters included with this
- product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Output: 6V DC 400mA; Parent unit power adapter: Output: 6V DC 400mA 8. The power adapters are intended to be
- correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet. 9. For pluggable equipment, the socket-outlet
- shall be installed near the equipment and shall be easily accessible. 10. Unplug this product from the wall outlet
- before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. 11. Unplug the power cords before replacing
- batteries.
- 12.Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation
- 13.Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.

14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your

- dealer or local power company. 15.Do not overload wall outlets or use an extension cord.
- 16.Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 17. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa

or rug. This product should never be placed

near or over a radiator or heat register

- 18. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product
- 19.To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 20. You should test the sound reception every time you turn on the units or move one of the components.
- 21.Periodically examine all components for damage.
- 22.Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery monitors, cordless phones, scanners, etc.
- 23. Children should be supervised to ensure that they do not play with the product.
- 24. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. SAVE THESE INSTRUCTIONS

- Use and store the product at a temperature between 32°F and 104°F.
- 2. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
- least 3 feet away from the baby or crib, to avoid a possible
- strangulation hazard. 5. Never place the baby unit inside the baby's crib or playpen. Never cover the baby unit or parent unit with anything such as a towel or a blanket. 6. Other electronic products may cause
- interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible wireless routers, radios, cellular telephones, intercoms, room monitors, televisions personal computers, kitchen appliances and cordless telephones.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker. Should NOT place wireless devices directly
- over the pacemaker, such as in a breast pocket, when it is turned ON. WTR's evaluation did not identify any risk to

bystanders with pacemakers from other persons using wireless devices. **Electromagnetic fields (EMF)**

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based

and are responsible for delivery or handling charges

Product under this limited warranty. Transportation,

service location. VTech will return repaired or replaced

incurred in the transport of the Product(s) to the

when taken out of service within the United States and Canada. The RBRC® program provides a convenient alternative

The RBRC® seal on the nickel-metal battery indicates

recycle these batteries at the end of their useful lives.

to placing used nickel-metal batteries into the trash or municipal waste, which may be illegal in your area.

drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY® for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.



FCC and **IC** regulations

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment
- and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

on scientific evidence available today.

Technical specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	Baby unit: 1921.536-1928.448 MHz
	Parent unit: 1921.536-1928.448 MHz
Channels	5
LCD	35 (x) x 21.2 (y) mm B&W LCD
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirement	Parent unit: 2.4 V Ni-MH battery Baby unit power adapter: Output: 6V DC 400mA Parent unit power adapter: Output: 6V DC 400mA

Les simulateurs cardiaques (ne s'applique qu'aux dispositifs numériques sans fil)

(WTR)', une firme de recherche indépendante. a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et droques (FDA) des États-Unis, la firme

Avis aux détenteurs de stimulateurs cardiaques

- Vous devriez maintenir les dispositifs sans fil à au
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est

L'étude effectuée par l'organisme WRS n'a pas cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci

Champs électromagnétiques (EMF)

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce quide, son utilisatior sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.

What does this limited warranty cover?

the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during Product")?

service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new

or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipmen Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement

The limited warranty period for the Product extends

for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever

- 1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other
- 2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or Product to the extent that the problem experienced
- 4. Product to the extent that the problem is caused by use with non-VTech accessories: or 5. Product whose warranty/quality stickers, product
- used for rental purposes); or
- Product returned without a valid proof of purchase (see item 2 on the next page); or 3. Charges for installation or set up, adjustment of
- customer controls, and installation or repair of systems outside the unit.

To obtain warranty service in the USA, please visit our

website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

> user's manual - a check of the Product's controls and features may save you a service call.

delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify yo and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited

What must you return with the Product to get warranty service?

- Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and 2. Include a "valid proof of purchase" (sales receipt)
- identifying the Product purchased (Product model and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address, and telephone number.

Other limitations

of purchase.

This warranty is the complete and exclusive agreement between you and VTech. It supersedes is caused by signal conditions, network reliability, or Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. Limitations: Implied warranties, including those of

fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/ provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Please retain your original sales receipt as proof

Specifications are subject to change without notice

All rights reserved. 05/17. DM226_CIB_V2.0 Document order number: 91-010503-030-100

© 2017 VTech Communications, Inc.

mA. Adaptateur de l'unité du parent: Sortie : 6 V démontez pas cet appareil, mais apportez-le dans CC 400 mA. un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient

- 1. Press **MENU** when the parent unit is not in
 - - Avoid dropping the product or treating it roughly.

cet appareil, à l'exception de l'accès autorisé à courant, les adaptateurs secteur ont été concus certaines portes ou ouvertures, risque de vous pour être orientés correctement, soit à la verticale exposer à des points de tension dangereux ou ou au plancher. Les broches n'ont pas été conçues d'autres dangers. Un remontage incorrect peut par pour supporter le poids du bloc d'alimentation et la suite présenter des risques d'électrocution.

- le maintenir en place si celuici est branché dans 20. Vous devriez tester la réception chaque fois que une prise au plafond, sous une table ou dans un vous mettez l'appareil en fonction. 21. Examinez les composantes afin de vérifier si
- 9. Pour les PRODUITS À BRANCHER À UNE celles-ci ne sont pas endommagées. PRISE DE COURANT, la prise de courant doit 22. Soyez avisé de la perte de la confidentialité être installée près du produit, afin d'assurer une lorsque vous utilisez les ondes publiques. Les accessibilité sécuritaire à la prise de courant. conversations peuvent être entendues par d'autres 10. Débranchez ce produit de la prise de courant moniteurs de bébé, des téléphones sans fil, des

interruptions?

- avant de procéder au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide 23. Les enfants devraient être supervisés afin de vous
 - assurer qu'ils ne jouent pas avec l'appareil. 24. Le produit n'est pas concu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne

CONSERVEZ CES INSTRUCTIONS

Mises en garde

z le produit à une temp entre 0° C (32°F) et 40°C (104° F). 2. N'exposez pas cet appareil à des froids ou des

chaleurs extrêmes, ainsi qu'à la lumière directe

du soleil. Ne l'installez pas près d'une source de

3. Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu. 4. Assurez-vous que le moniteur et le cordon de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3

pour éviter tout risque de

strangulation.

pieds) de l'enfant ou du berceau,

responsable de leur sécurité

- 5. Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article tel une serviette ou une couverture. 6. D'autres équipements électroniques peuvent
- produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil.

Stimulateurs cardiaques implantés dans

L'organisme 'Wireless Technology Research, LLC

WTR recommande aux médecins:

- moins six pouces du simulateur cardiaque.
- en marche identifié de risque pour les détenteurs de simulateurs

Limited warranty

The manufacturer of this VTech Product warrants to

the limited warranty period ("Materially Defective During the limited warranty period, VTech's authorized

to take approximately 30 days. How long is the limited warranty period?

What is not covered by this limited warranty? This limited warranty does not cover:

liquid intrusion; o

cable or antenna systems; or

serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products

How do you get warranty service?

NOTE: Before calling for service, please review the

risk of loss or damage during transit and transportation

Except as provided by applicable law, you assume the

3. Batteries should not be exposed to excessive heat such as bright sunshine or fire.

4. Make sure the baby unit and the adapter cord are always out of reach of the baby, at

that VTech Communications, Inc. is voluntarily

participating in an industry program to collect and

The RBRC $^{ exttt{ iny B}}$ seal

VTech's participation in RBRC® makes it easy for you to



RBRC® and 1 (800) 8 BATTERY® are registered trademarks of **Rechargeable Battery Recycling** Corporation.

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

· Reorient or relocate the receiving antenna.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.